
☐ : Location of Connector Joining Wire Harness and Wire Harness

[RHD : Liftgate Type]

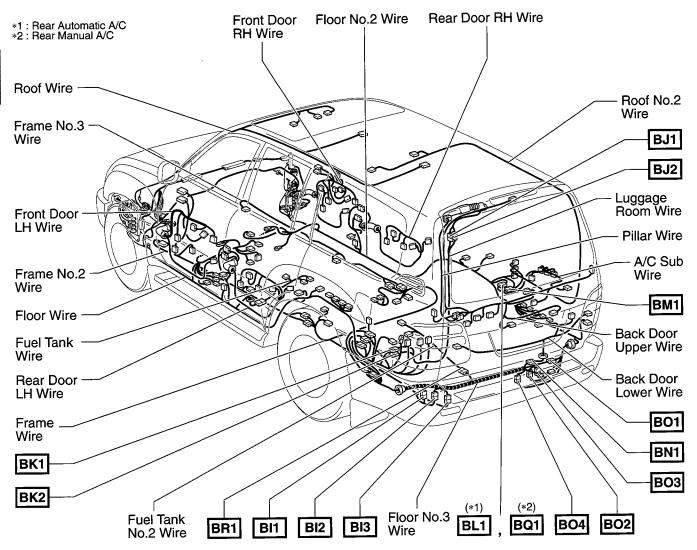

Code	Joining Wire Harness and Wire Harness (Connector Location)
BI1	Frame Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BI2	
BI3	
BJ1	Pillar No.1 Wire and Luggage Room Wire (Left Rear Side Roof Panel)
BJ2	
BK1	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK2	
BL1	Roof No.2 Wire and Floor No.2 Wire (Right Rear Side Quarter Panel)
BM1	Floor No.2 Wire and A/C Sub Wire (Right Rear Side Quarter Panel)
BN1	Back Door Lower Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BO1	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BO2	
ВО3	
BO4	
BQ1	Floor No.2 Wire and Roof No.2 Wire (Right Rear Side Quarter Panel)
BR1	Fuel Tank No.2 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)