
DI3H5-03

Ts[Terminal[Circuit

CIRCUIT DESCRIPTION


 $By[\connecting[\connecting[\connecting]] erminals[\connecting[\connecting]] erminals[\connecting]] erminals[\connecting] erminals[\connecting]] erminals[\connecting$

WIRING DIAGRAM

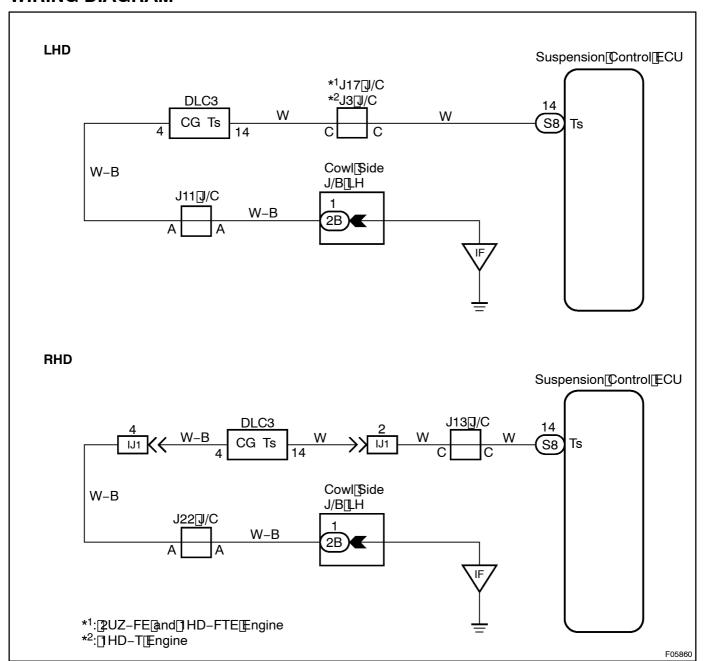

INSPECTION PROCEDURE

1 Check[voltage[between[terminals[Ts[and[CG[φf[DLC3.

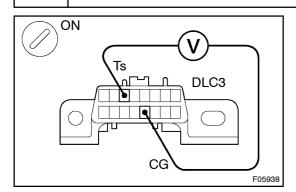

CHECK:

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals Ts and CG of DLC3.

OK:

Voltage: 9 - 14 V

ок□⟩

No[problem.

NG

2 Check[for[open[and[short[circuit]]n[harness[and[connector[between[suspension control[ECU]and[DLC3,[DLC3[and[body[ground[See[page]]N-35]).

NG

Repair or replace harness or connector.

ОК

Check and replace suspension control ECU.