




274

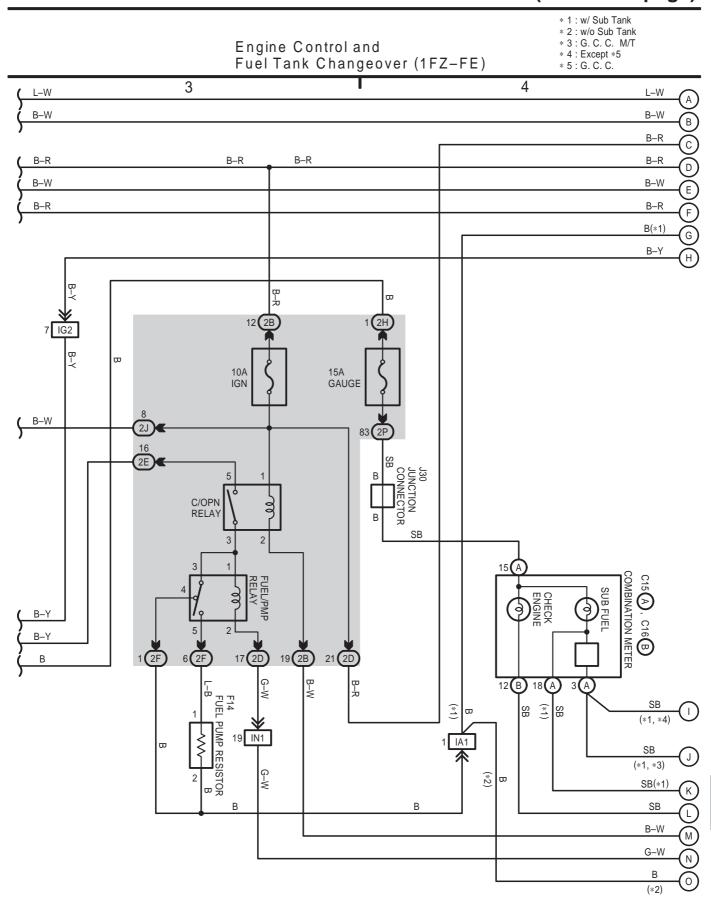


Engine Control and Fuel Tank Changeover (1FZ-FE)

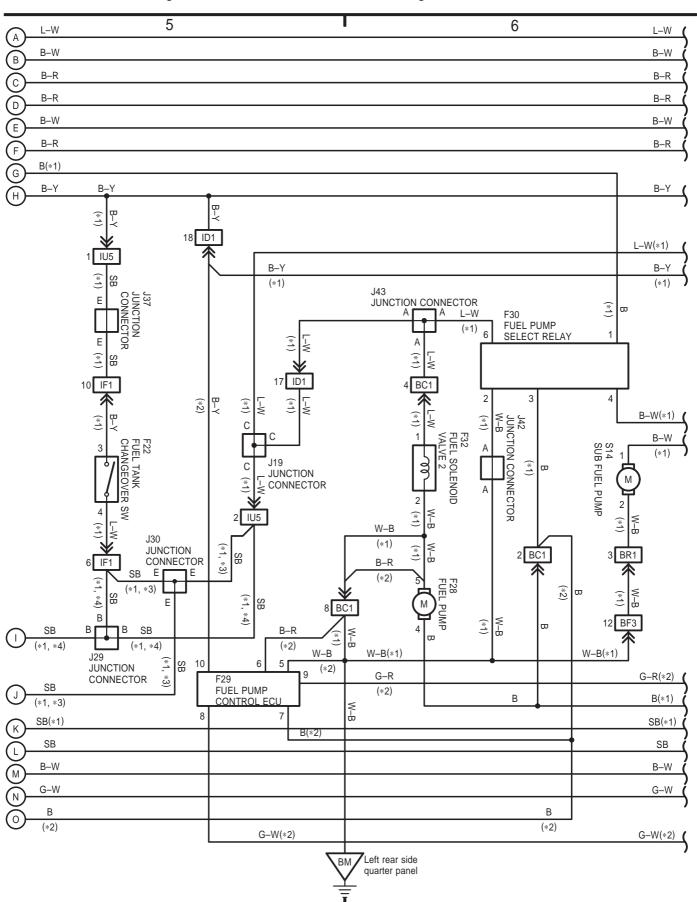


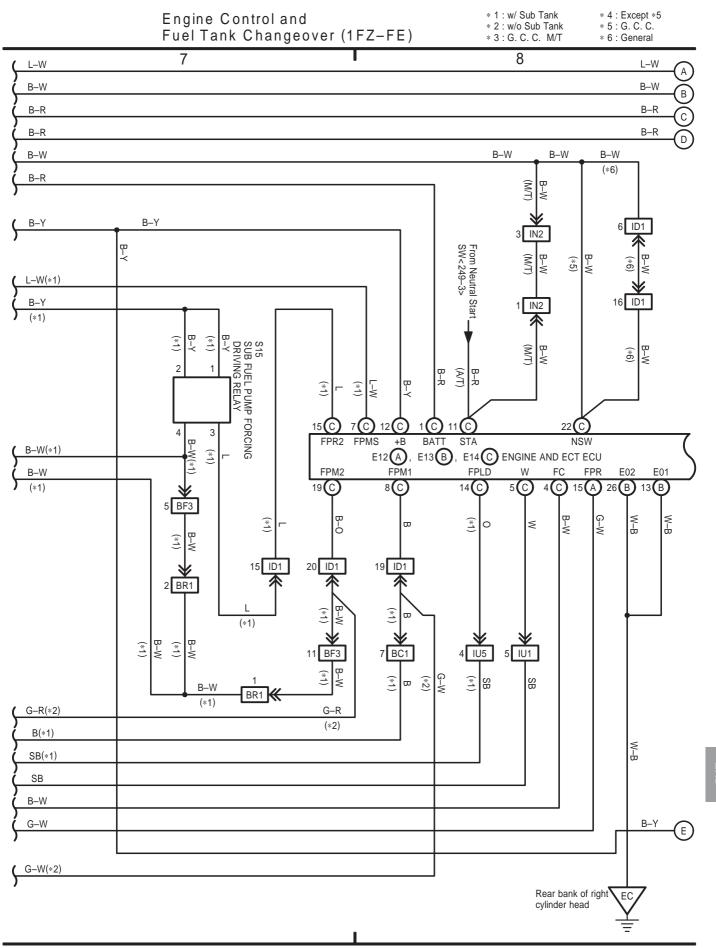

Engine Control and Fuel Tank Changeover (1FZ-FE)

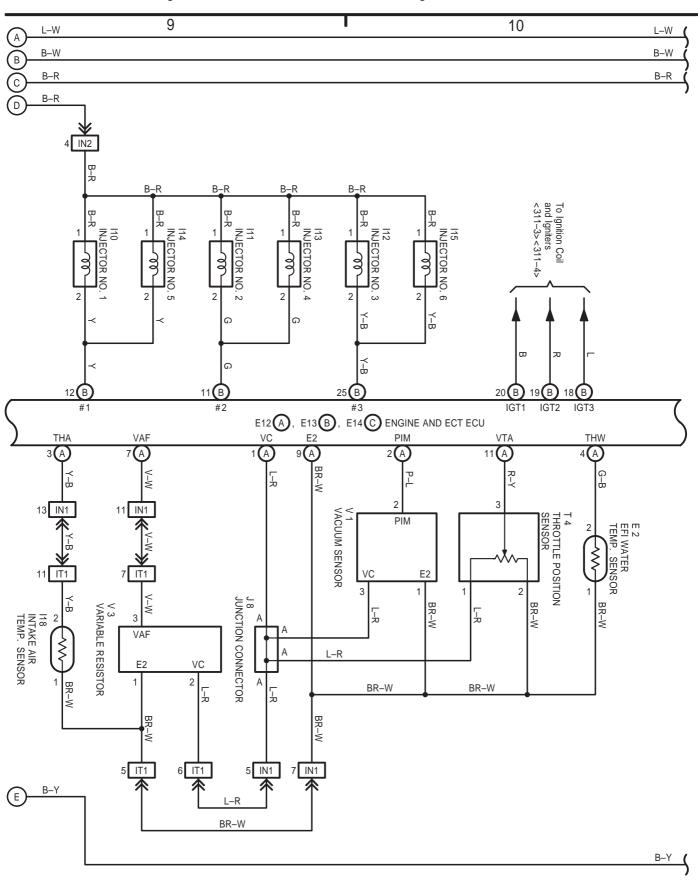

Engine Control and Fuel Tank Changeover (1FZ-FE)

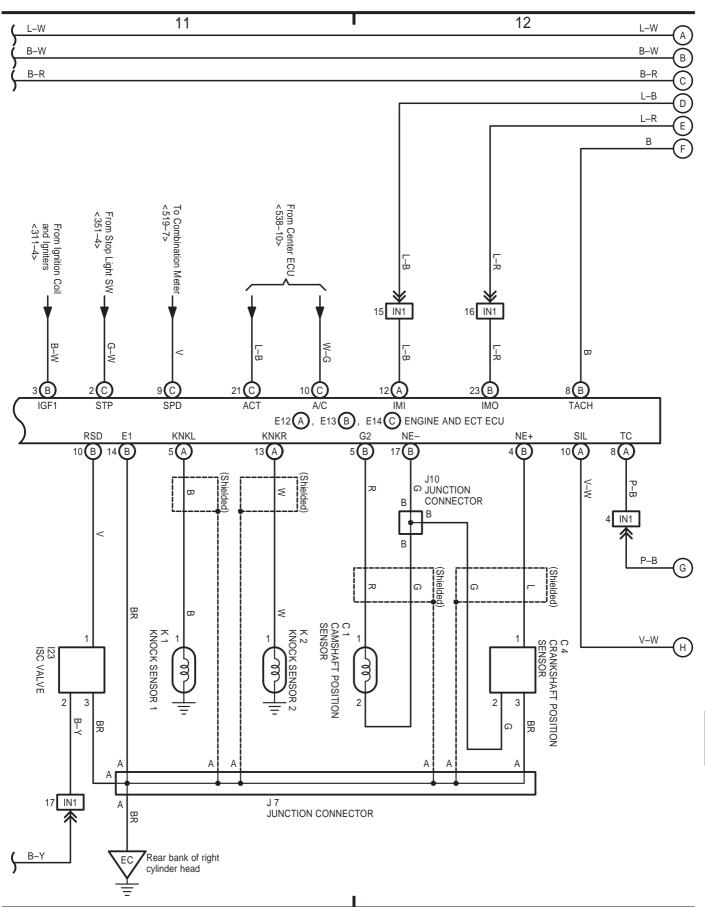

## Engine Control and Fuel Tank Changeover (1FZ-FE) 13 14 L-W L-W B-W B-R B-R B-R L-B L-B L-R L-R В В 18 IN1 From Center Airbag Sensor Assembly<395-4> J18 JUNCTION CONNECTOR 10 IT1 14 IT1 4 IT1 B-R To Combination Meter<517-4> $\Box$ 12 5 16 BAT TAC OP1 $\mathsf{AB}$ +B D 8 DLC3 C 3 CHECK CONNECTOR E 1 TS TC TC TS CG SIL 3 16 13 14 11 W-B W-B P-B V-W ≤ From Instrument ECU<369-11> 13 IG3 3 IT1 ≶ J 6 JUNCTION CONNECTOR P-B P-B W JUNCTION CONNECTOR J14 JUNCTION V-W V-W IN1 CONNECTOR P-B P-B P-B V-W 8 JUNCTION CONNECTOR From ABS ECU From Instrument ECU<369-11> From ABS ECU <438-5> From Center Airbag From Center Airbag Sensor Assembly V-B 1 (2B Front right side of fender apron Set bolt of cowl side J/B LH

