
## ☐ : Location of Connector Joining Wire Harness and Wire Harness

## [LHD]

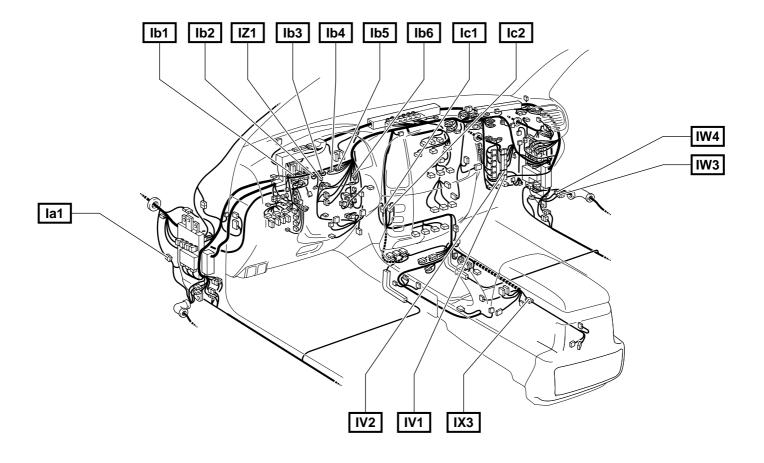

	<del>-</del>
Code	Joining Wire Harness and Wire Harness (Connector Location)
IV1	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IV2	
IW3	Front Door RH Wire and Dash Wire (Right Kick Panel)
IW4	
IX3	Rear Console Box Wire and Dash Wire (Left Side of Rear Console)
IZ1	Dash Wire and Sensor Wire (Behind the Combination Meter)
la1	Engine Room No.2 Wire and Floor Wire (Left Kick Panel)
lb1	Dash Wire and Dash Wire (Behind the Combination Meter)
lb2	
lb3	
lb4	
lb5	
lb6	
lc1	Dash Wire and Dash Wire (Behind the Center Panel)
lc2	