
TR05U-02

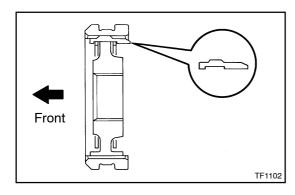

# REASSEMBLY


#### HINT:

Coat all of the sliding and rotating surfaces with gear oil before reassembly.

- 1. INSTALL CLUTCH HUB INTO HIGH AND LOW HUB SLEEVE
- (a) Install the clutch hub and shifting keys to the high and low hub sleeve.
- (b) Install the shifting key springs under the shifting keys.

## **NOTICE:**


Position the key springs so that their end gaps are not aligned.

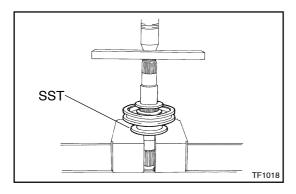

#### 2. INSTALL HIGH AND LOW HUB SLEEVE ASSEMBLY

(a) Using SST and a press, install the high and low hub sleeve assembly.


SST 09316-20011

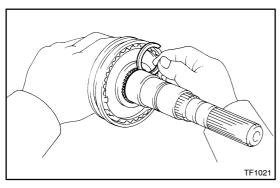

(b) Select a snap ring that allows the minimum axial play.

Mark	Thickness mm (in.)	Mark	Thickness mm (in.)
Α	2.60 (0.1024)	E	2.80 (0.1102)
В	2.65 (0.1043)	F	2.85 (0.1122)
С	2.70 (0.1063)	G	2.90 (0.1142)
D	2.75 (0.1083)	-	-

(c) Using a snap ring expander, install a new snap ring.

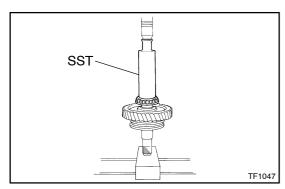

# 3. INSTALL NEEDLE ROLLER BEARING, LOW SPEED GEAR AND REAR TAPER ROLLER BEARING

- (a) Apply gear oil to the needle roller bearing.
- (b) Install the needle roller bearing and low speed gear.
- (c) Using SST and a press, install the rear taper roller bearing.

SST 09316-60011 (09316-00011)

LAND CRUISER (W/G) (RM616E)


# 4. INSTALL NEEDLE ROLLER BEARING, SPACER, SYN-CHRONIZER RING (M/T) AND HIGH SPEED GEAR

- (a) Apply gear oil to the needle roller bearing.
- (b) Install the needle roller bearing, spacer, synchronizer ring (M/T) and high speed gear.

## **NOTICE:**


M/T:

Align the ring slots with the shifting keys.

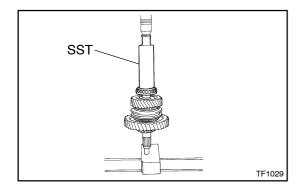


### 5. INSTALL FRONT TAPER ROLLER BEARING

Using SST and a press, install the front taper roller bearing. SST 09316–60011 (09316–00011)

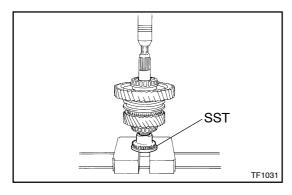

## 6. INSTALL FRONT DRIVE GEAR PIECE

(a) Using SST and a press, install the front drive gear piece. SST 09316-60011 (09316-00031)

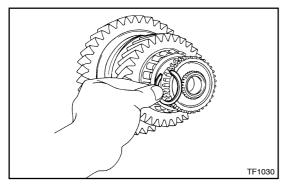

## (b) Select a snap ring that allows the minimum axial play.

Mark	Thickness mm (in.)	Mark	Thickness mm (in.)
Α	2.00 (0.0787)	D	2.30 (0.0906)
В	2.10 (0.0827)	E	2.40 (0.0945)
С	2.20 (0.0866)	_	-

(c) Using a snap ring expander, install a new snap ring.