
Position of Parts in Instrument Panel

[LHD]

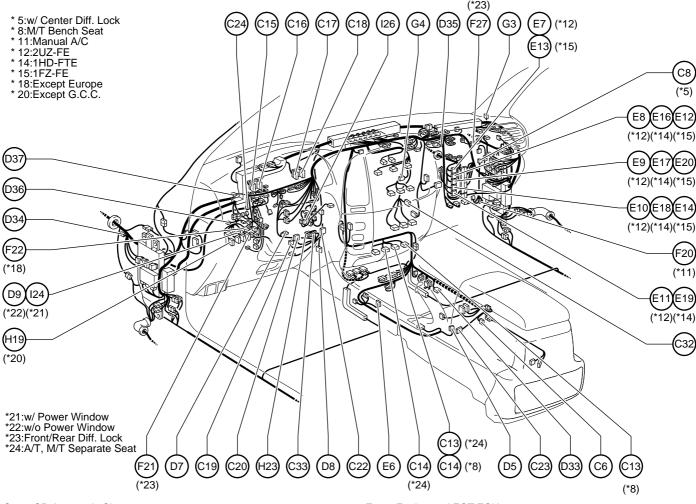

- CD Automatic Changer Center Diff. Lock Control Relay Cigarette Lighter
- 13
- Cigarette Lighter Illumination
- Combination Meter 16 **Combination Meter**
- 17 Combination Meter
- 18 Combination Meter
- Combination SW
- Combination SW Combination SW
- 23 24 Cooler Box
- Cruise Control Clutch SW Center Cluster Integration Panel
- C 33 Combination SW
- Damping Mode Select SW and Height Control SW Diode (Front Fog No.1)
- D
- D 8 DLC3
- Door Lock Control SW Deceleration Sensor D 33
- D 34
- Diode (Front Fog No.2) Diode (Viscous Heater1) Diode (Viscous Heater2)
- D 37 Double Lock Control Relay
- ECT Pattern Select SW Engine and ECT ECU
- Ε
- Engine ECU
- Engine and ECT ECU Engine ECU
- Engine and ECT ECU **Engine ECU**
- Engine and ECT ECU E 10 **Engine ECU**

- E 11 Engine and ECT ECU Engine ECU
- E 12 Engine and ECT ECU
- Engine ECU
- E 13 Engine and ECT ECU
- Engine ECU E 14 Engine and ECT ECU
- Engine ECU
- Engine and ECT ECU E 16
- Engine ECU
- Engine and ECT ECU
- Engine ECU
- E 18 Engine and ECT ECU Engine ECU
- Engine and ECT ECU
- **Engine ECU**
- Engine and ECT ECU Engine ECU
- F 20 Front Blower Resistor F 21 Front/Rear Diff. Lock Control SW
- Fuel Tank Changeover SW Front/Rear Diff. Lock Control ECU
- G 3 Glove Box Light G Gateway ECU
- Headlight Beam Level Control SW
- Headlight Cleaner SW
- Idle-Up SW
- 26 Ignition SW