
BE2FB-01

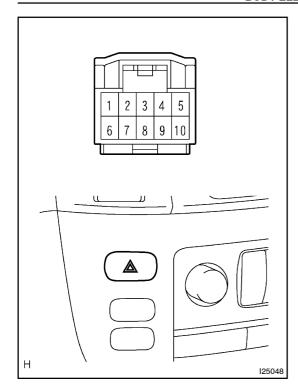

INSPECTION

INSPECT HAZARD WARNING SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Hazard button FREE	3 – 5	No continuity
Hazard button Pushed in	3 – 5	Continuity

If continuity is not as specified, replace the switch.