
DI1AR-10

DTC	B2791/99	Key Unlock Warning SW OFF Malfunction
-----	----------	---------------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
B2791/99	Open circuit in key unlock warning switch circuit.	Key unlock warning switch
	Key unlock warning switch adheres to OFF position.	Wire harness

WIRING DIAGRAM

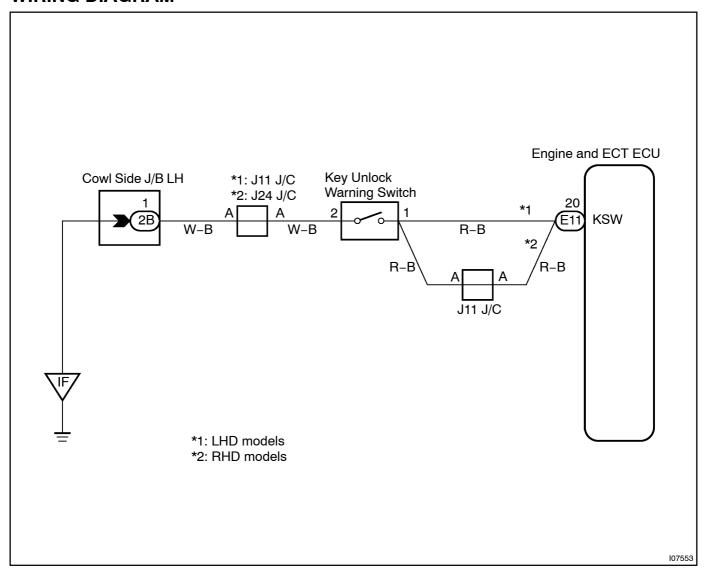

INSPECTION PROCEDURE

1 | Check[key[unlock[warning[switch[See[page[BE-20]].

NG

Replace key unlock warning switch.

OK

2 Check harness and connector between key unlock warning switch and Engine and ECT ECU.

NG

Repair or replace the harness or connector.

OK

Replace Engine and ECT ECU.