

## INSTRUMENT PANEL COMPONENTS

BO42W-01

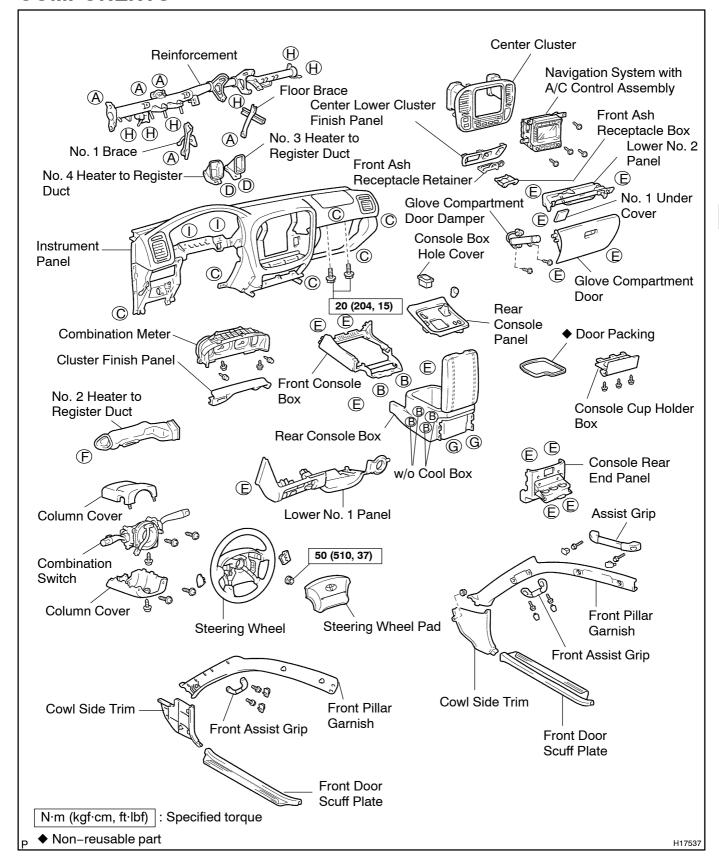

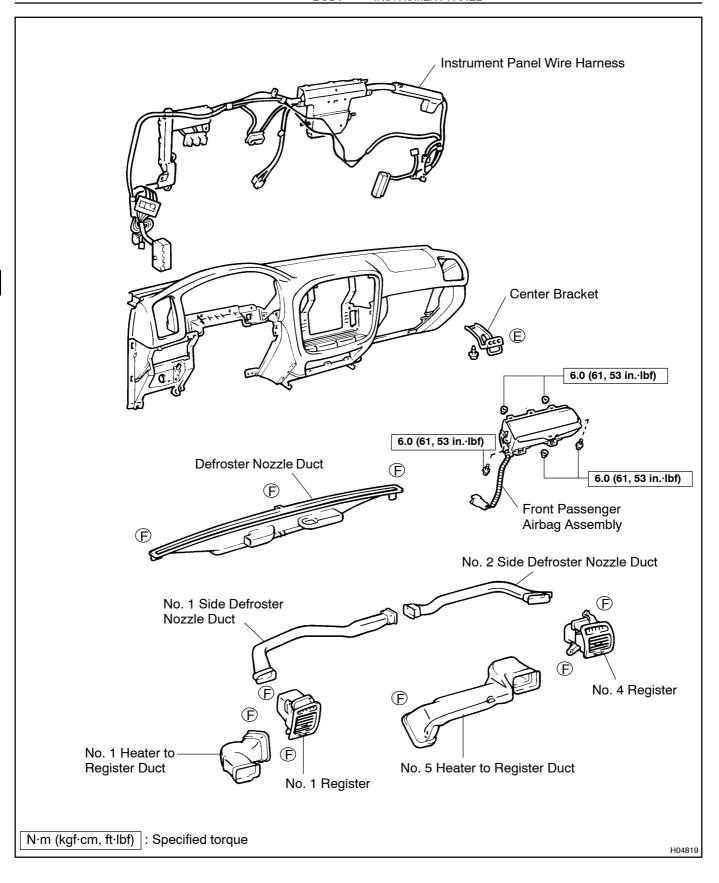

## HINT:

Screw shapes and sizes are indicated in the table below. The codes (A - I) correspond to those indicated on the previous page.

mm (in.)

	Shape	Size		Shape	Size		Shape	Size
(A)		ø = 8 (0.31) L =16 (0.63)	B		Ø = 6 (0.24) L =18 (0.71)	0		Ø = 6 (0.24) L =16 (0.63)
0		Ø = 6 (0.24) L = 16 (0.63)	E		ø = 5 (0.20) L =16 (0.63)	Ē		Ø = 5 (0.20) L =14 (0.55)
G	(Intition)	Ø = 5 (0.20) L =14 (0.55)	$\oplus$		Ø = 8 (0.31)	0		ø = 6 (0.24)

H04082