
## ☐ : Location of Connector Joining Wire Harness and Wire Harness

## [RHD]

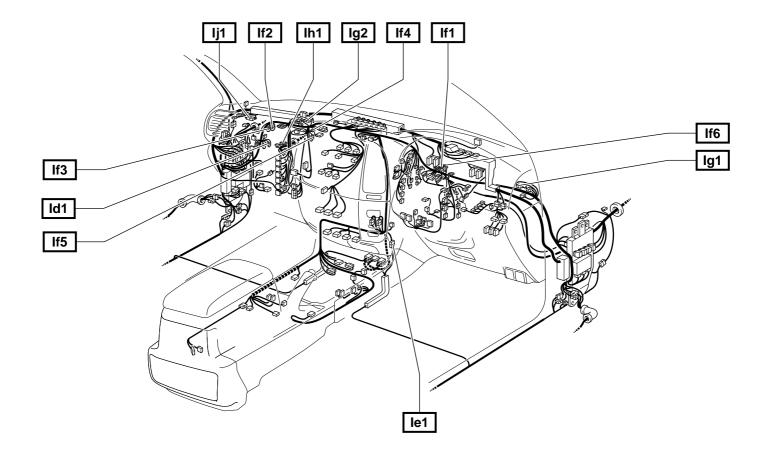

Code	Joining Wire Harness and Wire Harness (Connector Location)
ld1	Dash Wire and Dash Wire (Behind the Glove Box)
le1	Dash Wire and Floor No.2 Wire (Right Side of Front Console)
lf1	Dash Wire and Dash Wire (Behind the Combination Meter)
lf2	Dash Wire and Dash Wire (Behind the Glove Box)
lf3	
lf4	Dash Wire and Dash Wire (Instrument Panel Center)
lf5	
lf6	Dash Wire and Dash Wire (Behind the Combination Meter)
lg1	Dash Wire and Dash Wire (Right Side of Instrument Panel)
lg2	Dash Wire and Dash Wire (Instrument Panel Center)
lh1	Engine Wire and Engine Wire (Behind the Glove Box)
lj1	Instrument Panel Integration Wire and Instrument Panel No.3 Wire (Left Side of Instrument Panel)