
DIAZ8-01


## **Front Wiper Switch Circuit**

## **CIRCUIT DESCRIPTION**

This circuit detects the state of the wiper switch and send it to the Wiper Control ECU.

## **WIRING DIAGRAM**

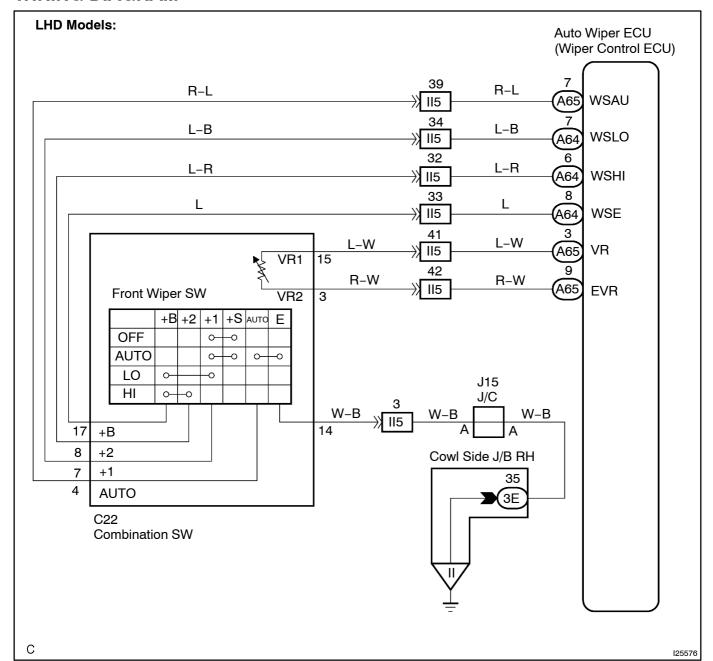

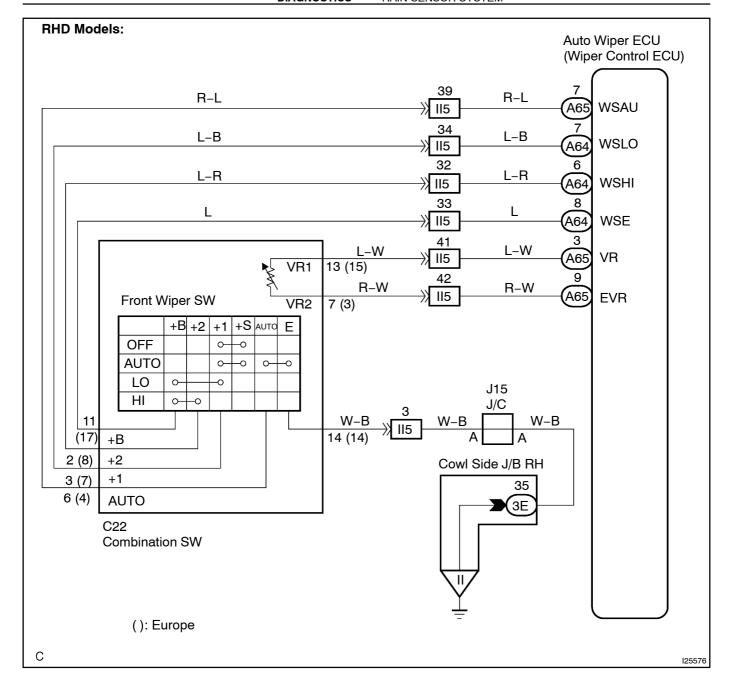

## INSPECTION PROCEDURE

1 Check[wire[harness[between[combination[switch[and[Wiper[Control[ECU[See page]N-38].

NG

Repair or replace wire harness.

OK

2 Check wire harness between combination witch and body ground (See page IN-38).

NG

Repair or replace wire harness.

OK

Proceed next circuit inspection shown on problem[symptom[table.[See[page[DI-930]