
Position of Parts in Instrument Panel

[LHD]

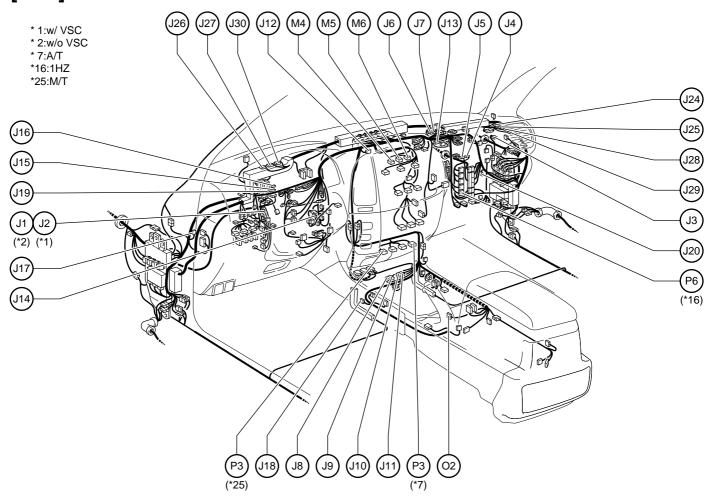

- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 5 Junction Connector
- J 6 Junction Connector
- J 7 Junction Connector
- J 8 Junction Connector
- J 9 Junction Connector J 10 Junction Connector
- J 11 Junction Connector
- J 12 Junction Connector
- J 13 Junction Connector
- J 14 Junction Connector
- J 15 Junction Connector
- J 16 Junction Connector
- J 17 Junction Connector
- J 18 Junction Connector

- J 19 Junction Connector
- J 20 Junction Connector
- J 24 Junction Connector
- J 25 Junction Connector
- J 26 Junction Connector
- J 27 Junction Connector
- J 28 Junction Connector J 29 Junction Connector
- J 30 Junction Connector
- M 4 Multi-Display
- M 5 Multi-Display
- M 6 Multi-Display
- O 2 O/D Main SW
- P 3 Power Outlet (Front)
- P 6 Pre-Heating Timer