
DI1ON-09

Taillight relay circuit

CIRCUIT DESCRIPTION

Taillight relay will be "ON" by operating the taillight switch. The transistor which activates the tail light relay has two sorts: one activates by the tail light switch for fail safe and the other activates by CPU.

WIRING DIAGRAM

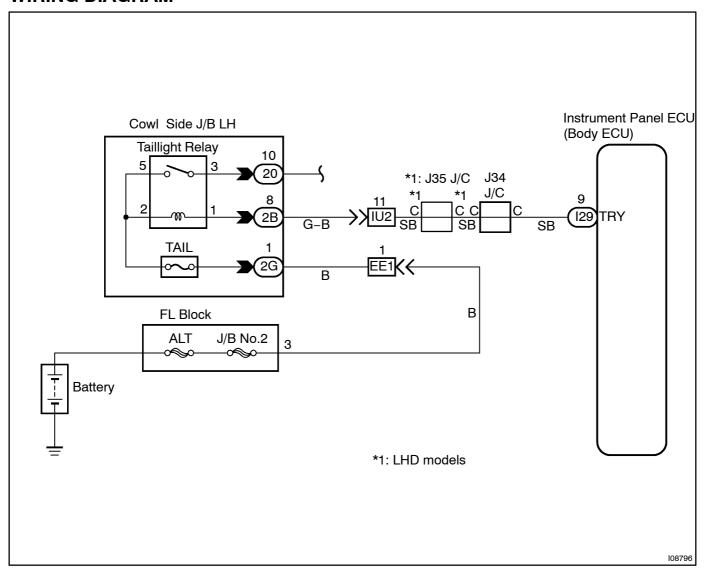

INSPECTION PROCEDURE

1 | Check[taillight[relay.[See[page[BE-26]

NG□

Replace[the[taillight[relay.

ΟK

2 Check wireharness and connector between taillight relay and Body ECU, battery and taillight relay.

NG□

 $Repair \cite{r} \ci$

ОК

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-773)