
☐ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

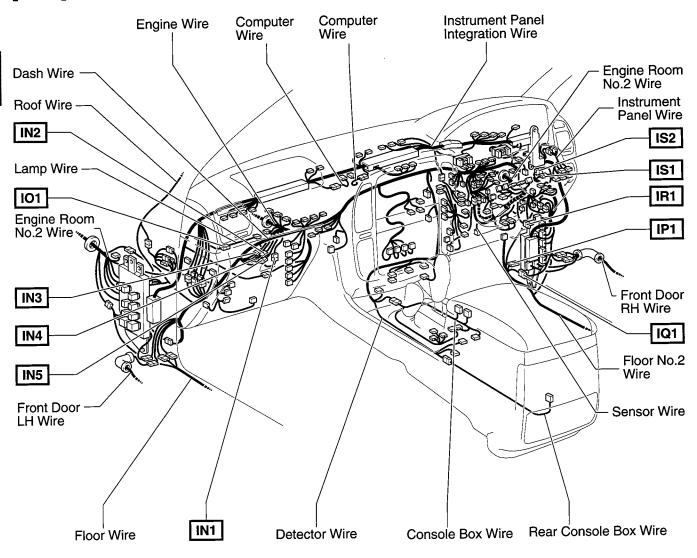

Code	Joining Wire Harness and Wire Harness (Connector Location)
IN1	Engine Wire and Dash Wire (Behind the Glove Box)
IN2	
IN3	
IN4	
IN5	
IO1	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
lP1	Engine Room No.2 Wire and Floor No.2 Wire (Right Kick Panel)
IQ1	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IR1	Engine Room No.2 Wire and Dash Wire (Right Kick Panel)
IS1	Dash Wire and Floor No.2 Wire (Right Kick Panel Upper)
IS2	