
DI1AH-07

TERMINALS OF ECU

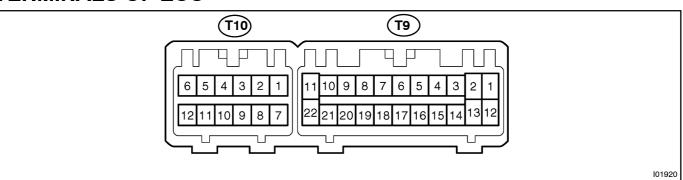

Symbols (Terminals No.)	Wiring Color	Condition	STD Value
CTY ↔ E (T9–1 ↔ T10–7)	R-L ↔ W-B	Door courtesy switch "ON" (Rear door opened)	Below 1 Ω
		Door courtesy switch "OFF" (Rear door closed)	1 MΩ or higher
DSWH ↔ E (T9–3 ↔ T10–7)	L-R ↔ W-B	Engine hood courtesy switch "ON" (Engine hood opened)	Below 1 Ω
		Engine hood courtesy switch "OFF" (Engine hood closed)	1 MΩ or higher
DSWD ↔ E (T9-4 ↔ T10-7)	R-Y ↔ W-B	Door courtesy switch "ON" (Driver's door opened)	Below 1 Ω
		Door courtesy switch "OFF" (Driver's door Closed)	1 MΩ or higher
DSWP ↔ E (T9-5 ↔ T10-7)	L ↔ W-B	Door courtesy switch "ON" (Passenger's door opened)	Below 1 Ω
		Door courtesy switch "OFF" (Passenger's door closed)	1 MΩ or higher
KSW ↔ E (T9-6 ↔ T10-7)	R-B ↔ W-B	Key unlock warning switch "ON" (Key inserted)	Below 1 Ω
		Key unlock warning switch "OFF" (Key removed)	1 M Ω or higher
LUG ↔ E (T9–7 ↔ T10–7)	G-W ↔ W-B	Back door key lock and unlock switch "ON"	Below 1 Ω
		Back door key lock and unlock switch "OFF"	1 M Ω or higher
L2 ↔ E	L-W ↔ W-B	Door key lock and unlock switch "LOCK" (Driver's and passenger's door)	Below 1 Ω
(T9–8 ↔ T10–7)		Door key lock and unlock switch "UNLOCK" (Driver's and passenger's door)	1 MΩ or higher
UL3 ↔ E (T9-9 ↔ T10-7)	L-Y ↔ W-B	Door key lock and unlock switch "UNLOCK" (Driver's door)	Below 1 Ω
		Door key lock and unlock switch "LOCK" (Driver's door)	1 M Ω or higher
UL2 ↔ E (T9–10 ↔ T10–7)	G ↔ W-B	Door key lock and unlock switch "UNLOCK" (passenger's door and back door)	Below 1 Ω
		Door key lock and unlock switch "LOCK" (passenger's door and back door)	1 MΩ or higher
+B1 ↔ Body ground (T9–11 ↔ Body ground)	V ↔ Body Ground	Always	10 – 14 V
IG ↔ E (T9–13 ↔ T9–7)	B-W ↔ W-B	Ignition switch is turned to "ON" position	10 – 14 V

DIAGNOSTICS - THEFT DETERRENT SYSTEM

LSWD ↔ E (T9–14 ↔ T10–7)	L–B ↔ W–B	Door unlock detection switch "ON" (Driver's door)	Below 1 Ω
		Door unlock detection switch "OFF" (Driver's door)	1 MΩ or higher
LSWP ↔ E (T9–15 ↔ T10–7)		Door unlock detection switch "ON" (Passenger's door)	Below 1 Ω
	L-O ↔ W-B	Door unlock detection switch "OFF" (Passenger's door)	1 MΩ or higher
LSWR ↔ E (T9–16 ↔ T10–7)	GR-L ↔ W-B	Door unlock detection switch "ON" (Rear door)	Below 1 Ω
		Door unlock detection switch "OFF" (Rear door)	1 MΩ or higher
+B2 ↔ Body ground (T10-1 ↔ Body ground)	B ↔ Body ground	Always	10 – 14 V
SH ↔ Body Ground (T10-9 ↔ Body Ground)	G–Y ↔ Body ground	Always	10 – 14 V
IND ↔ E (T10-6 ↔ T10-7)	G-R ↔ W-B	During set preparation	3 – 5 V
E ↔ Body ground (T10–7 ↔ Body ground)	W–B ↔ Body ground	Always	10 – 14 V
HEAD ↔ E (T10-10 ↔ T10-7)	R-B ↔ W-B	Light control switch "HEAD"	10 – 14 V
TAIL ↔ E (T10-11 ↔ T10-7)	G-B ↔ W-B	Light control switch "TAIL" or "HEAD"	10 – 14 V
HORN ↔ E (T10-12 ↔ T10-7)	G–O ↔ W–B	Horn switch "OFF"	10 – 14 V