
ATOOC O

## **OPERATION**

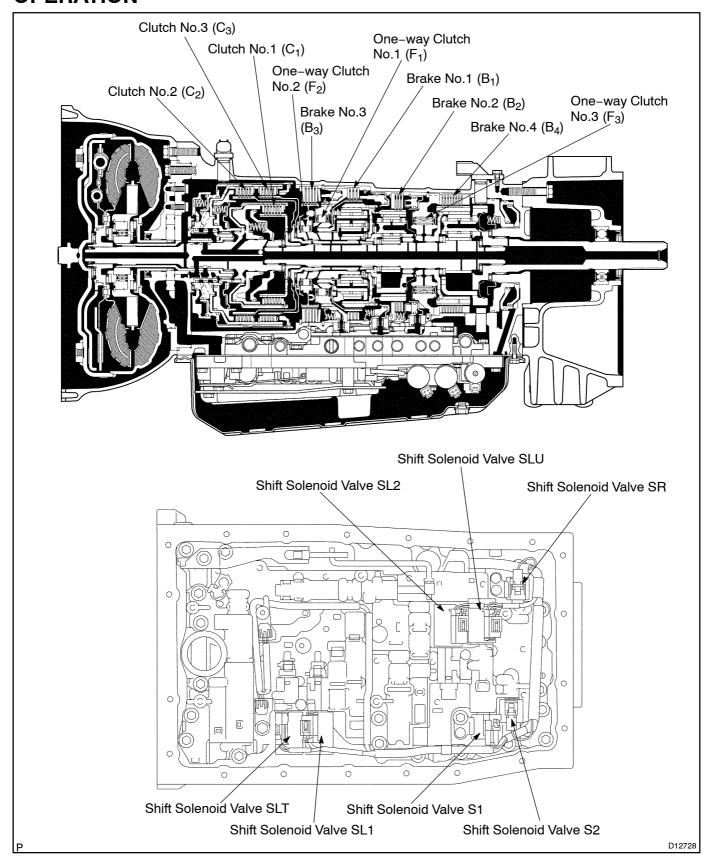

Shift Lever Range	Gear Position	S1	S2	SR	SL1	SL2	SLU	C <sub>1</sub>	C <sub>2</sub>	C <sub>3</sub>	B <sub>1</sub>	B <sub>2</sub>	В3	B <sub>4</sub>	F <sub>1</sub>	F <sub>2</sub>	F <sub>3</sub>
Р	Park	0	×	×	×	0	×	×	×	×	×	×	×	×	×	×	×
R	Reverse	0	×	×	×	0	×	×	×	0	0	×	×	0	0	×	×
N	Neutral	0	×	×	×	0	×	×	×	×	×	×	×	×	×	×	×
D	1st	0	×	×	×	0	×	0	×	×	×	×	×	×	×	×	0
	2nd	0	0	×	×	0	×	0	×	×	×	×	0	×	0	0	×
	3rd	×	0	×	×	0	×	0	×	0	×	×	0	×	0	×	×
	4th	×	×	×	×	0	0	0	0	0	×	×	0	×	×	×	×
	5th	×	×	0	0	×	0	×	0	0	0	×	0	×	×	×	×
4	1st	0	×	×	×	0	×	0	×	×	×	×	×	×	×	×	0
	2nd	0	0	×	×	0	×	0	×	×	×	×	0	×	0	0	×
	3rd	×	0	×	×	0	×	0	×	0	×	×	0	×	0	×	×
	4th	×	×	×	×	0	0	0	0	0	×	×	0	×	×	×	×
3	1st	0	×	×	×	0	×	0	×	×	×	×	×	×	×	×	0
	2nd	0	0	×	×	0	×	0	×	×	×	×	0	×	0	0	×
	3rd	×	0	×	×	×	×	0	×	0	0	×	0	×	0	×	×
2	1st	0	×	×	×	0	×	0	×	×	×	×	×	×	×	×	0
	2nd	0	0	0	×	×	×	0	×	×	×	0	0	×	0	0	×
L	1st	0	×	×	×	×	×	0	×	×	×	×	×	0	×	×	0

O: Operating

F1, F2, F3 : Operate only when driving