
☐ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

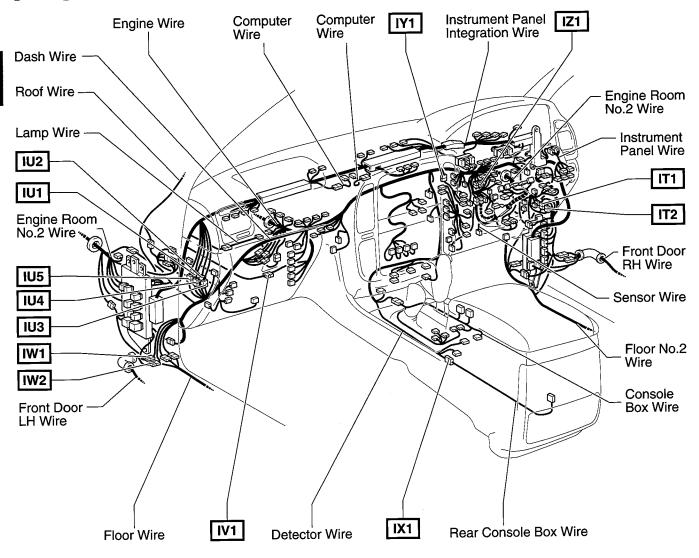

Code	Joining Wire Harness and Wire Harness (Connector Location)
IT1	Engine Room No.2 Wire and Dash Wire (Right Kick Panel)
lT2	
IU1	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2	
IU3	
IU4	
IU5	
IV1	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
lW1	Front Door LH Wire and Dash Wire (Left Kick Panel)
IW2	
IX1	Rear Console Box Wire and Dash Wire (Left Side of Rear Console)
IY1	Instrument Panel Integration Wire and Instrument Panel No.2 Wire (Instrument Panel Center)
IZ1	Dash Wire and Sensor Wire (Near the Steering Column)