
■ MANUAL HEADILGHT BEAM LEVEL CONTROL SYSTEM

- A manual headlight beam level control system, which enables the driver to manually control the angle of the headlight beams, has been adopted on the model for Saudi Arabia.
- This system keeps the LO beam of the headlights adjusted to the appropriate level in accordance with the number (weight) of passengers and volume of luggage.
- When the driver operates the headlight beam level control switch, this system actuates the headlight leveling actuator that is integrated in the headlight unit, in order to change the headlight reflector angle.

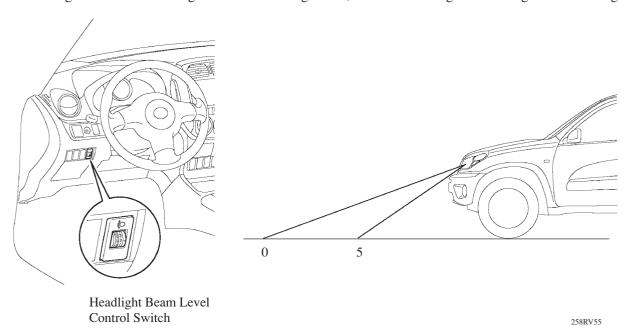

▶ Wiring Diagram **◄**

