

How to switch Sunspec/Delta Protocol

Version 01.00

Version History		
Date	Version	Changes
Mar-23-2017	V01.00	First draft

1. Background	4
2. Valid Model & Supported COMM FW version	4
3. How to switch protocol between Sunspec and Delta.....	4

1. Background

Sunspec protocol is going to become popular in Europe and Solivia protocol is not supported in new generation inverter models. To compensate the gap between Sunspec and Delta protocol and easy setting for inverter when installation. Therefore, these methods are provided in this document.

2. Valid Model & Supported COMM FW version

The following Delta inverter models support to switch Sunspec/Delta protocol and the according COMM FW version for each model.

- **RPI-M30A:** V1.36 and the following version.
- **RPI-M50A:** V1.37 and the following version.
- **M88H:** V1.10 and the following version.

3. How to switch protocol between Sunspec and Delta

The following methods can switch both protocols.

- **By Inverter Display:** During first startup setting, you will choose which protocol you want to use. Even you set wrong protocol, you can reset the setting by following steps.

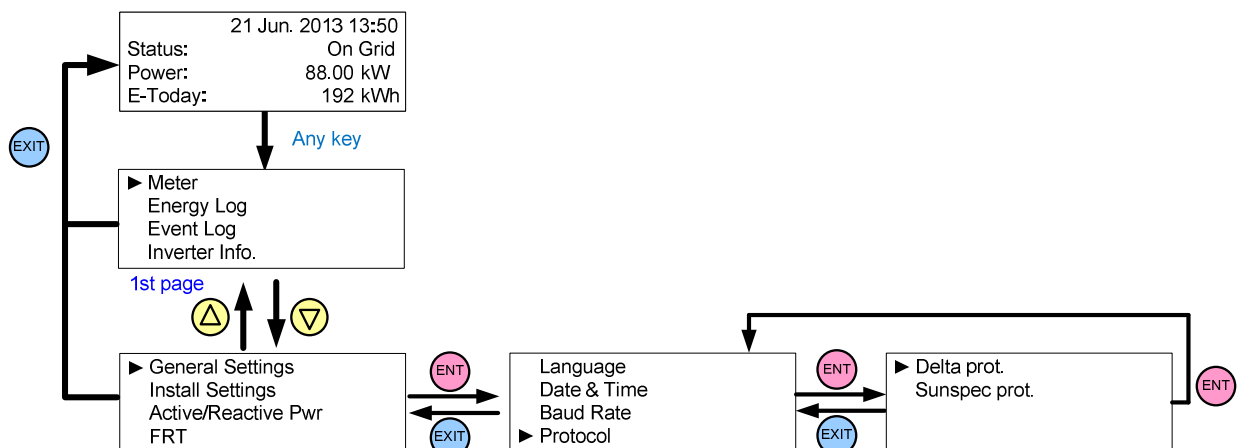


Figure 1. Protocol Setting by Inverter Display

- **By DSS software (Under development):** Current DSS software is only compatible to Delta/Solivia protocol, not included of Sunspec. To improve this gap, an icon will be added in DSS software and user can do inverter setting by DSS software whatever the protocol is set initially.
- **By Modbus Address:** The 3rd party monitoring company or user can make a program to access the **Holding Register address 802** (See Table 1), Modbus function code is 0x06, after that they can switch both protocols directly.

Table 1. Switch protocol by Modbus Address

Address (Hex)	Address (Dec)	Description	Meaning
322	802	Sunspec/Delta Protocol Switch	0: Delta Protocol 5: Sunspec Protocol