




USB Switching Channels

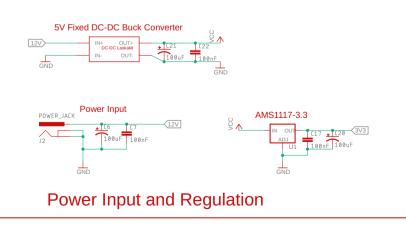

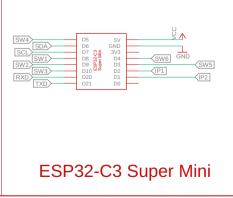

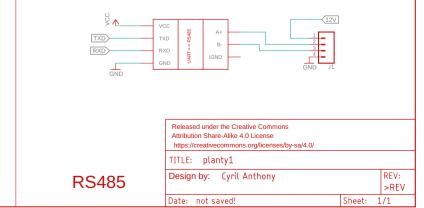

Push Buttons Debounce