



Flow chart of measures for alpha lubricator trouble

ENGINE TYPE: L/S MC, MC-C

In case of alpha lubricator failure, it can be checked by alarm No. on HMI panel or LED indicated on BCU.

Measures for the failure are listed up in the instruction book. However, in order to take appropriate measures more smoothly and quickly, we have made trouble shooting for every alarm code in the following flow chart format for your easy reference (Please see from the next page.).

We consider most of problems are followed up on this format. However, if it is still not solved by this, fill in trouble condition on attached check list and inform us of our service department. We will advise you appropriate measures.

Trouble shoot flow chart

1. Flow for alarm indicated on HMI panel

Alarm No.1~24		2
Alarm No.29 or 31, 30 or 43		3
Alarm No.30 or 43, 33		4
Alarm No.34, 35		5
Alarm No.36, 37, 38		6
Alarm No.39, 40		7
Alarm No.41, 42, 44		8
Alarm No.44, 45, 46		9
Alarm No.45, 46, 47, 48, 49		10


2. Flow for LED, which turns on at BCU (When "BCU FAIL" alarm is on.)



LED No.1, 2, 3		11
LED No.4 or 5, 6, 7, 8		12


Attachment



CHECK LIST OF ALPHA SYSTEM		13
----------------------------	-------	----




REMARKS :

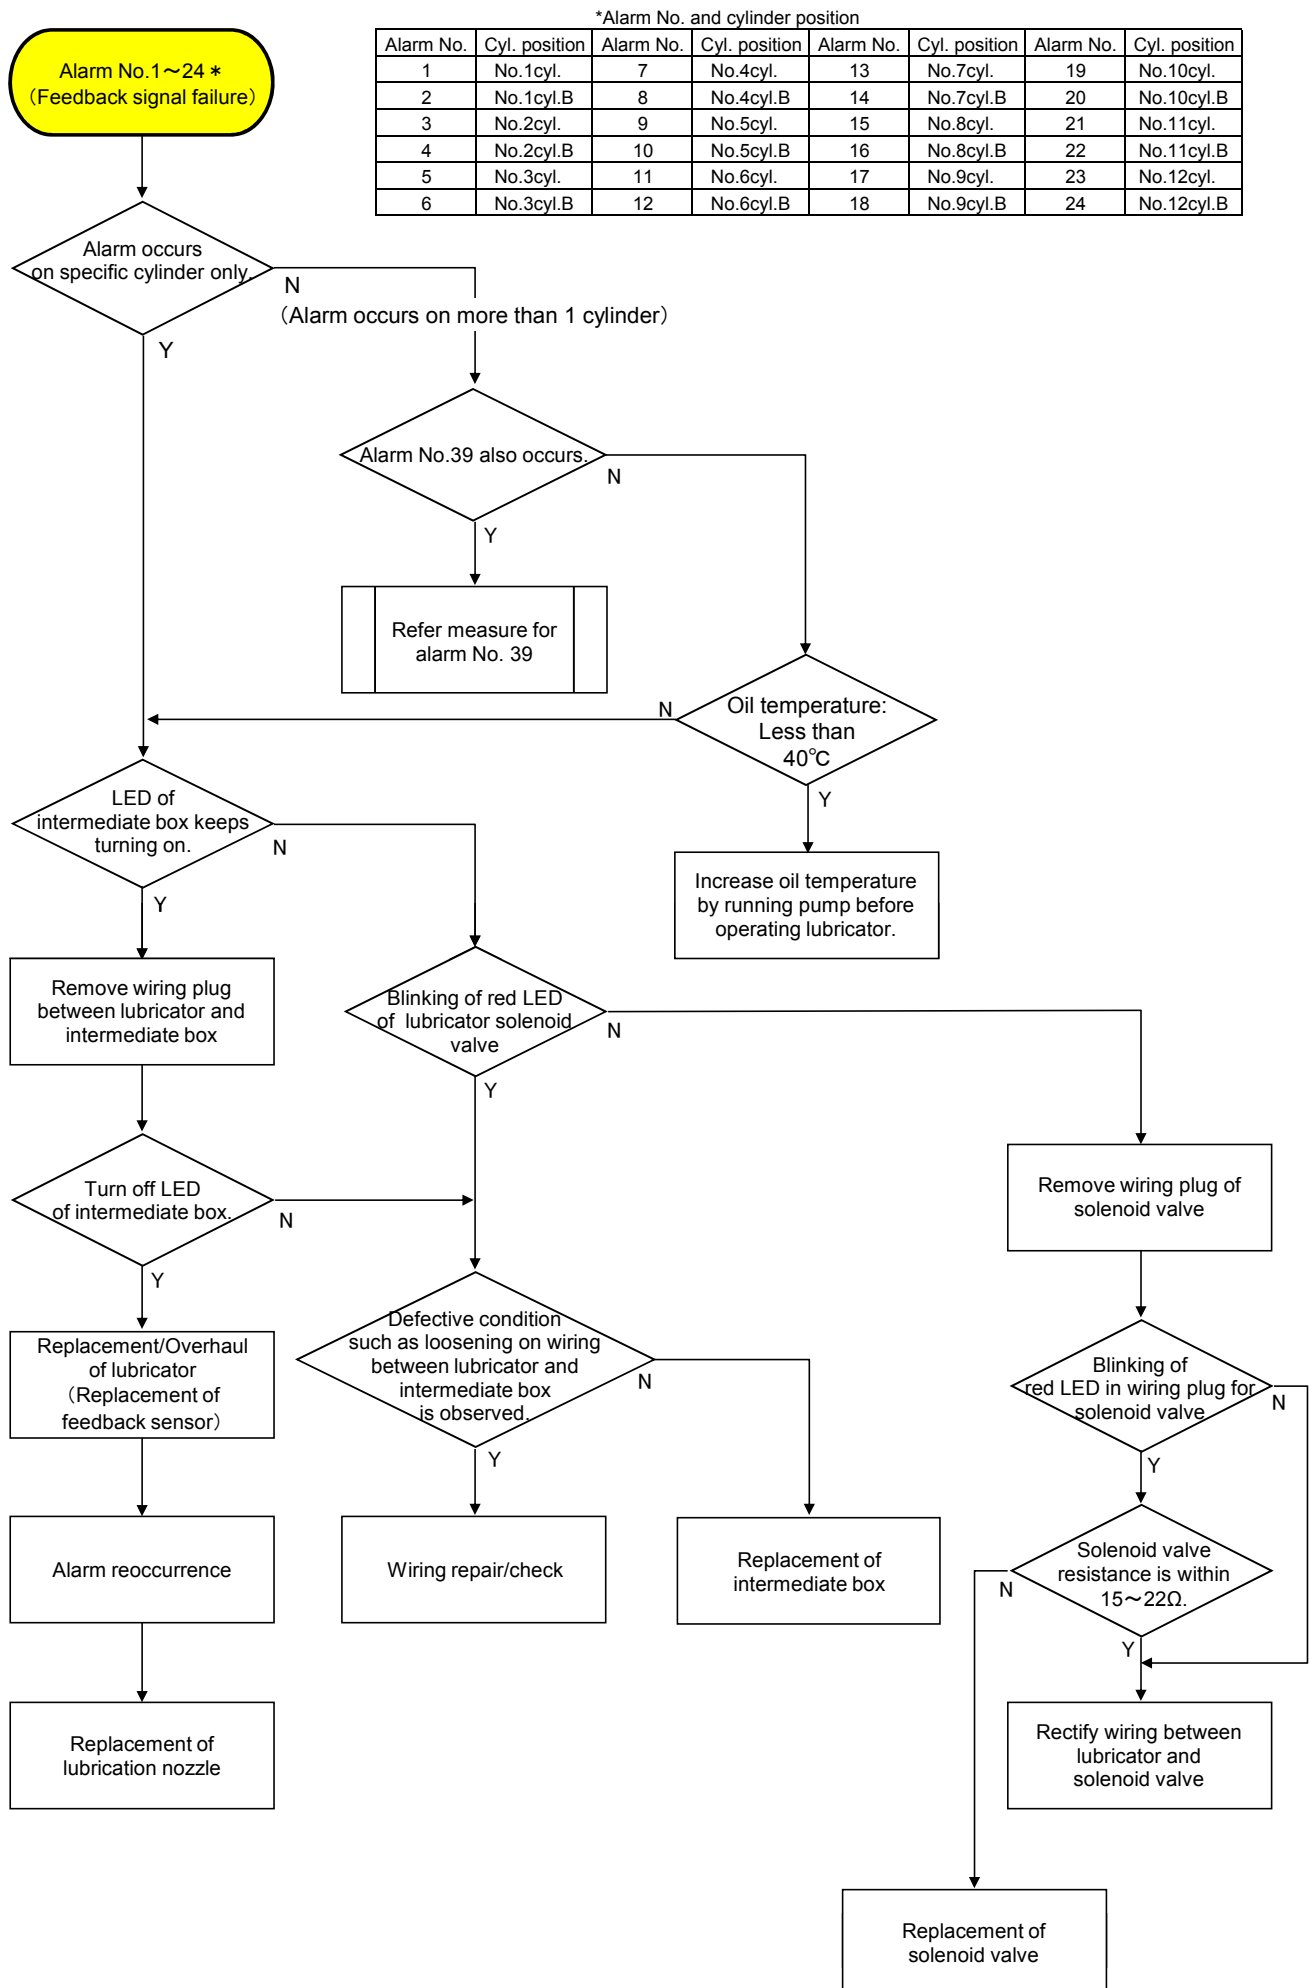


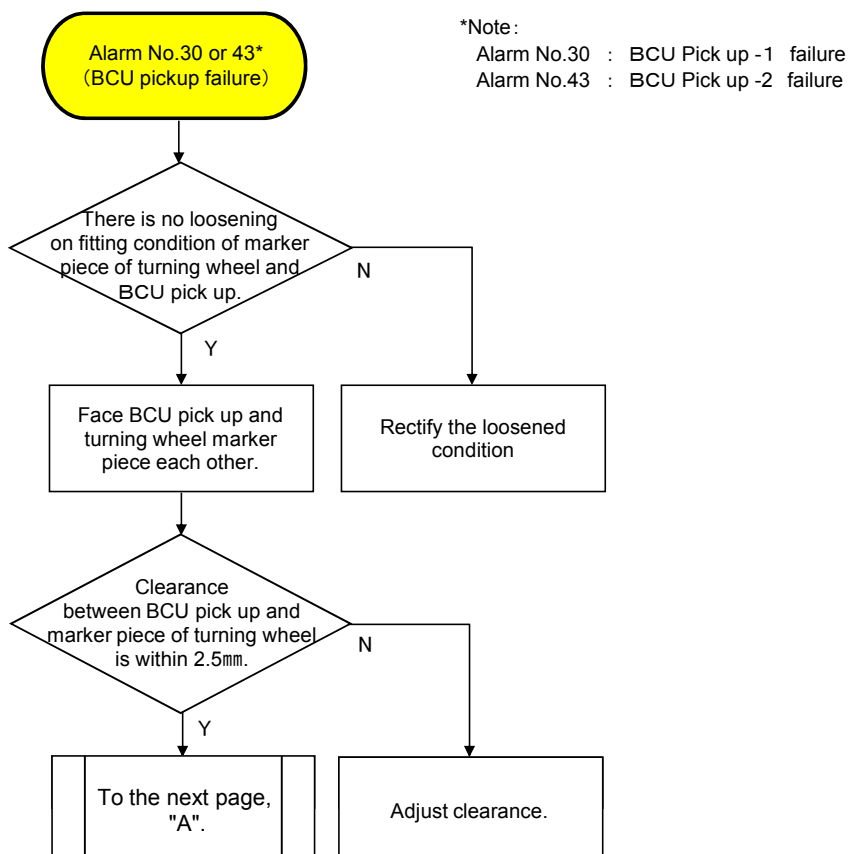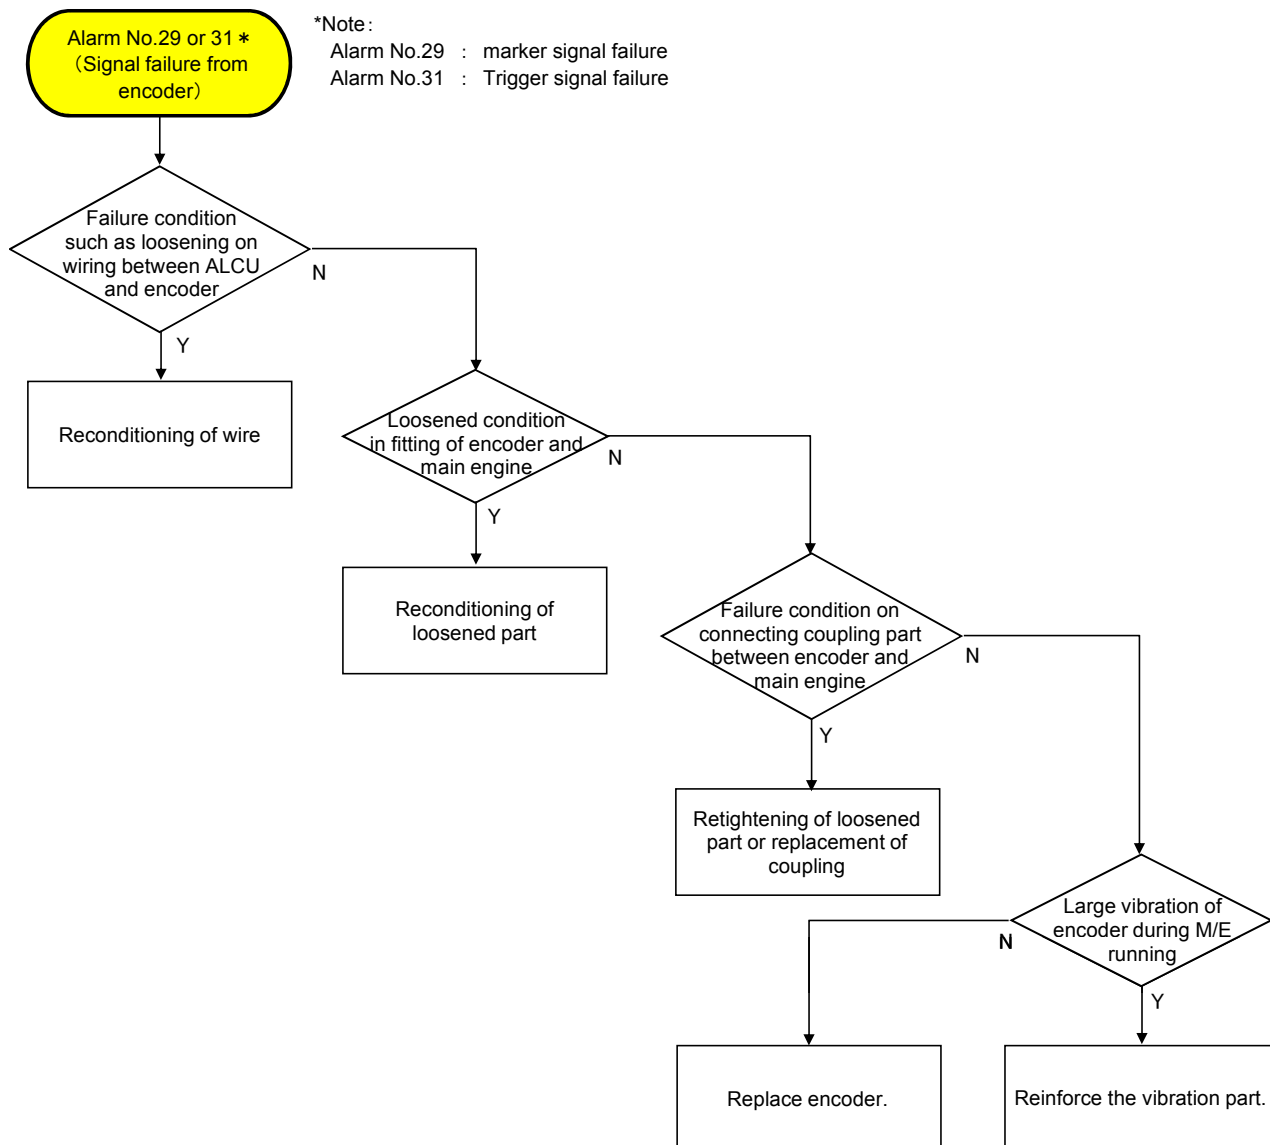

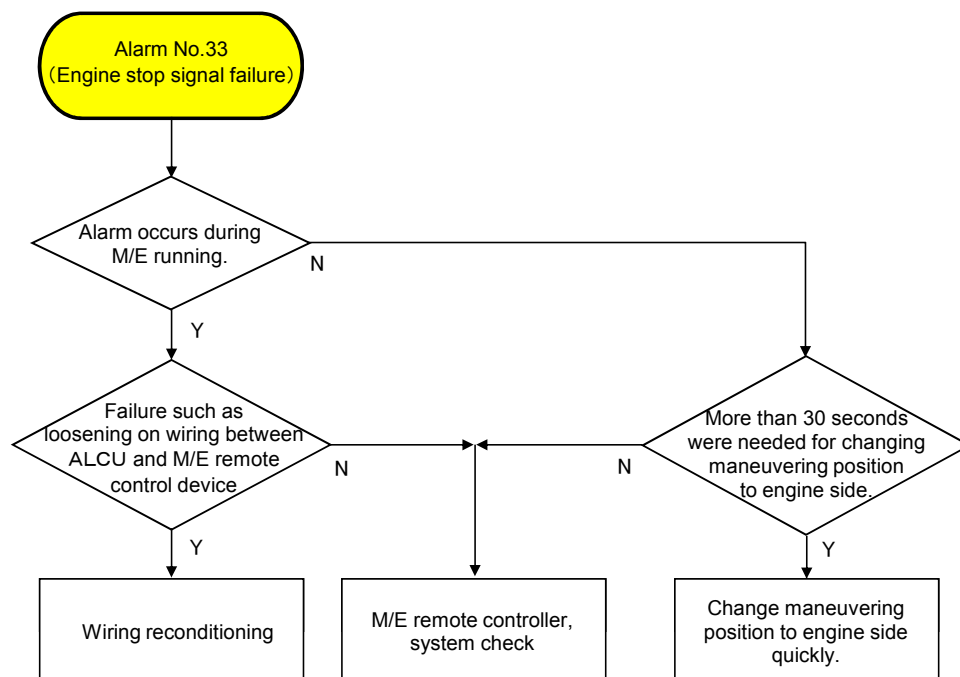

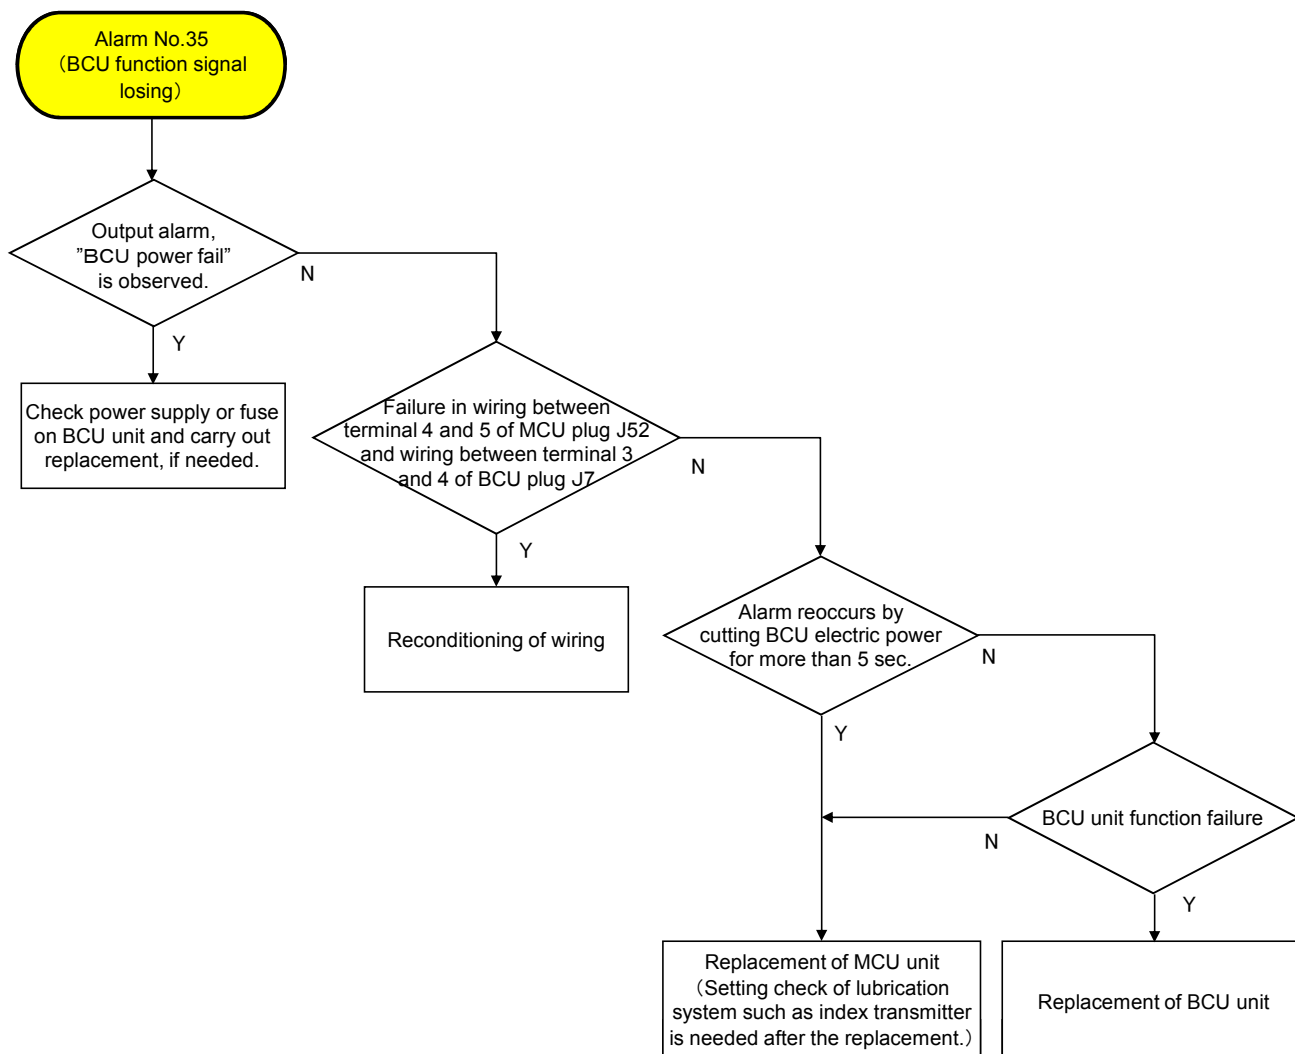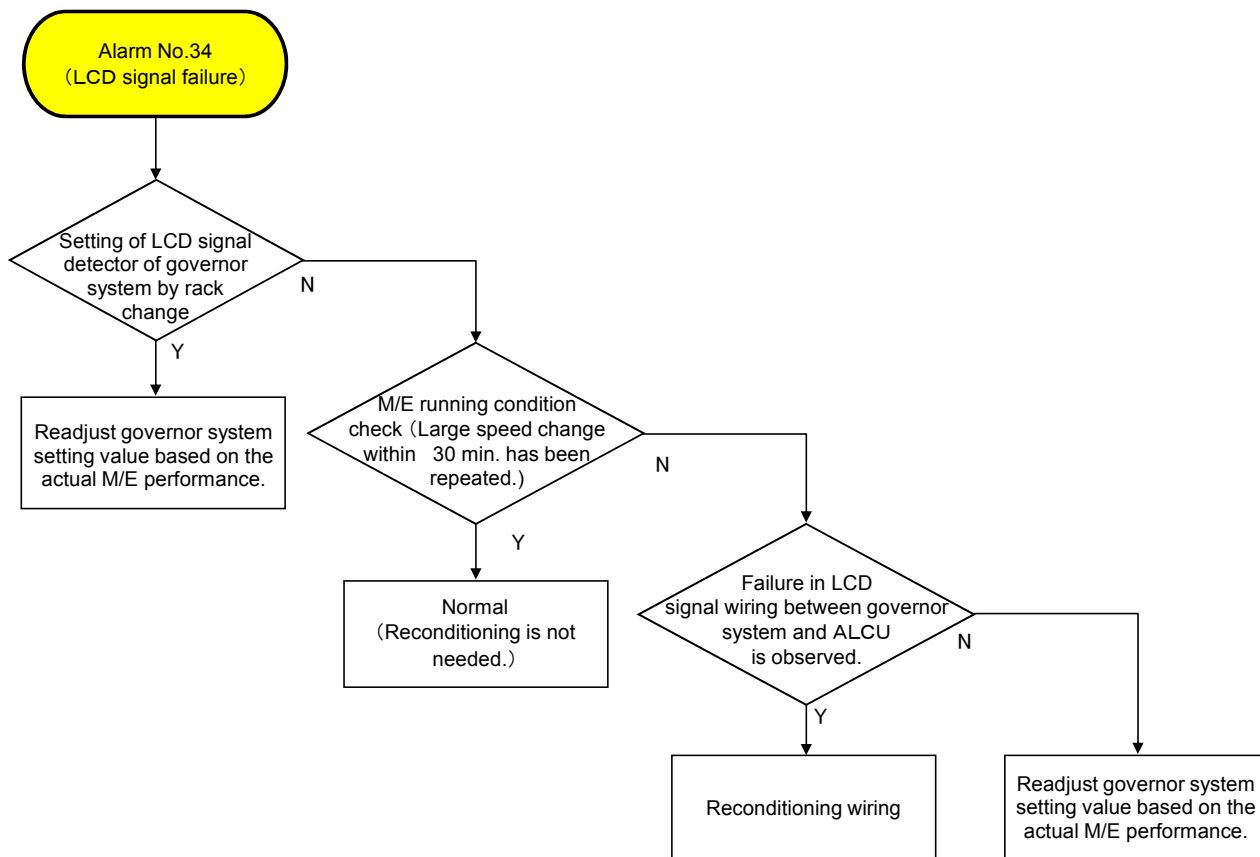

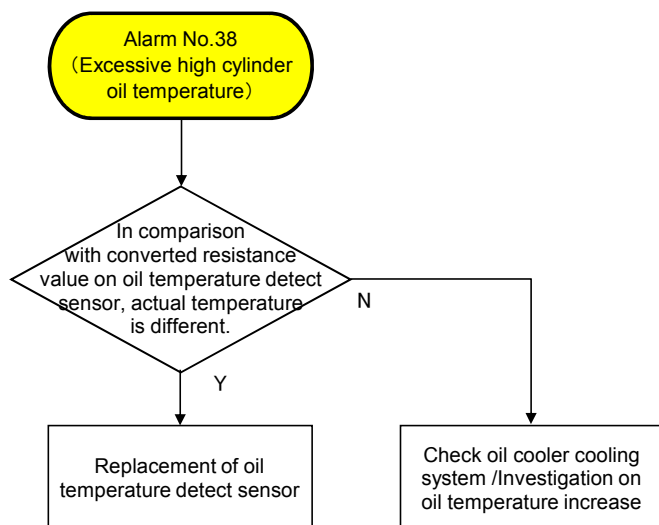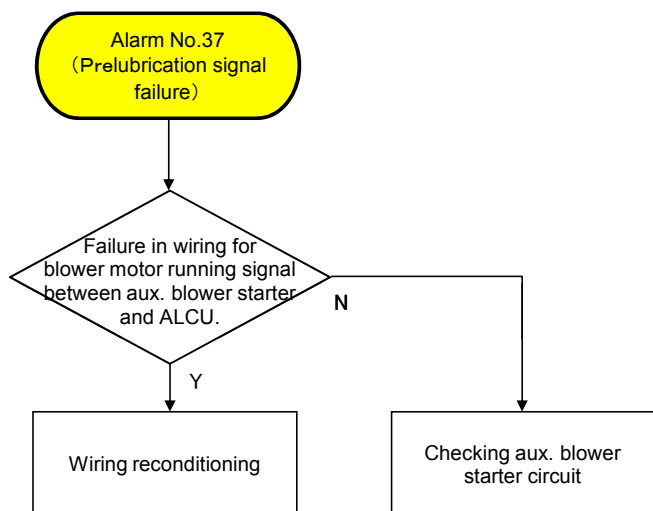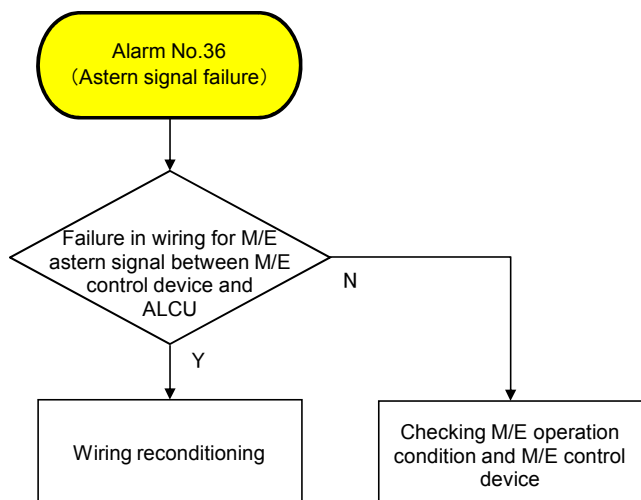


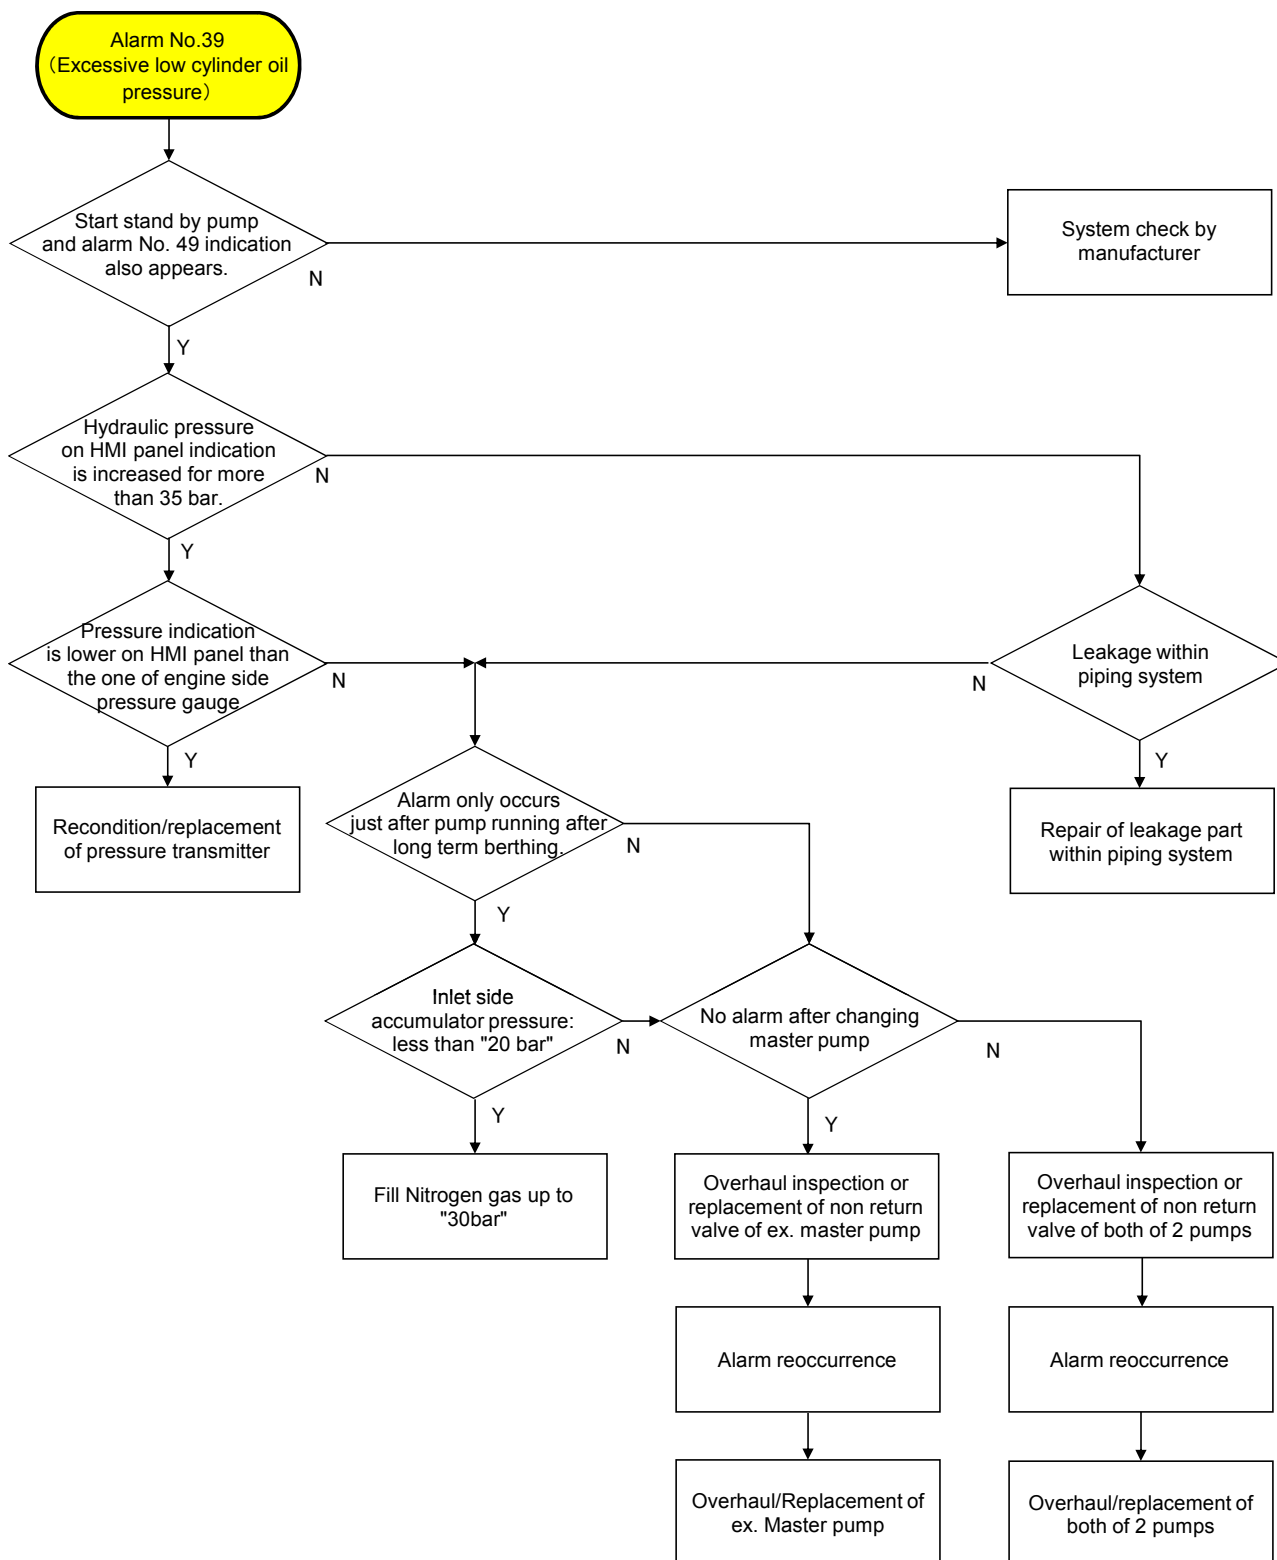





Alarm No.40
(M/E rpm detect signal:
large deviation)



Check another alarm
occurs at the same time,
and take action individually.



Alarm No.	Cause of alarm
29	Encoder marker signal failure
30	BCU pick up 1 failure
31	Encoder trigger signal failure
43	BCU pick up 2 failure

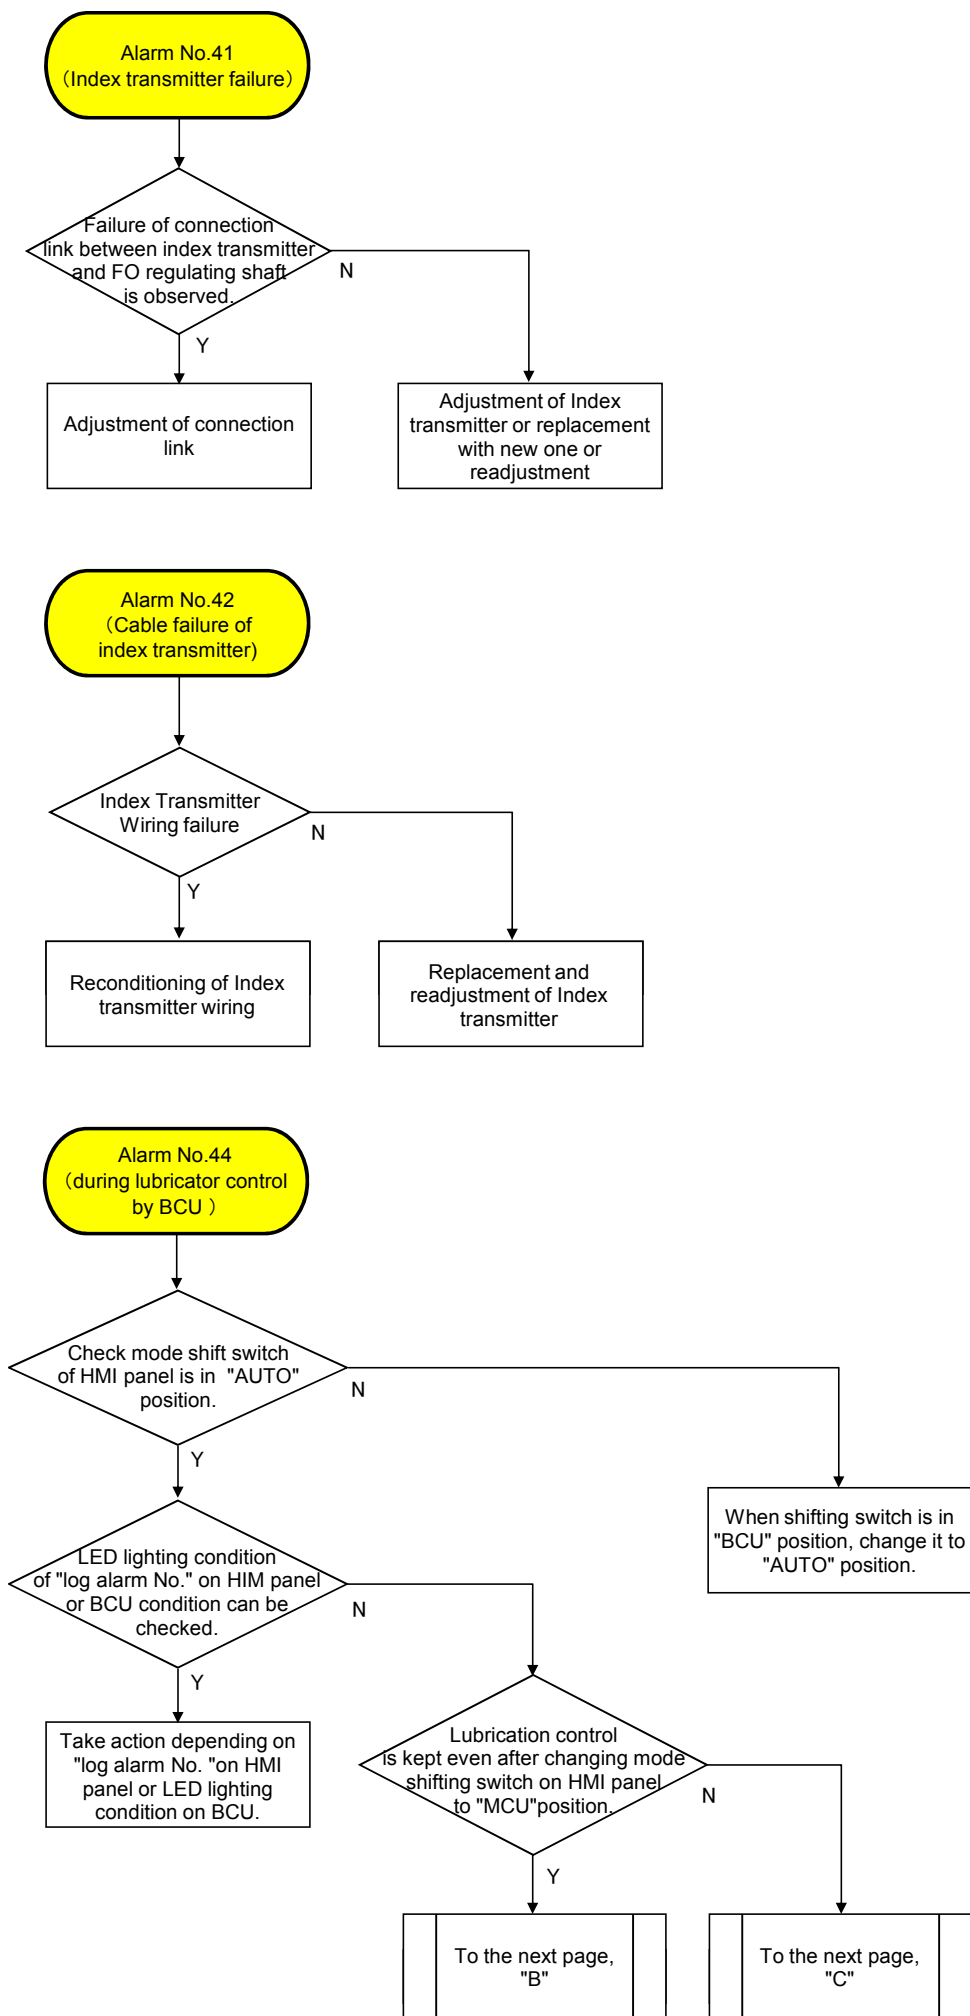

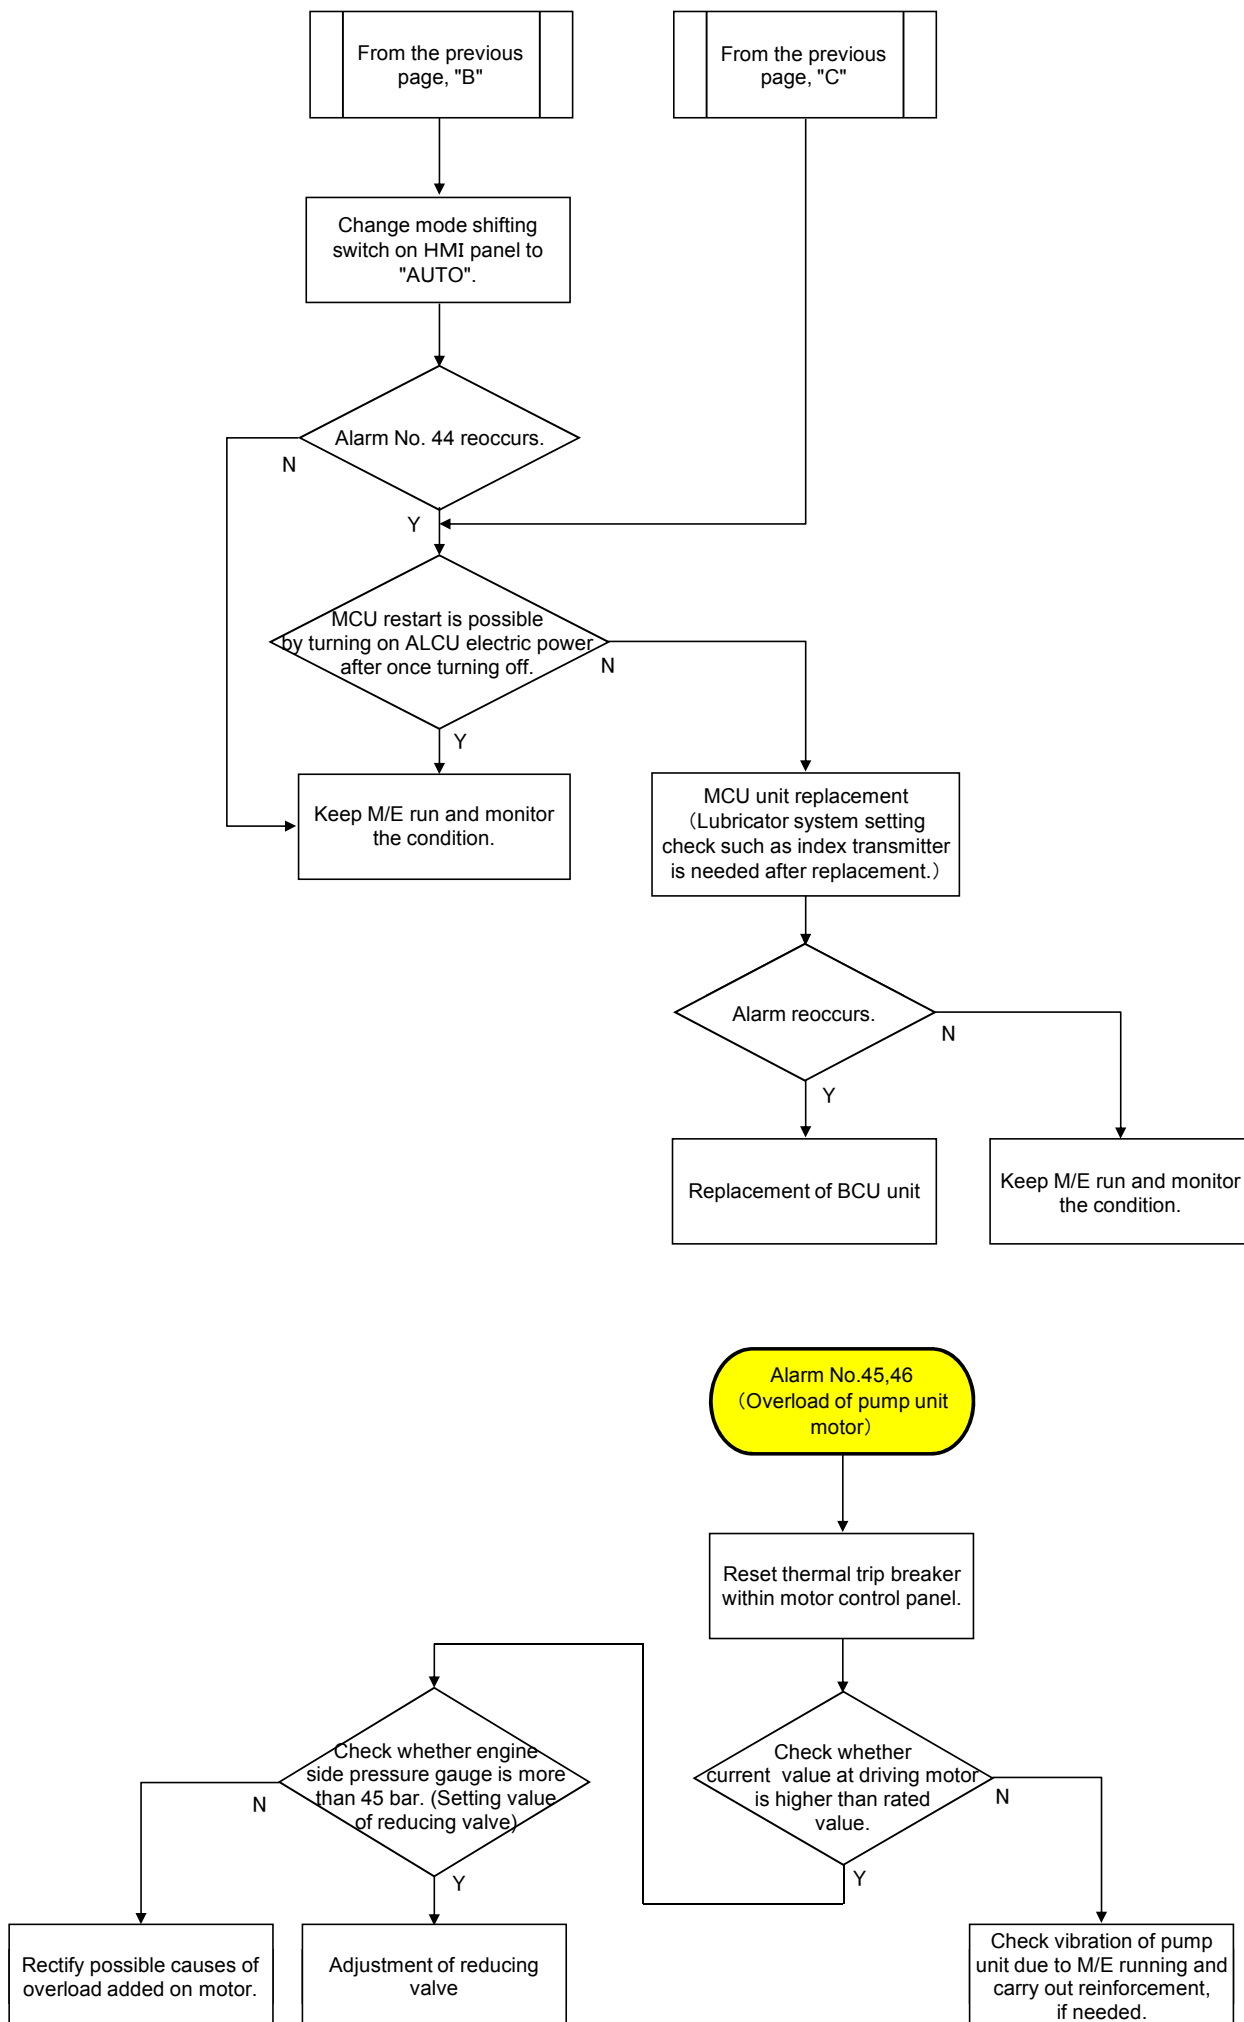

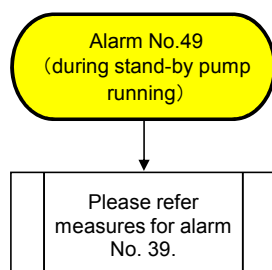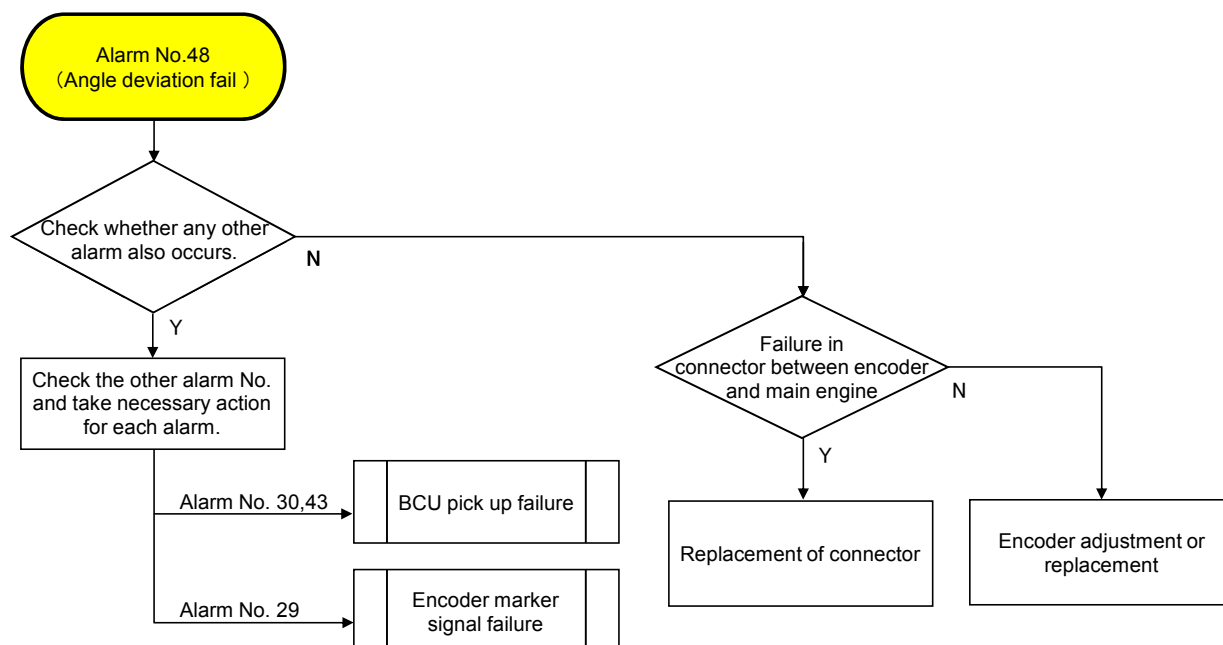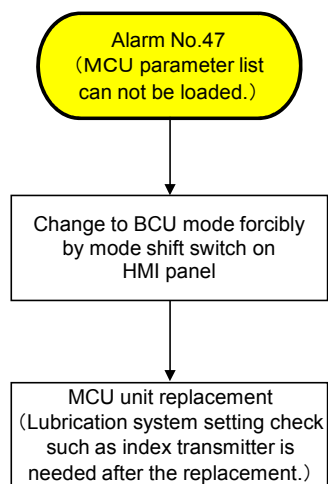

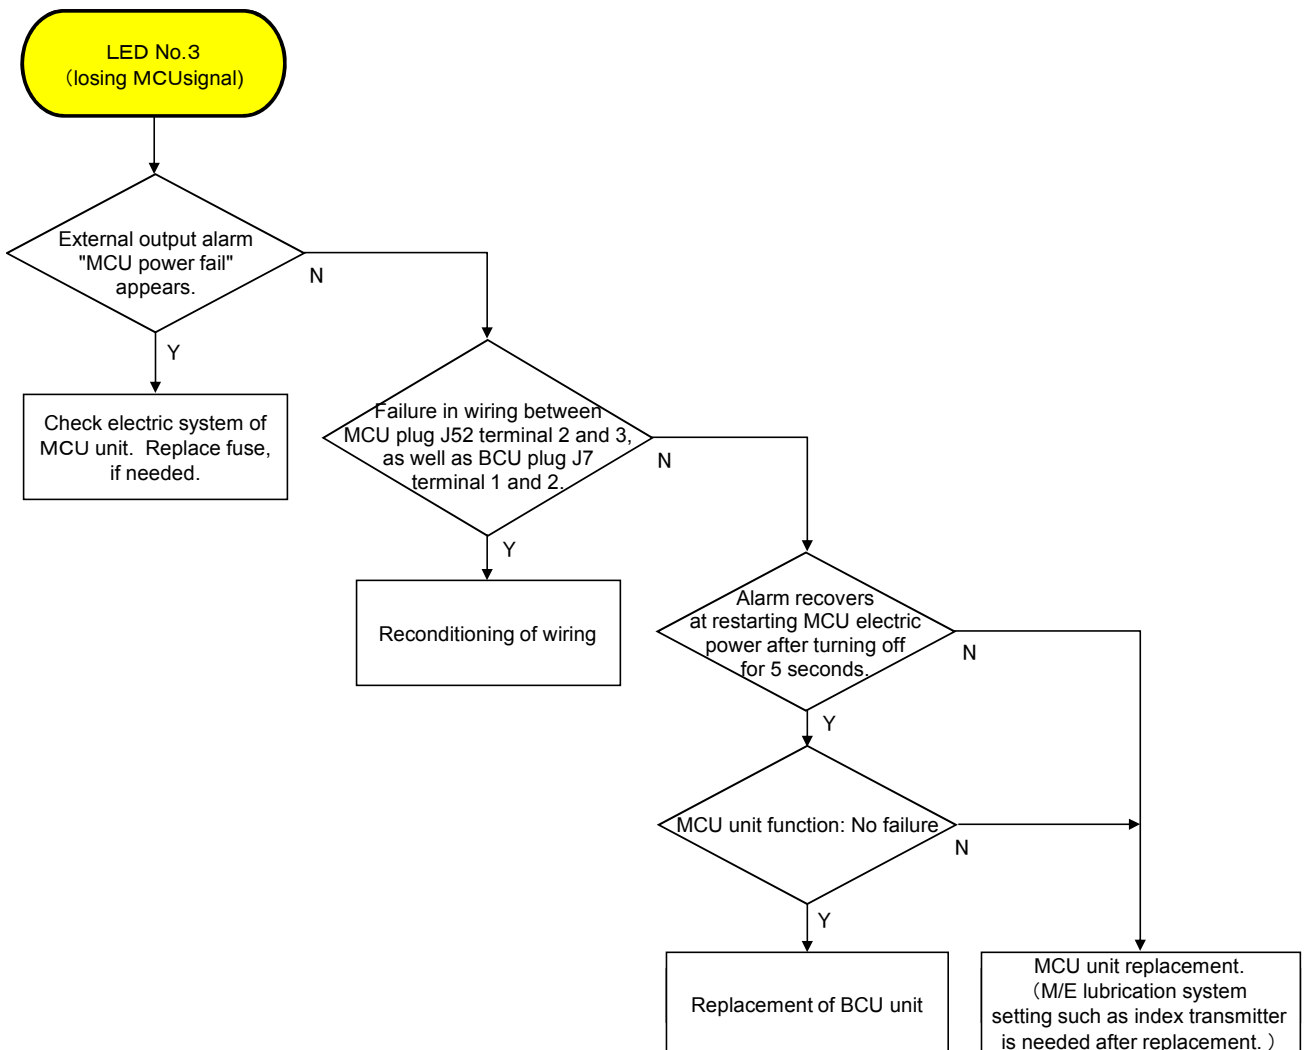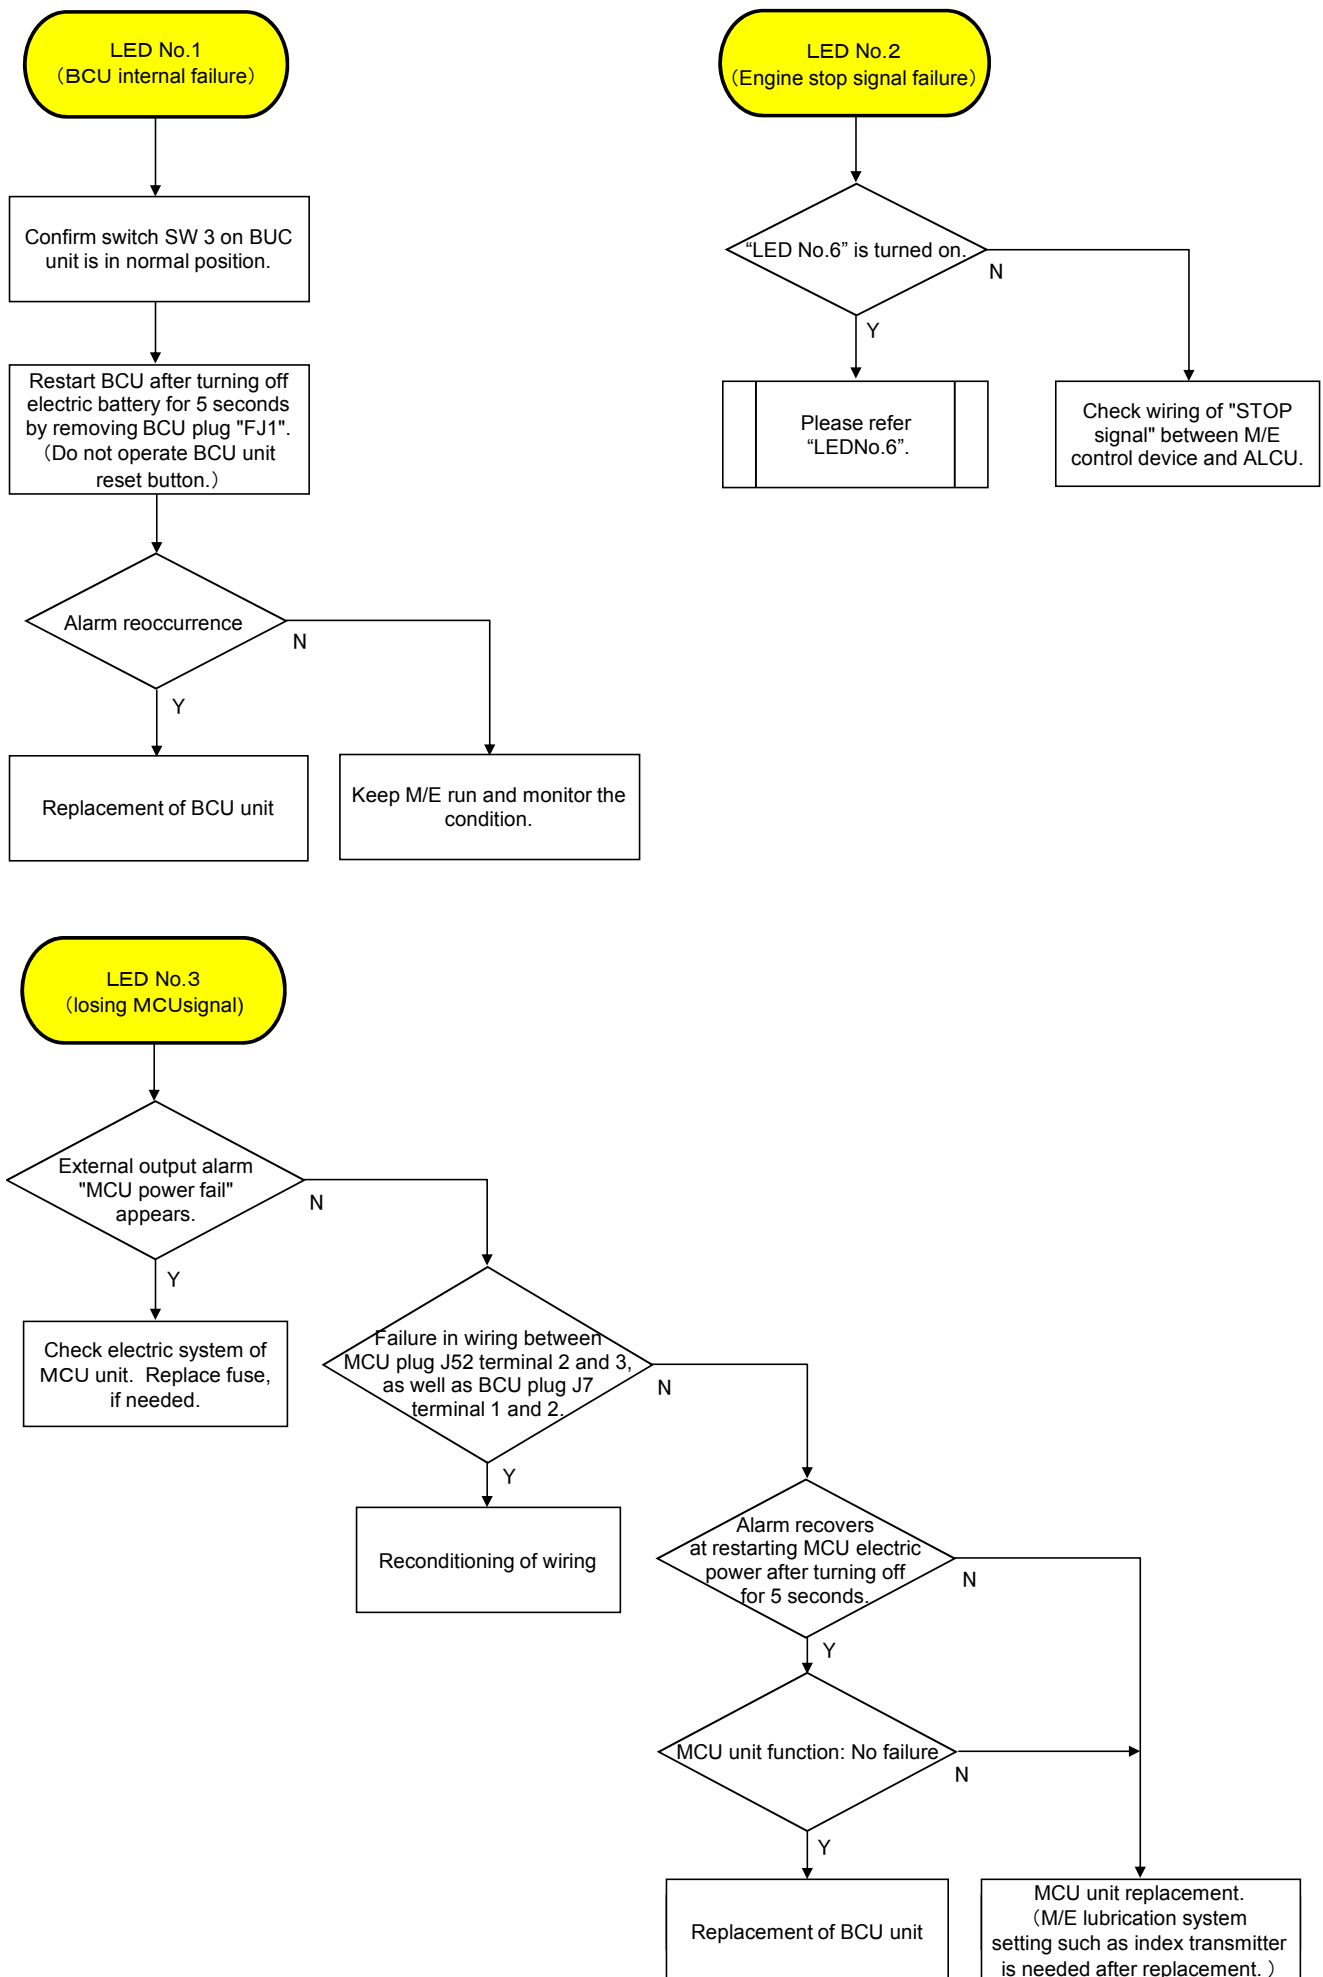

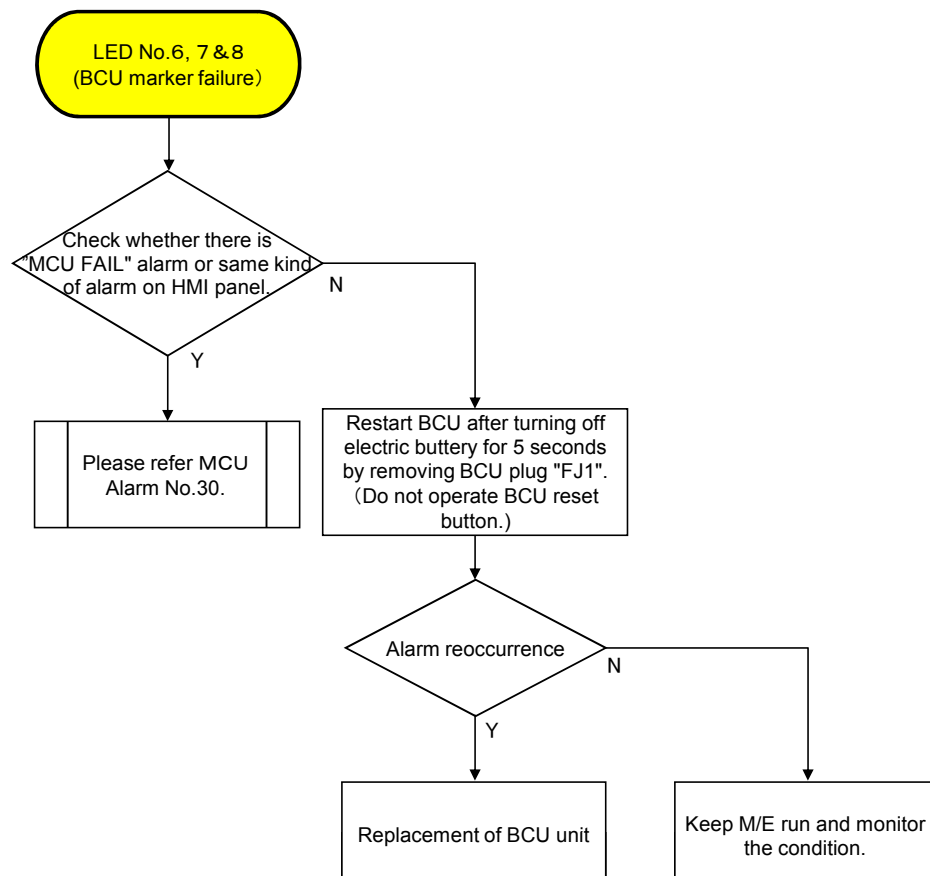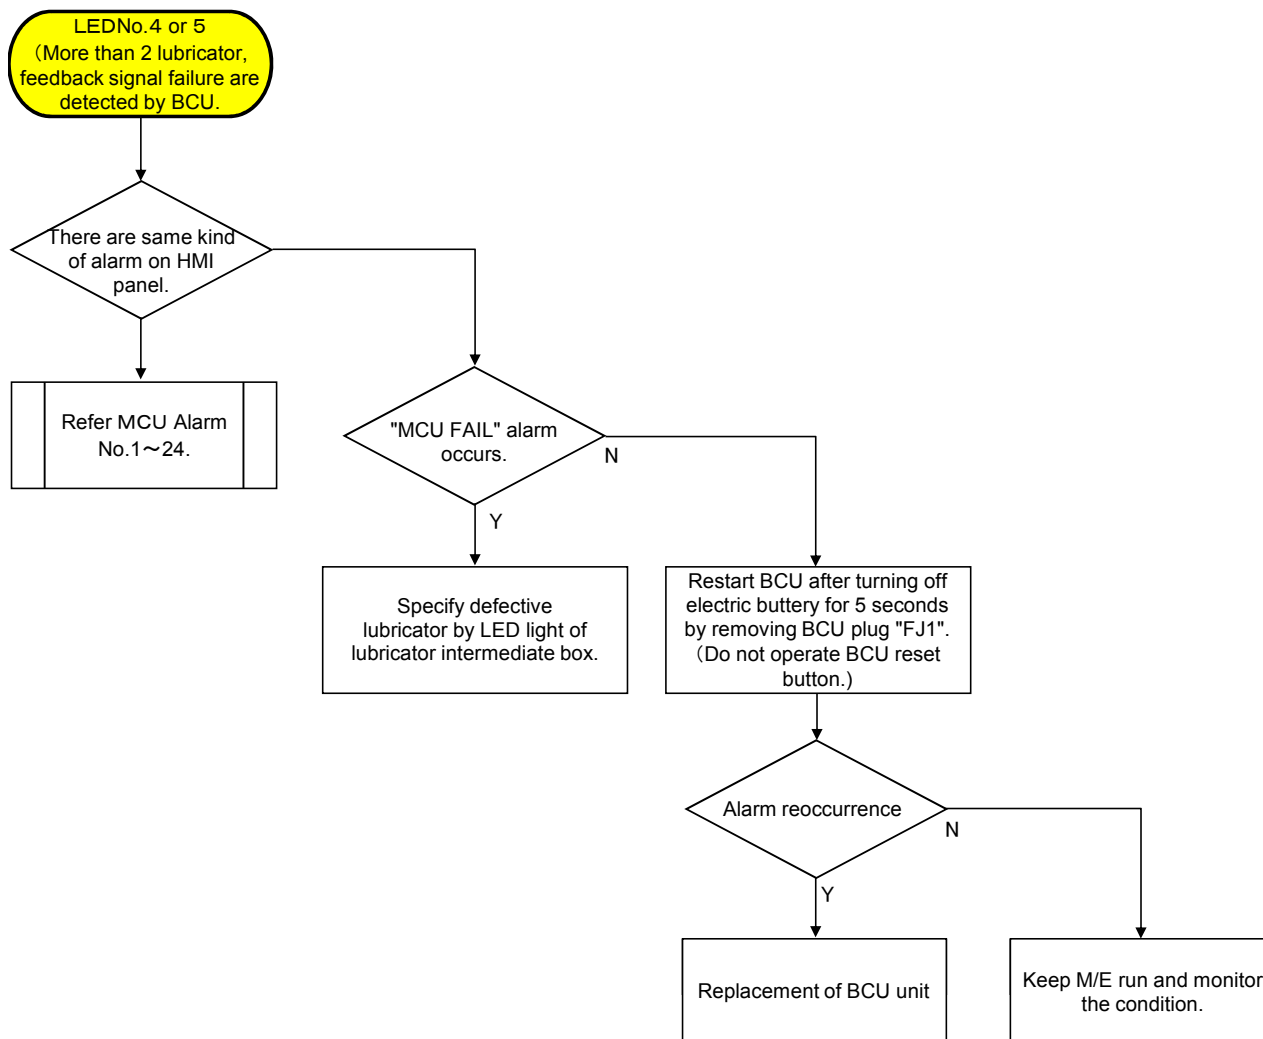

SUPPLEMENT

CHECK LIST OF ALPHA SYSTEM

Please fill out the below form and send it back to us in order to investigate the trouble cause.


1	Ship Name	
2	Engine Builder	
3	Ship Builder	
4	Ship No.	
5	Brief Description	
6	Main Engine Condition	☐ STOP、 ☐ FUEL RUNNING、 ☐ AIR RUNNING、 ☐ TURNING
7	Activated Alarm	Check the activated alarm on CRT, and fill out the form. ☐ COMMON ALARM、 ☐ MCU POWER FAIL、 ☐ BCU IN CONTROL、 ☐ BCU FAIL、 ☐ BCU POWER FAIL ☐ Other

8 Check the Alarm Code of HMI panel

Check the alarm code that is indicated on HMI panel, and then fill out the form.
(The alarm code is indicated by operating the push button switch )



Alr _____
Lal _____
Lal _____
Lal _____
Lal _____

☐ No indication of Alarm Code

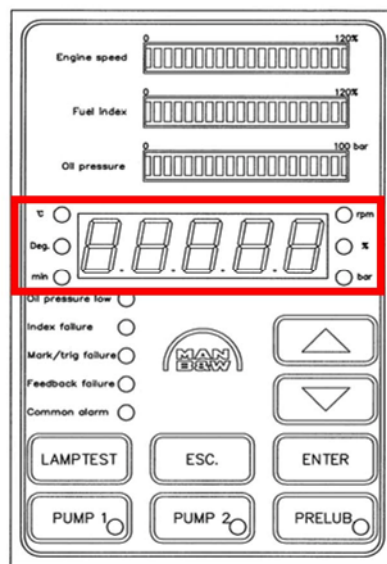

9 Check the Cause LED on BCU

Check the abnormal cause LED on BCU in ALCU, and then fill out the form about activated LED.

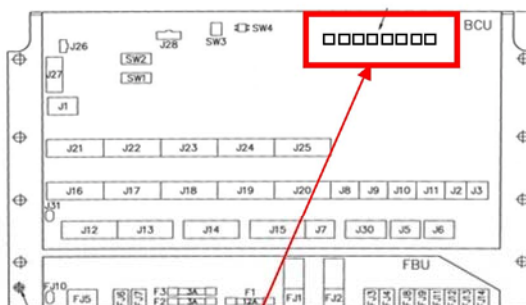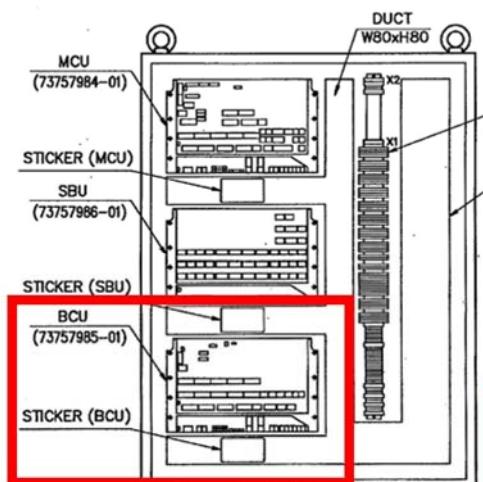

Abnormal Cause LED
Please check these LED.

LED NO.	D47	D46	D45	D48	D44	D5	D4	D3
	☐	☐	☐	☐	☐	☐	☐	☐
	☐ ON	☐ ON	☐ ON	☐ ON	☐ ON	☐ ON	☐ ON	☐ ON
	☐ OFF	☐ OFF	☐ OFF	☐ OFF	☐ OFF	☐ OFF	☐ OFF	☐ OFF