
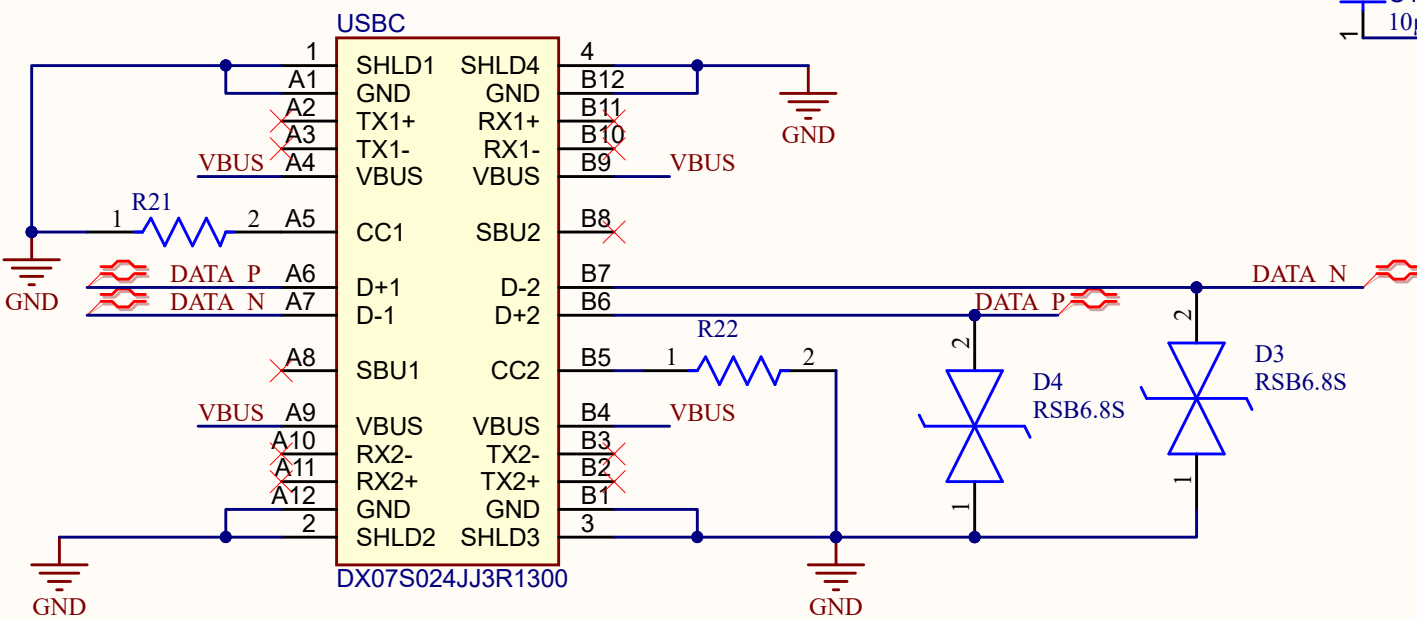



Power

Recommended to use more than 3.6V LiPo battery because of dropout voltage of LDO

Text

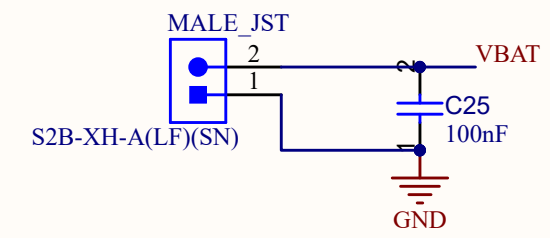


TX+/- RX+/- ARE FOR USB 3.0 use cases

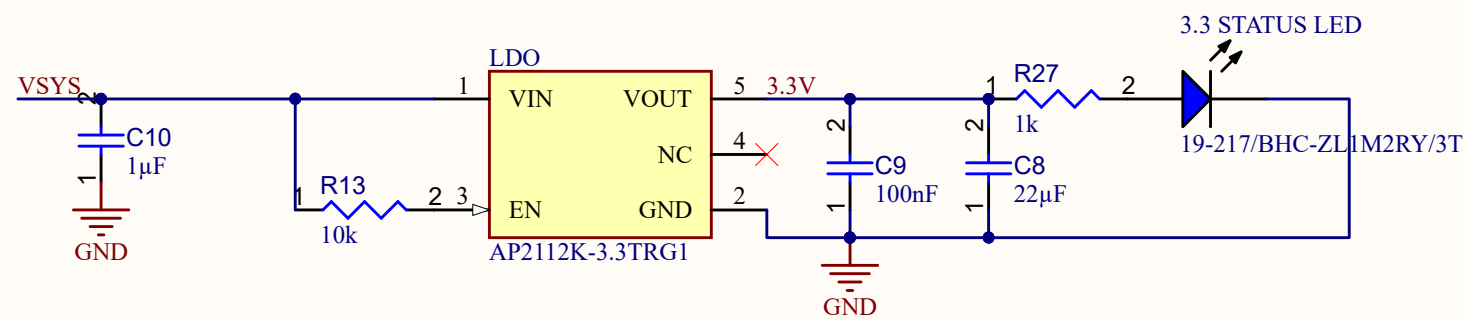

Output Current: 600mA , expecting the usage current to be less than 400mA

But the battery charger provides VSYS at ~400mA current. It is determined by RILIM resistor value

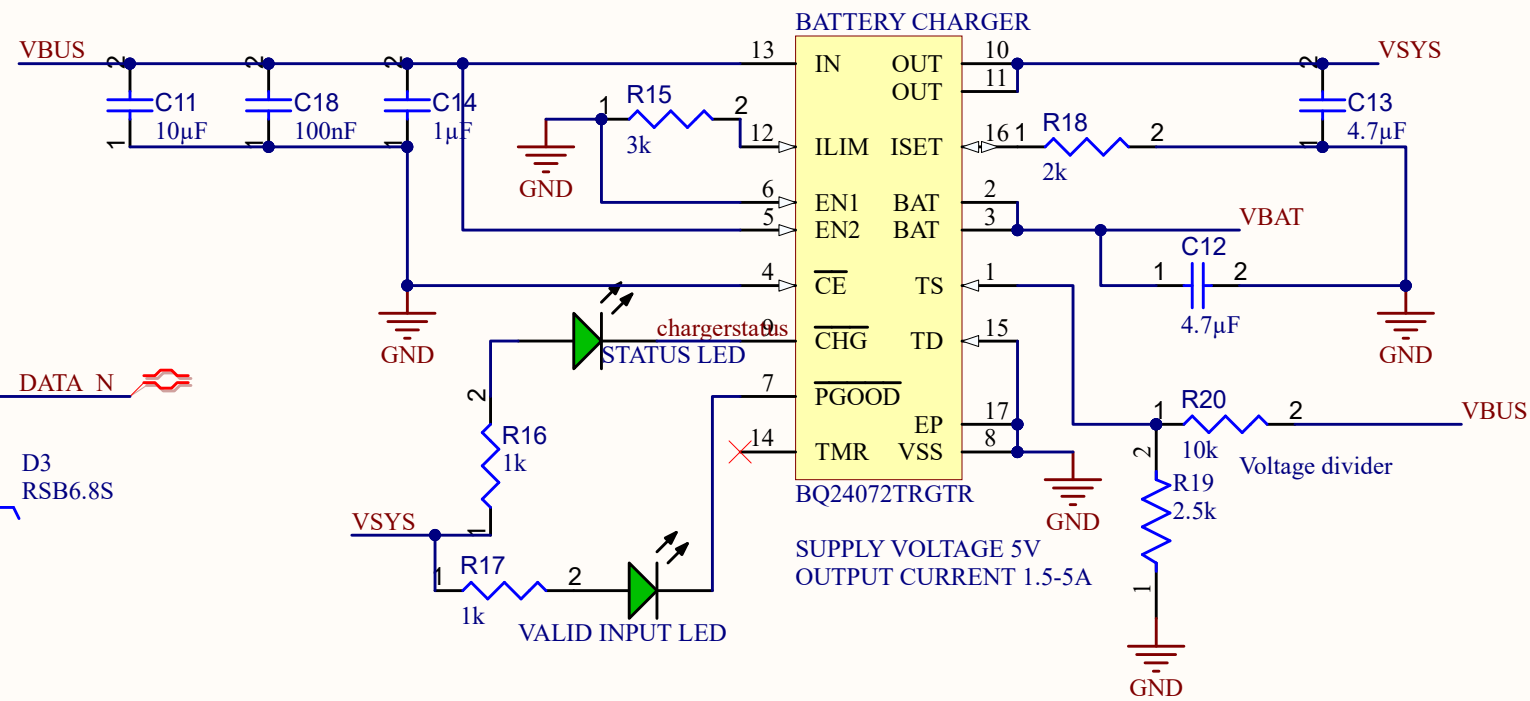


~CHG is charge status indicator

~PGOOD is for if power is good



Charging can be controlled by the ESP via the ~CE pin, but for now, we will keep charging enabled by default.

RILIM is 3k ohms, USB will supply ~400mA (first esp , then remaining to charge lipo) [en1 is low en2 is high]

ESP32

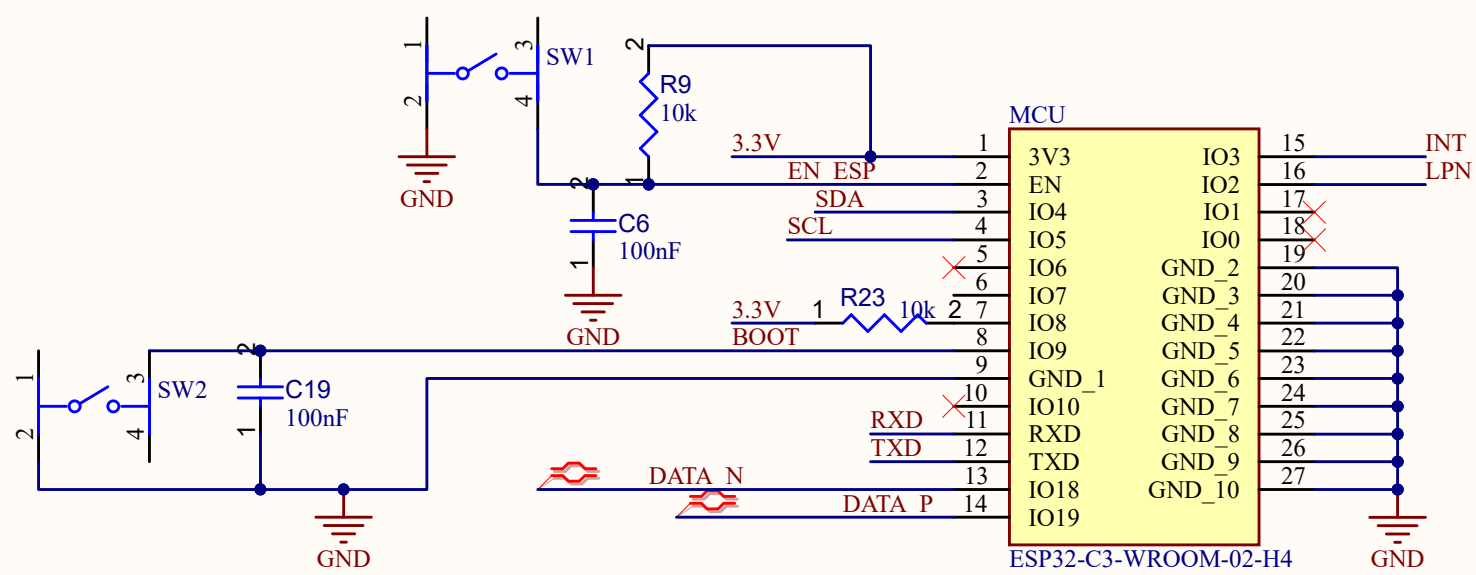

IO10 = X becoz Not debugging via JTAG, we r using UART print statements

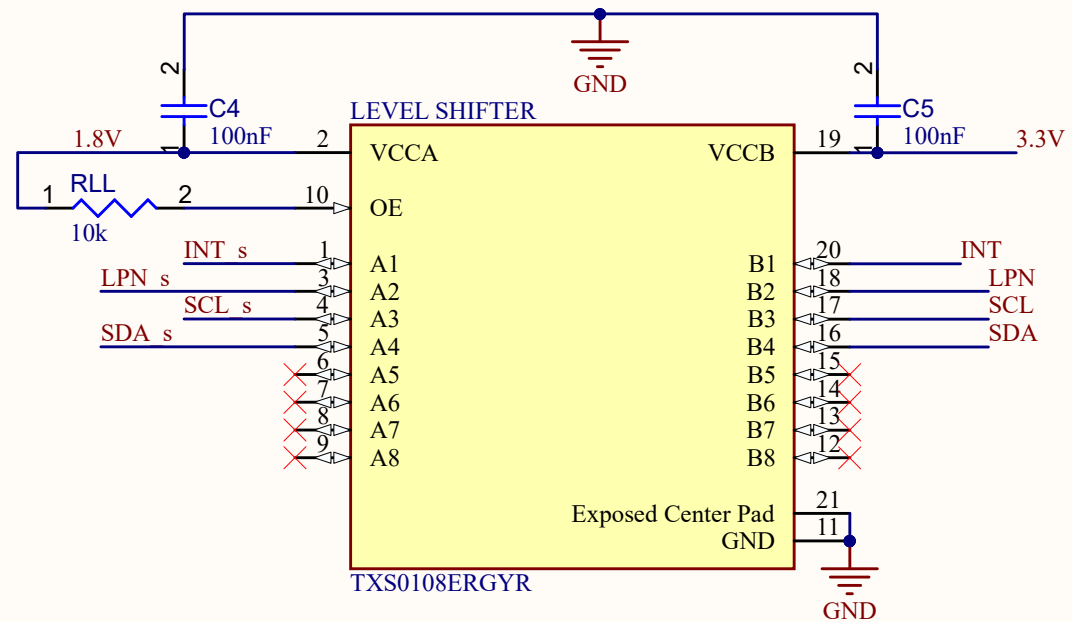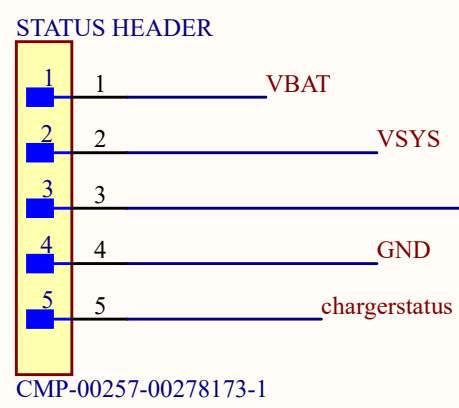

USB to UART bridge

This is completely optional, but safe side

for auto boot/reset

