Sonic Slings

For Jersey Jack Pinball Sonic the Hedgehog. About ten minutes. No wiring, no drilling.

In the box


- Left sling and right sling, assembled
- Display stand and lid
- This sheet

You will need


- The nut driver or wrench that fits your slingshot post nuts
- Somewhere safe to stand the playfield glass

Before you start


Switch the game off. Remove the playfield glass and set it aside. Lift each sling off its stand in the box.

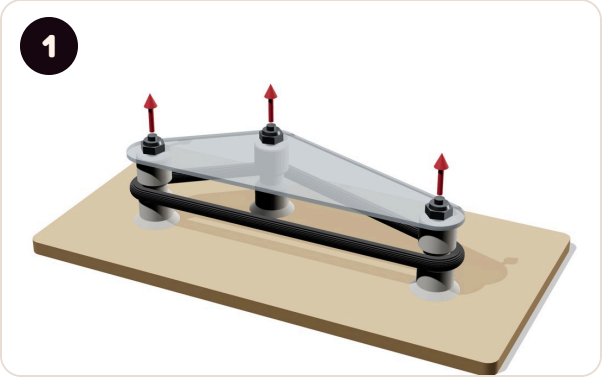


Take off the three nuts that hold one slingshot plastic. Keep them: they go back on.

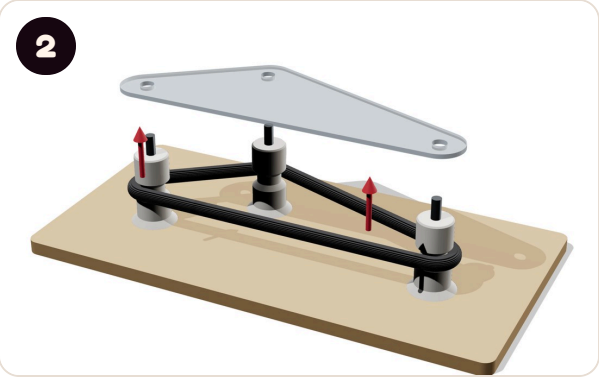

Lift the original plastic off. Leave the posts and the rubber ring where they are.

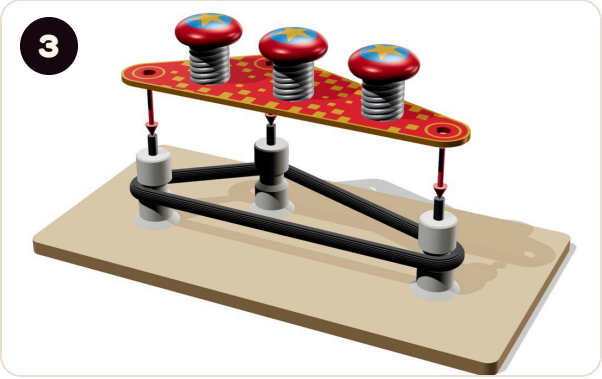

Lower the matching sling onto the three posts. Each sling fits one side only. If the holes do not line up, it is the other one.

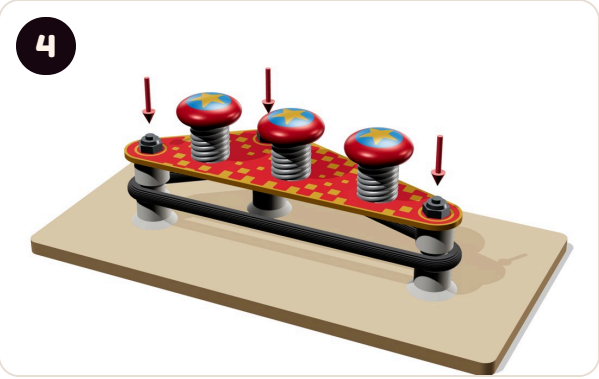

Refit the three nuts. Stop when they are snug. Overtightening can crack any plastic.

5. Repeat on the other side. Before the glass goes back, check that nothing on either sling touches a post, a guide or a ball path, and that both slingshots still kick freely. Then refit the glass and play a test game.

Show off the originals

The stand that carried your slings has six pins on the same spacing as the game. Your original plastics drop straight onto them, so the stand becomes a display for the parts you took out.

A slingshot rubber ring fits the groove in each set of posts if you want the full look.



The stand, shown with Sonic Slings on it.

Care

- Wipe with a dry microfibre cloth. No solvents or polish on the printed face.
- Keep away from heat above about 55 °C (130 °F). Under the glass of an LED-lit game is fine. A hot car is not.
- Whenever the glass is off, check that each cap is snug.

If a cap works loose

Each cap is held by one screw that comes up through the plate and the spring.


1. Take the sling out of the game.
2. Hold the cap and tighten the screw from underneath with a 2 mm hex key.
3. Snug is enough. The thread is brass set in plastic.

If anything breaks, we replace it

If any part of your Sonic Slings breaks in normal play, message us with a photo and we will send a replacement part free of charge. Caps and springs are separate parts, so a repair is one screw and two minutes.

Reach us through the Donutland Pinball shop on Pinside.

> Colours can vary slightly between filament batches. Small marks from 3D printing are normal and are not defects.

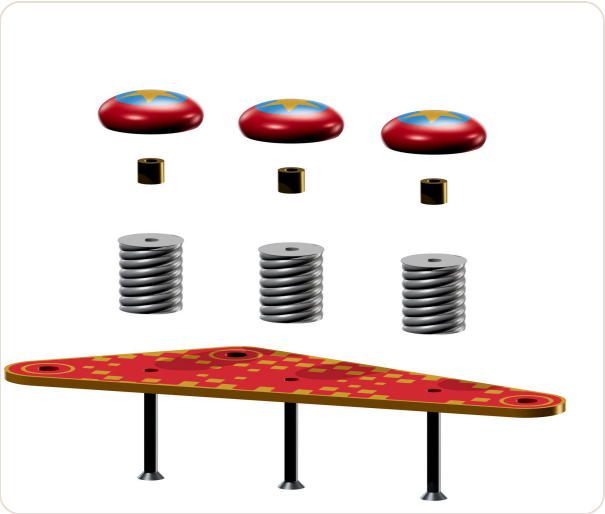

What each sling is made of

From the top: three star caps, each with a brass threaded insert; three springs; the checker plate; three M3 × 20 screws that come up from underneath.

Every one of these can be replaced on its own. Tell us which part you need and which side it is on.

Donutland Pinball is not affiliated with or endorsed by Jersey Jack Pinball or SEGA.