

STUAART LoadCell + LoadCellController

2.1

Generated by Doxygen 1.17.0

1 LoadCell and LoadCellController libraries for STUAART	1
1.1 Overview	1
1.2 Minimal usage	1
1.3 HX711 corruption handling	2
1.4 References	2
2 Todo List	3
3 Topic Index	5
3.1 Topics	5
4 Hierarchical Index	7
4.1 Class Hierarchy	7
5 Class Index	9
5.1 Class List	9
6 File Index	11
6.1 File List	11
7 Topic Documentation	13
7.1 LoadCell functions for LoadCellController	13
7.1.1 Detailed Description	14
7.1.2 Function Documentation	15
7.1.2.1 begin()	15
7.1.2.2 get_mouse_weight()	15
7.1.2.3 get_offset()	15
7.1.2.4 get_raw_value()	16
7.1.2.5 get_scale()	16
7.1.2.6 get_scale_coeff_n_readings()	16
7.1.2.7 get_tare_n_readings()	17
7.1.2.8 get_weight()	17
7.1.2.9 get_weight_n_readings()	17
7.1.2.10 get_weight_with_auto_recalibration()	18
7.1.2.11 is_ready()	18
7.1.2.12 mass_from_raw()	18
7.1.2.13 power_down()	19
7.1.2.14 power_up()	19
7.1.2.15 read_raw_average()	19
7.1.2.16 read_scale_coeff_average()	20
7.1.2.17 read_tare_average()	20
7.1.2.18 set_all_loadcells_scale_coeff_n_readings()	20
7.1.2.19 set_all_loadcells_tare_n_readings()	21
7.1.2.20 set_all_loadcells_weight_n_readings()	21

7.1.2.21 set_mouse_weight()	21
7.1.2.22 set_offset()	21
7.1.2.23 set_scale()	22
7.1.2.24 set_scale_coeff_n_readings()	22
7.1.2.25 set_tare_n_readings()	22
7.1.2.26 set_weight_n_readings()	23
7.1.2.27 tare()	23
7.1.2.28 wait_ready()	23
7.1.2.29 wait_ready_retry()	24
7.1.2.30 wait_ready_timeout()	24
8 Class Documentation	25
8.1 LoadCell Class Reference	25
8.1.1 Detailed Description	26
8.1.2 Constructor & Destructor Documentation	27
8.1.2.1 LoadCell()	27
8.1.3 Member Function Documentation	27
8.1.3.1 get_raw_value()	27
8.1.3.2 get_scale_coeff_n_readings()	27
8.1.3.3 get_tare_n_readings()	27
8.1.3.4 get_weight()	28
8.1.3.5 get_weight_n_readings()	28
8.1.3.6 read_raw_average()	28
8.1.3.7 read_scale_coeff_average()	28
8.1.3.8 read_tare_average()	29
8.1.3.9 safe_read()	29
8.1.3.10 set_scale_coeff_n_readings()	29
8.1.3.11 set_tare_n_readings()	29
8.1.3.12 set_weight_n_readings()	30
8.1.3.13 tare()	30
8.1.4 Member Data Documentation	30
8.1.4.1 scale_coeff_n_readings	30
8.1.4.2 tare_n_readings	30
8.1.4.3 weight_n_readings	30
8.2 LoadCellController Class Reference	31
8.2.1 Detailed Description	34
8.2.2 Constructor & Destructor Documentation	35
8.2.2.1 LoadCellController()	35
8.2.3 Member Function Documentation	35
8.2.3.1 add_loadcell() [1/2]	35
8.2.3.2 add_loadcell() [2/2]	35
8.2.3.3 calculate_scale_coeff()	36

8.2.3.4	calibrate_all_loadcells()	36
8.2.3.5	calibrate_both_params()	36
8.2.3.6	calibrate_scale_coeff()	36
8.2.3.7	calibrate_tare_offset()	37
8.2.3.8	clear_eeprom()	37
8.2.3.9	determine_offset()	37
8.2.3.10	determine_scale_coeff()	38
8.2.3.11	easy_calibration_with_params()	38
8.2.3.12	easy_handle_exceptions()	39
8.2.3.13	easy_read_from_persistent_memory_with_params()	40
8.2.3.14	easy_save_to_persistent_memory_with_params()	40
8.2.3.15	easy_start_with_params()	40
8.2.3.16	easy_start_with_questions()	42
8.2.3.17	get_offset_eeprom_adress()	42
8.2.3.18	get_offset_file_name()	43
8.2.3.19	get_scale_coeff_eeprom_adress()	43
8.2.3.20	get_scale_coeff_file_name()	44
8.2.3.21	is_loadcell_num_in_range()	44
8.2.3.22	number_of_loadcells()	44
8.2.3.23	read_all_scale_coeff_from_persistent_memory()	45
8.2.3.24	read_offset_from_persistent_memory()	45
8.2.3.25	read_scale_coeff_from_persistent_memory()	45
8.2.3.26	save_offset_to_persistent_memory()	46
8.2.3.27	save_scale_coeff_to_persistent_memory()	46
8.2.3.28	tare_all_loadcells()	46
8.2.4	Member Data Documentation	47
8.2.4.1	loadcells	47
8.2.4.2	mouse_weight	47
8.2.4.3	n_loadcell	47
9	File Documentation	49
9.1	LoadCell.cpp File Reference	49
9.1.1	Macro Definition Documentation	49
9.1.1.1	ARCH_ESPRESSIF	49
9.1.1.2	DOUT_MODE	49
9.1.1.3	FAST_CPU	50
9.1.1.4	HAS_ATOMIC_BLOCK	50
9.1.1.5	IS_FREE_RTOS	50
9.1.1.6	SHIFTIN_WITH_SPEED_SUPPORT	50
9.1.2	Function Documentation	50
9.1.2.1	hx711_corrupted()	50
9.2	LoadCell.h File Reference	50

9.3 LoadCell.h	51
9.4 LoadCellController.cpp File Reference	51
9.5 LoadCellController.h File Reference	51
9.6 LoadCellController.h	52
9.7 STUAART.ino File Reference	55

Chapter 1

LoadCell and LoadCellController libraries for STUAART

1.1 Overview

Two custom Arduino classes for the STUAART automated mouse weighing system :

- [LoadCell functions for LoadCellController](#) extends bogde/HX711 with configurable averaging counts for the three usage contexts (weight reading, tare calibration, scale-coefficient calibration) and with a defensive `safe_read()` that filters out three known HX711 corruption signatures (0xFFFFFFFF, 0x800000, 0x7FFFFFFF).
- [LoadCellController](#) manages up to 10 [LoadCell](#) instances per cage, persists calibration to SPIFFS (ESP32) or EEPROM (AVR), and provides ready-to-use start-up routines.

Both classes are compiled directly with the sketch (next to the `.ino`), so cloning the repo and opening [Firmware/STUAART/STUAART.ino](#) is enough to build the firmware.

1.2 Minimal usage

```
#include "LoadCell.h"
#include "LoadCellController.h"

LoadCell loadcell;
LoadCellController controller;

void setup() {
  Serial.begin(115200);
  controller.add_loadcell(loadcell);
  controller.easy_start_with_params(
    1,      // loadcell number
    27,     // DOUT (avoid GPIO 6-11 on ESP32 : flash bus)
    17,     // SCK
    true,   // calibrate offset
    true,   // calibrate scale
    false,  // read offset from memory
    false,  // read scale from memory
    true,   // save offset to memory
    true,   // save scale to memory
    0,      // manual tare offset
    0,      // manual scale coeff
    128     // gain
  );
}

void loop() {
  controller.wait_ready_timeout(1, 1000);
  Serial.println(controller.get_weight(1));
}
```

1.3 HX711 corruption handling

The HX711 24-bit ADC can return three values that are physically impossible during normal operation of a strain-gauge load cell :

- `-1L (0xFFFFFFFF)` : DOUT was held HIGH during the read, typically because an interrupt stretched a SCK pulse beyond 60 us and the chip entered power-down, OR because the DOUT pin shares a pad with the ESP32 internal flash SPI bus (GPIO 6 to 11).
- `-8388608L (0x800000)` : 24-bit negative saturation, observed when the boot tare hits a fully corrupted read on a flash-pin DOUT.
- `+8388607L (0x7FFFFFFF)` : 24-bit positive saturation, mirror image.

`LoadCell::safe_read` retries up to three times when any of these appears, and the three averaging methods exclude such samples from the mean rather than averaging garbage in. Callers should treat a returned `-1L` as an invalid reading (returned only if every retry was still corrupt).

For the GPIO 9 case, the software workaround is partial : intermediate bit-patterns from the flash bus can still corrupt occasional reads without matching one of the three signatures. The proper fix is a hardware strap that moves the DOUT off the flash pin.

1.4 References

- bogde/HX711 : <https://github.com/bogde/HX711>
- STUAART repo : <https://github.com/DCC-Lab/STUAART>

Author

Nathan Bérubé, Valérie Pineau Noël, Daniel C. Côté

Chapter 2

Todo List

Member [LoadCellController::easy_start_with_questions](#) (byte loadcell_num, byte dout, byte pd_sck, byte gain=128)

This could be done in the future to simplify the start-up of a [LoadCell](#) especially for non-programmers.

Chapter 3

Topic Index

3.1 Topics

Here is a list of all topics with brief descriptions:

LoadCell functions for LoadCellController	13
---	----

Chapter 4

Hierarchical Index

4.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

HX711	
LoadCell	25
LoadCellController	31

Chapter 5

Class Index

5.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

LoadCell	This library extends the functionality of the HX711 to make it compatible with the LoadCellController library	25
LoadCellController	This library allows to control and manage many load cells with a LoadCellController	31

Chapter 6

File Index

6.1 File List

Here is a list of all files with brief descriptions:

LoadCell.cpp	49
LoadCell.h	50
LoadCellController.cpp	51
LoadCellController.h	51
STUART.ino	55

Chapter 7

Topic Documentation

7.1 LoadCell functions for LoadCellController

Functions that are the member functions of the [LoadCell](#) class for the [LoadCellController](#) class. They are duplicated in the [LoadCellController](#) class to access the [loadcells](#) through the [LoadCellController](#) instance.

Functions

- float [LoadCellController::get_offset](#) (byte loadcell_num)
Get the offset value for a given [LoadCell](#).
- void [LoadCellController::set_offset](#) (byte loadcell_num, float offset)
Set the offset value for a given [LoadCell](#).
- float [LoadCellController::get_scale](#) (byte loadcell_num)
Get the scale coefficient value for a given [LoadCell](#).
- void [LoadCellController::set_scale](#) (byte loadcell_num, float scale)
Set the scale coefficient value for a given [LoadCell](#).
- void [LoadCellController::set_tare_n_readings](#) (byte loadcell_num, int n_readings)
Set the number of readings averaged for calibration of offset for a given [LoadCell](#).
- byte [LoadCellController::get_tare_n_readings](#) (byte loadcell_num)
Get the number of readings averaged for calibration of offset for a given [LoadCell](#).
- void [LoadCellController::set_scale_coeff_n_readings](#) (byte loadcell_num, int n_readings)
Set the number of readings averaged for calibration of scale coefficient for a given [LoadCell](#).
- byte [LoadCellController::get_scale_coeff_n_readings](#) (byte loadcell_num)
Get the number of readings averaged for calibration of scale calibration for a given [LoadCell](#).
- void [LoadCellController::set_weight_n_readings](#) (byte loadcell_num, int n_readings)
Set the number of readings averaged for weight measurements for a given [LoadCell](#).
- byte [LoadCellController::get_weight_n_readings](#) (byte loadcell_num)
Get the number of readings averaged for measurements of a given [LoadCell](#)'s weight.
- void [LoadCellController::set_all_loadcells_tare_n_readings](#) (int n_readings)
Set the number of readings averaged for calibration of offset for all [LoadCells](#).
- void [LoadCellController::set_all_loadcells_scale_coeff_n_readings](#) (int n_readings)
Set the number of readings averaged for calibration of scale coefficient for all [LoadCells](#).
- void [LoadCellController::set_all_loadcells_weight_n_readings](#) (int n_readings)
Set the number of readings averaged for weight measurements for all [LoadCells](#).
- void [LoadCellController::set_mouse_weight](#) (float weight)

- *Set the value of member variable [mouse_weight](#).*
 • float [LoadCellController::get_mouse_weight](#) ()
- *Get the value of member variable [mouse_weight](#).*
 • long [LoadCellController::read_raw_average](#) (byte loadcell_num)
 • *Read the output of the [LoadCell](#) and average [weight_n_readings](#) readings.*
- long [LoadCellController::read_tare_average](#) (byte loadcell_num)
 • *Read the output of the [LoadCell](#) and average [tare_n_readings](#) readings.*
- long [LoadCellController::read_scale_coeff_average](#) (byte loadcell_num)
 • *Read the output of the [LoadCell](#) and average [scale_coeff_n_readings](#) readings.*
- double [LoadCellController::get_raw_value](#) (byte loadcell_num)
 • *Read the raw output of the [LoadCell](#) and subtracts the offset.*
- float [LoadCellController::get_weight](#) (byte loadcell_num)
 • *Read the weight of the object currently on the [LoadCell](#).*
- float [LoadCellController::get_weight_with_auto_recalibration](#) (byte loadcell_num, float threshold=0.33)
 • *Read the weight of the object currently on the [LoadCell](#) and recalibrate the offset.*
- float [LoadCellController::mass_from_raw](#) (byte loadcell_num, long raw)
 • *Calculate mass from a raw reading.*
- void [LoadCellController::tare](#) (byte loadcell_num)
 • *Read the raw output of the [LoadCell](#) and set this value to the offset.*
- void [LoadCellController::begin](#) (byte loadcell_num, byte dout, byte pd_sck, byte gain=128)
 • *Begin the communication with the HX711 for a given [LoadCell](#).*
- bool [LoadCellController::is_ready](#) (byte loadcell_num)
 • *Verify if the HX711 is ready for a reading.*
- void [LoadCellController::wait_ready](#) (byte loadcell_num, unsigned long delay_ms=0)
 • *Suspend the execution of the code until the HX711 becomes ready.*
- bool [LoadCellController::wait_ready_retry](#) (byte loadcell_num, int retries=3, unsigned long delay_ms=0)
 • *Suspend the execution of the code until the HX711 becomes ready or for a given number of retries.*
- bool [LoadCellController::wait_ready_timeout](#) (byte loadcell_num, unsigned long timeout=1000, unsigned long delay_ms=0)
 • *Suspend the execution of the code until the HX711 becomes ready or for a given timeout.*
- void [LoadCellController::power_up](#) (byte loadcell_num)
 • *Wake up the chip after power down mode.*
- void [LoadCellController::power_down](#) (byte loadcell_num)
 • *Wake up the chip after power down mode.*

7.1.1 Detailed Description

Functions that are the member functions of the [LoadCell](#) class for the [LoadCellController](#) class. They are duplicated in the [LoadCellController](#) class to access the [loadcells](#) through the [LoadCellController](#) instance.

Note

[LoadCell](#) class member functions can also be accessed through the [LoadCell](#) instance. The two possibilities are available.

7.1.2 Function Documentation

7.1.2.1 begin()

```
void LoadCellController::begin (
    byte loadcell_num,
    byte dout,
    byte pd_sck,
    byte gain = 128)
```

Begin the communication with the HX711 for a given [LoadCell](#).

This function begins the communication with the HX711 that is performing a voltage reading of the Wheatstone bridge on the load cell to convert it in a 24-bits digital raw output. This function needs to be called before performing measurements of weight.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>dout</i>	Digital pin (or analog) connected to the DOUT output pin of the HX711.
<i>pd_sck</i>	Digital pin (or analog) connected to the SCK output of the HX711.
<i>gain</i>	Gain of the HX711. Default is 128.

The *gain* argument can take the following values: 128, 64 and 32. For a gain of 128 and 64, channel A of the HX711 should be used. For a gain of 32, channel B should be used.

7.1.2.2 get_mouse_weight()

```
float LoadCellController::get_mouse_weight ()
```

Get the value of member variable [mouse_weight](#).

This function gets the weight of the mouse in the cage controlled by the [LoadCellController](#).

Returns

Weight of the mouse.

7.1.2.3 get_offset()

```
float LoadCellController::get_offset (
    byte loadcell_num)
```

Get the offset value for a given [LoadCell](#).

This function gets the offset member variable for a given [LoadCell](#) through the controller.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

Offset value.

7.1.2.4 get_raw_value()

```
double LoadCellController::get_raw_value (  
    byte loadcell_num)
```

Read the raw output of the [LoadCell](#) and subtracts the offset.

This function reads the average of readings of the [LoadCell](#) raw output with [read_raw_average\(\)](#) then subtracts the offset accessed with `HX711::get_offset()`.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

The raw averaged reading of the [LoadCell](#) difference with the offset.

7.1.2.5 get_scale()

```
float LoadCellController::get_scale (  
    byte loadcell_num)
```

Get the scale coefficient value for a given [LoadCell](#).

This function gets the scale coefficient member variable for a given [LoadCell](#) through the controller.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

Scale coefficient value.

7.1.2.6 get_scale_coeff_n_readings()

```
byte LoadCellController::get_scale_coeff_n_readings (  
    byte loadcell_num)
```

Get the number of readings averaged for calibration of scale calibration for a given [LoadCell](#).

This function sets the number of readings averaged for calibration of offset for a given [LoadCell](#) through the controller.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

Number of readings averaged for scale coefficient calibration.

7.1.2.7 get_tare_n_readings()

```
byte LoadCellController::get_tare_n_readings (
    byte loadcell_num)
```

Get the number of readings averaged for calibration of offset for a given [LoadCell](#).

This function sets the number of readings averaged for calibration of offset for a given [LoadCell](#) through the controller.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

Number of readings averaged for offset calibration.

7.1.2.8 get_weight()

```
float LoadCellController::get_weight (
    byte loadcell_num)
```

Read the weight of the object currently on the [LoadCell](#).

This function reads the average of readings of the [LoadCell](#) raw output with [read_raw_average\(\)](#) before converting this average value to a mass value using the calibration function -> $\text{output} = \text{scale_coeff} * \text{mass} + \text{offset}$.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

The averaged mass of the object on the [LoadCell](#).

7.1.2.9 get_weight_n_readings()

```
byte LoadCellController::get_weight_n_readings (
    byte loadcell_num)
```

Get the number of readings averaged for measurements of a given [LoadCell](#)'s weight.

This function retrieves the number of readings that are averaged for measurements of a given [LoadCell](#)'s weight.

Parameters

<i>loadcell_num</i>	loadcell_num Number of the LoadCell .
---------------------	---

Returns

Number of reading averaged for a weight measurements.

7.1.2.10 `get_weight_with_auto_recalibration()`

```
float LoadCellController::get_weight_with_auto_recalibration (
    byte loadcell_num,
    float threshold = 0.33)
```

Read the weight of the object currently on the [LoadCell](#) and recalibrate the offset.

This member function can be used to perform a weight reading of an object on the [LoadCell](#) will verifying if no object is on the [LoadCell](#). If it is the case, a recalibration of the [LoadCell](#) offset will be done. The threshold to termine if the [LoadCell](#) is empty is calculated from the [mouse_weight](#) and the `threshold`. If their is something on the [LoadCell](#), a weight reading is normally performed. The function returns the reading value in both case, but if a recalibration is done, the reading will most likely be 0g.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>threshold</i>	Fraction of mouse_weight used as the threshold to determine if the LoadCell is empty.

Returns

The averaged mass of the object on the [LoadCell](#).

7.1.2.11 `is_ready()`

```
bool LoadCellController::is_ready (
    byte loadcell_num)
```

Verify if the HX711 is ready for a reading.

This function verifies if the HX711 is ready for retrieval the next reading. According to the datasheet of the HX711, when output data is not ready for retrieval, digital output pin DOUT is high. Serial clock input PD_SCK should be low. When DOUT goes to low, it indicates data is ready for retrieval. The latter condition is verified in this member function.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

Boolean showing if the HX711 is ready for retrieval.

7.1.2.12 `mass_from_raw()`

```
float LoadCellController::mass_from_raw (
    byte loadcell_num,
    long raw)
```

Calculate mass from a raw reading.

This member function takes as an input a raw reading and calculates the mass associated to it. The calculation requires the scale coefficient and the offset of the [LoadCell](#).

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

<i>raw</i>	Raw reading.
------------	--------------

Returns

Mass associated to raw measurement

7.1.2.13 power_down()

```
void LoadCellController::power_down (  
    byte loadcell_num)
```

Wake up the chip after power down mode.

This function powers down the HX711 after calling [power_up\(\)](#) member function.

Note

This function doesn't stop the alimentation of the Wheatstone on the load cell, only suspend the HX711.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

7.1.2.14 power_up()

```
void LoadCellController::power_up (  
    byte loadcell_num)
```

Wake up the chip after power down mode.

This function powers up the HX711 after calling [power_down\(\)](#) member function.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

7.1.2.15 read_raw_average()

```
long LoadCellController::read_raw_average (  
    byte loadcell_num)
```

Read the output of the [LoadCell](#) and average `weight_n_readings` readings.

This function does `weight_n_readings` readings of the raw output of the [LoadCell](#) and calculates their average before returning the average raw output.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

The raw averaged reading of the [LoadCell](#).

7.1.2.16 read_scale_coeff_average()

```
long LoadCellController::read_scale_coeff_average (
    byte loadcell_num)
```

Read the output of the [LoadCell](#) and average `scale_coeff_n_readings` readings.

This function does `scale_coeff_n_readings` readings of the raw output of the [LoadCell](#) and calculates their average before returning the average raw output. It is useful inside calibration scripts.

Parameters

<code>loadcell_num</code>	Number of the LoadCell .
---------------------------	--

Returns

The raw averaged reading of the [LoadCell](#) for the scale coefficient calibration.

7.1.2.17 read_tare_average()

```
long LoadCellController::read_tare_average (
    byte loadcell_num)
```

Read the output of the [LoadCell](#) and average `tare_n_readings` readings.

This function does `tare_n_readings` readings of the raw output of the [LoadCell](#) and calculates their average before returning the average raw output. It is useful inside calibration scripts.

Parameters

<code>loadcell_num</code>	Number of the LoadCell .
---------------------------	--

Returns

The raw averaged reading of the [LoadCell](#) for the tare offset calibration.

7.1.2.18 set_all_loadcells_scale_coeff_n_readings()

```
void LoadCellController::set_all_loadcells_scale_coeff_n_readings (
    int n_readings)
```

Set the number of readings averaged for calibration of scale coefficient for all LoadCells.

This function sets the number of readings to be averaged for calibration of scale coefficient for all LoadCells.

Parameters

<code>n_readings</code>	Number of readings averaged for calibration of scale coefficient.
-------------------------	---

7.1.2.19 set_all_loadcells_tare_n_readings()

```
void LoadCellController::set_all_loadcells_tare_n_readings (
    int n_readings)
```

Set the number of readings averaged for calibration of offset for all LoadCells.

This function sets the number of readings to be averaged for calibration of offset for all LoadCells.

Parameters

<i>n_readings</i>	Number of readings averaged for calibration of offset.
-------------------	--

7.1.2.20 set_all_loadcells_weight_n_readings()

```
void LoadCellController::set_all_loadcells_weight_n_readings (
    int n_readings)
```

Set the number of readings averaged for weight measurements for all LoadCells.

This function sets the number of readings to be averaged for weight measurements for all LoadCells.

Parameters

<i>n_readings</i>	Number of readings averaged for weight measurements.
-------------------	--

7.1.2.21 set_mouse_weight()

```
void LoadCellController::set_mouse_weight (
    float weight)
```

Set the value of member variable [mouse_weight](#).

This function sets the weight of the mouse in the cage controlled by the [LoadCellController](#). This function will only set the input to the member variable [mouse_weight](#) if it is positive. If the input is negative, the default value is kept.

Parameters

<i>weight</i>	Weight of the mouse.
---------------	----------------------

7.1.2.22 set_offset()

```
void LoadCellController::set_offset (
    byte loadcell_num,
    float offset)
```

Set the offset value for a given [LoadCell](#).

This function sets the offset member variable for a given [LoadCell](#) through the controller.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

<i>offset</i>	Offset value.
---------------	---------------

7.1.2.23 `set_scale()`

```
void LoadCellController::set_scale (
    byte loadcell_num,
    float scale)
```

Set the scale coefficient value for a given [LoadCell](#).

This function sets the scale coefficient member variable for a given [LoadCell](#) through the controller.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>scale</i>	Scale coefficient value.

7.1.2.24 `set_scale_coeff_n_readings()`

```
void LoadCellController::set_scale_coeff_n_readings (
    byte loadcell_num,
    int n_readings)
```

Set the number of readings averaged for calibration of scale coefficient for a given [LoadCell](#).

This function sets the number of readings averaged for calibration of scale coefficient for a given [LoadCell](#) through the controller.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>n_readings</i>	Number of readings.

7.1.2.25 `set_tare_n_readings()`

```
void LoadCellController::set_tare_n_readings (
    byte loadcell_num,
    int n_readings)
```

Set the number of readings averaged for calibration of offset for a given [LoadCell](#).

This function sets the number of readings averaged for calibration of offset for a given [LoadCell](#) through the controller.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

<i>n_readings</i>	Number of readings.
-------------------	---------------------

7.1.2.26 set_weight_n_readings()

```
void LoadCellController::set_weight_n_readings (  
    byte loadcell_num,  
    int n_readings)
```

Set the number of readings averaged for weight measurements for a given [LoadCell](#).

This function sets the number of readings to be averaged for weight measurements for a given [LoadCell](#) through the controller.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>n_readings</i>	Number of reading averaged for a weight measurements.

7.1.2.27 tare()

```
void LoadCellController::tare (  
    byte loadcell_num)
```

Read the raw output of the [LoadCell](#) and set this value to the offset.

This function does tare_n_reading readings to get the average for the offset. It then sets this value to the member variable OFFSET.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

7.1.2.28 wait_ready()

```
void LoadCellController::wait_ready (  
    byte loadcell_num,  
    unsigned long delay_ms = 0)
```

Suspend the execution of the code until the HX711 becomes ready.

This function suspends the execution of the code with a while loop relying on the [is_ready\(\)](#) condition. When called, this function will stop temporarily the code execution until the HX711 becomes ready.

Warning

Using this function can completely stop the code execution if a technical problem happens with a HX711. It is safer to handle the retrieval of a reading with [wait_ready_retry\(\)](#) or [wait_ready_timeout\(\)](#)

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

<i>delay_ms</i>	Delay between two readiness checks of the HX711, in milliseconds. Default is 0.
-----------------	---

7.1.2.29 wait_ready_retry()

```
bool LoadCellController::wait_ready_retry (
    byte loadcell_num,
    int retries = 3,
    unsigned long delay_ms = 0)
```

Suspend the execution of the code until the HX711 becomes ready or for a given number of retries.

This function suspends the execution of the code with a while loop relying on the [is_ready\(\)](#) condition. When called, this function will stop temporarily the code execution until the HX711 becomes ready or for a given number of retries. This prevents from a endless suspension of the code.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>retries</i>	Number of retries to verify the "readiness state" of the HX711. Default is 3.
<i>delay_ms</i>	Delay between two verification of the "readiness state" of the HX711. Default is 0.

7.1.2.30 wait_ready_timeout()

```
bool LoadCellController::wait_ready_timeout (
    byte loadcell_num,
    unsigned long timeout = 1000,
    unsigned long delay_ms = 0)
```

Suspend the execution of the code until the HX711 becomes ready or for a given timeout.

This function suspends the execution of the code with a while loop relying on the [is_ready\(\)](#) condition. When called, this function will stop temporarily the code execution until the HX711 becomes ready or for a given timeout. If after the timeout the HX711 is not ready for retrieval, the code execution will continue. This prevents from a endless suspension of the code.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>timeout</i>	Timeout of the suspension of execution of the code in milliseconds. Default is 1000 ms.
<i>delay_ms</i>	Delay between two verification of the "readiness state" of the HX711 in milliseconds. Default is 0.

Chapter 8


Class Documentation

8.1 LoadCell Class Reference

This library extends the functionality of the HX711 to make it compatible with the [LoadCellController](#) library.

```
#include <LoadCell.h>
```

Inheritance diagram for LoadCell:

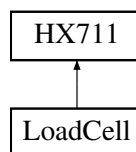

Public Member Functions

- [LoadCell](#) ()
Construct a [LoadCell](#) object.
- long [safe_read](#) (byte max_retries=3)
Read the HX711 with corruption detection and retry.
- long [read_raw_average](#) ()
Read the output of the [LoadCell](#) and average [weight_n_readings](#) readings.
- long [read_tare_average](#) ()
Read the output of the [LoadCell](#) and average [tare_n_readings](#) readings.
- long [read_scale_coeff_average](#) ()
Read the output of the [LoadCell](#) and average [scale_coeff_n_readings](#) readings.
- double [get_raw_value](#) ()
Read the raw output of the [LoadCell](#) and subtracts the offset.
- float [get_weight](#) ()
Read the weight of the object currently on the [LoadCell](#).
- void [tare](#) ()
Read the raw output of the [LoadCell](#) and set this value to the offset.
- void [set_tare_n_readings](#) (int tare_n_readings)
Set the number of readings averaged for the determination of the tare offset.
- int [get_tare_n_readings](#) ()

- Get the number of readings averaged for the determination of the tare offset.*
 - void `set_scale_coeff_n_readings` (int scale_coeff_n_readings)
 - Set the number of readings averaged for the determination of the scale coefficient.*
 - int `get_scale_coeff_n_readings` ()
 - Get the number of readings averaged for the determination of the scale coefficient.*
 - void `set_weight_n_readings` (int weight_n_readings)
 - Set the number of readings averaged for a weight reading.*
 - int `get_weight_n_readings` ()
 - Get the number of readings averaged for a weight reading.*

Protected Attributes

- byte `tare_n_readings` = 50
 - Number of readings averaged to determine the tare offset.*
- byte `scale_coeff_n_readings` = 50
 - Number of readings averaged to determine the scale coefficient.*
- byte `weight_n_readings` = 5
 - Number of readings averaged for a weight reading.*

8.1.1 Detailed Description

This library extends the functionality of the HX711 to make it compatible with the [LoadCellController](#) library.

This Arduino library allows to specify the number of readings averaged for the three possible situations:

- Weight reading
- Output reading for offset calibration
- Output reading for scale coefficient calibration

The encapsulation of these parameters requires the rewriting of a few member functions of the HX711 library. They do the same thing but, with the encapsulation of the three parameters listed above, they don't require any arguments.

Most importantly, the encapsulation of these parameters is useful for the [LoadCellController](#) library, which will control many LoadCells.

HX711 library: <https://github.com/bogde/HX711>

[LoadCellController](#) library: <https://github.com/DCC-Lab/IntelligentCage/tree/master/Loadcell/Arduino%20libraries/LoadCellControllerlibrary>

Author

Nathan Bérubé

Date

August 14, 2023

Version

1.0.0

8.1.2 Constructor & Destructor Documentation

8.1.2.1 LoadCell()

```
LoadCell::LoadCell ()
```

Construct a [LoadCell](#) object.

8.1.3 Member Function Documentation

8.1.3.1 get_raw_value()

```
double LoadCell::get_raw_value ()
```

Read the raw output of the [LoadCell](#) and subtracts the offset.

This function reads the average of readings of the [LoadCell](#) raw output with [read_raw_average\(\)](#) then subtracts the offset accessed with `HX711::get_offset()`.

Returns

The raw averaged reading of the [LoadCell](#) difference with the offset.

8.1.3.2 get_scale_coeff_n_readings()

```
int LoadCell::get_scale_coeff_n_readings ()
```

Get the number of readings averaged for the determination of the scale coefficient.

This function returns the member variable [scale_coeff_n_readings](#).

Returns

The number of readings averaged for the determination of the tare offset.

8.1.3.3 get_tare_n_readings()

```
int LoadCell::get_tare_n_readings ()
```

Get the number of readings averaged for the determination of the tare offset.

This function returns the member variable [tare_n_readings](#).

Returns

The number of readings averaged for the determination of the tare offset.

8.1.3.4 get_weight()

```
float LoadCell::get_weight ()
```

Read the weight of the object currently on the [LoadCell](#).

This function reads the average of readings of the [LoadCell](#) raw output with [read_raw_average\(\)](#) before converting this average of raw output to a mass value using the calibration function -> $\text{output} = \text{scale_coeff} * \text{mass} + \text{offset}$.

Returns

The averaged mass of the object on the [LoadCell](#).

8.1.3.5 get_weight_n_readings()

```
int LoadCell::get_weight_n_readings ()
```

Get the number of readings averaged for a weight reading.

This function returns the member variable [scale_coeff_n_readings](#).

Returns

The number of readings averaged for the determination of the tare offset.

8.1.3.6 read_raw_average()

```
long LoadCell::read_raw_average ()
```

Read the output of the [LoadCell](#) and average [weight_n_readings](#) readings.

This function does [weight_n_readings](#) readings of the raw output of the [LoadCell](#) and calculates their average before returning the average raw output.

Returns

The raw averaged reading of the [LoadCell](#).

8.1.3.7 read_scale_coeff_average()

```
long LoadCell::read_scale_coeff_average ()
```

Read the output of the [LoadCell](#) and average [scale_coeff_n_readings](#) readings.

This function does [scale_coeff_n_readings](#) readings of the raw output of the [LoadCell](#) and calculates their average before returning the average raw output. It is useful inside calibration scripts.

Returns

The raw averaged reading of the [LoadCell](#) for the scale coefficient calibration.

8.1.3.8 read_tare_average()

```
long LoadCell::read_tare_average ()
```

Read the output of the [LoadCell](#) and average [tare_n_readings](#) readings.

This function does [tare_n_readings](#) readings of the raw output of the [LoadCell](#) and calculates their average before returning the average raw output. It is useful inside calibration scripts.

Returns

The raw averaged reading of the [LoadCell](#) for the tare offset calibration.

8.1.3.9 safe_read()

```
long LoadCell::safe_read (
    byte max_retries = 3)
```

Read the HX711 with corruption detection and retry.

Rejects three known corruption signatures and retries up to `max_retries` times: 0xFFFFFFFF (-1, DOUT held HIGH by interrupt or flash bus contention on GPIO 6-11), 0x800000 (-8388608, negative saturation), and 0x7FFFFFFF (+8388607, positive saturation). None of these can occur during normal operation of a mouse-scale load cell. Returns the last raw value; callers should treat -1L as invalid (returned only if every retry was still corrupt).

8.1.3.10 set_scale_coeff_n_readings()

```
void LoadCell::set_scale_coeff_n_readings (
    int scale_coeff_n_readings)
```

Set the number of readings averaged for the determination of the scale coefficient.

This function sets the member variable `scale_coeff_n_readings`. It also limits the range of value that is possible for this member variable -> [scale_coeff_n_readings](#) [1, 255].

Anything below 1 will be set to 1 and anything above 255 will be set to 255 to be able to store in a byte.

Parameters

scale_coeff_n_readings	The number of readings averaged for the determination of the tare offset.
--	---

8.1.3.11 set_tare_n_readings()

```
void LoadCell::set_tare_n_readings (
    int tare_n_readings)
```

Set the number of readings averaged for the determination of the tare offset.

This function sets the member variable `tare_n_readings`. It also limits the range of value that is possible for this member variable -> [tare_n_readings](#) [1, 255].

Anything below 1 will be set to 1 and anything above 255 will be set to 255 to be able to store in a byte.

Parameters

tare_n_readings	The number of readings averaged for the determination of the tare offset.
---------------------------------	---

8.1.3.12 set_weight_n_readings()

```
void LoadCell::set_weight_n_readings (
    int weight_n_readings)
```

Set the number of readings averaged for a weight reading.

This function sets the member variable `weight_n_readings`. It also limits the range of value that is possible for this member variable -> `weight_n_readings` [1, 255].

Anything below 1 will be set to 1 and anything above 255 will be set to 255 to be able to store in a byte.

Parameters

<code>weight_n_readings</code>	The number of readings averaged for the determination of the tare offset.
--------------------------------	---

8.1.3.13 tare()

```
void LoadCell::tare ()
```

Read the raw output of the [LoadCell](#) and set this value to the offset.

This function does tare_n_reading readings to get the average for the offset. It then sets this value to the member variable OFFSET that is private.

8.1.4 Member Data Documentation

8.1.4.1 scale_coeff_n_readings

```
byte LoadCell::scale_coeff_n_readings = 50 [protected]
```

Number of readings averaged to determine the scale coefficient.

8.1.4.2 tare_n_readings

```
byte LoadCell::tare_n_readings = 50 [protected]
```

Number of readings averaged to determine the tare offset.

8.1.4.3 weight_n_readings

```
byte LoadCell::weight_n_readings = 5 [protected]
```

Number of readings averaged for a weight reading.

The documentation for this class was generated from the following files:

- [LoadCell.h](#)
- [LoadCell.cpp](#)

8.2 LoadCellController Class Reference

This library allows to control and manage many load cells with a [LoadCellController](#).

```
#include <LoadCellController.h>
```

Public Member Functions

- [LoadCellController](#) ()
Construct a [LoadCellController](#) object.
- void [add_loadcell](#) ([LoadCell](#) &loadcell)
Add a new [LoadCell](#) to the [LoadCellController](#) without pin specification.
- void [add_loadcell](#) ([LoadCell](#) &loadcell, byte dout, byte sck, byte gain=128)
Add a new [LoadCell](#) to the [LoadCellController](#) with pin specification.
- void [easy_start_with_params](#) (byte loadcell_num, byte dout, byte pd_sck, bool calibrate_offset=false, bool calibrate_scale=false, bool read_offset_persistent_memory=false, bool read_scale_persistent_memory=false, bool save_offset_persistent_memory=false, bool save_scale_persistent_memory=false, float tare_offset=0, float scale_coeff=0, byte gain=128)
Easy function managing the start-up of a [LoadCell](#) with parameters as input.
- void [tare_all_loadcells](#) (bool wait_for_user=true)
Tare all the [LoadCells](#) added to the [LoadCellController](#).
- void [calibrate_all_loadcells](#) ()
Calibrate the scale coefficient of every [LoadCells](#) added to the [LoadCellController](#).
- void [read_all_scale_coeff_from_persistent_memory](#) ()
Read the scale coefficient of every [LoadCells](#) added to the [LoadCellController](#).
- void [save_offset_to_persistent_memory](#) (byte loadcell_num)
Save the offset of a given [LoadCell](#) to persistent memory.
- void [save_scale_coeff_to_persistent_memory](#) (byte loadcell_num)
Save the scale coefficient of a given [LoadCell](#) to persistent memory.
- long [read_offset_from_persistent_memory](#) (byte loadcell_num)
Read the offset of a given [LoadCell](#) from persistent memory.
- float [read_scale_coeff_from_persistent_memory](#) (byte loadcell_num)
Read the scale coefficient of a given [LoadCell](#) to persistent memory.
- void [calibrate_both_params](#) (byte loadcell_num)
Proceed to the calibration of both parameters and set them for a [LoadCell](#).
- void [calibrate_tare_offset](#) (byte loadcell_num)
Proceed to the calibration of the offset and set it for a [LoadCell](#).
- void [calibrate_scale_coeff](#) (byte loadcell_num)
Proceed to the calibration of the scale coefficient and set it for a [LoadCell](#).
- float [determine_offset](#) (byte loadcell_num)
Proceed to the calibration of the offset and return the offset value.
- float [determine_scale_coeff](#) (byte loadcell_num)
Proceed to the calibration of the scale coefficient and return the scale coefficient value.
- float [calculate_scale_coeff](#) (byte loadcell_num, float output, float mass)
- int [get_offset_eeprom_adress](#) (byte loadcell_num)
Get the EEPROM address for the offset of a [LoadCell](#).
- int [get_scale_coeff_eeprom_adress](#) (byte loadcell_num)
Get the EEPROM address for the scale coefficient of a [LoadCell](#).
- String [get_offset_file_name](#) (byte loadcell_num)
Get the SPIFFS file name for the offset of a [LoadCell](#).

- String [get_scale_coeff_file_name](#) (byte loadcell_num)
Get the SPIFFS file name for the scale coefficient of a [LoadCell](#).
- float [get_offset](#) (byte loadcell_num)
Get the offset value for a given [LoadCell](#).
- void [set_offset](#) (byte loadcell_num, float offset)
Set the offset value for a given [LoadCell](#).
- float [get_scale](#) (byte loadcell_num)
Get the scale coefficient value for a given [LoadCell](#).
- void [set_scale](#) (byte loadcell_num, float scale)
Set the scale coefficient value for a given [LoadCell](#).
- void [set_tare_n_readings](#) (byte loadcell_num, int n_readings)
Set the number of readings averaged for calibration of offset for a given [LoadCell](#).
- byte [get_tare_n_readings](#) (byte loadcell_num)
Get the number of readings averaged for calibration of offset for a given [LoadCell](#).
- void [set_scale_coeff_n_readings](#) (byte loadcell_num, int n_readings)
Set the number of readings averaged for calibration of scale coefficient for a given [LoadCell](#).
- byte [get_scale_coeff_n_readings](#) (byte loadcell_num)
Get the number of readings averaged for calibration of scale calibration for a given [LoadCell](#).
- void [set_weight_n_readings](#) (byte loadcell_num, int n_readings)
Set the number of readings averaged for weight measurements for a given [LoadCell](#).
- byte [get_weight_n_readings](#) (byte loadcell_num)
Get the number of readings averaged for measurements of a given [LoadCell](#)'s weight.
- void [set_all_loadcells_tare_n_readings](#) (int n_readings)
Set the number of readings averaged for calibration of offset for all [LoadCells](#).
- void [set_all_loadcells_scale_coeff_n_readings](#) (int n_readings)
Set the number of readings averaged for calibration of scale coefficient for all [LoadCells](#).
- void [set_all_loadcells_weight_n_readings](#) (int n_readings)
Set the number of readings averaged for weight measurements for all [LoadCells](#).
- void [set_mouse_weight](#) (float weight)
Set the value of member variable [mouse_weight](#).
- float [get_mouse_weight](#) ()
Get the value of member variable [mouse_weight](#).
- long [read_raw_average](#) (byte loadcell_num)
Read the output of the [LoadCell](#) and average [weight_n_readings](#) readings.
- long [read_tare_average](#) (byte loadcell_num)
Read the output of the [LoadCell](#) and average [tare_n_readings](#) readings.
- long [read_scale_coeff_average](#) (byte loadcell_num)
Read the output of the [LoadCell](#) and average [scale_coeff_n_readings](#) readings.
- double [get_raw_value](#) (byte loadcell_num)
Read the raw output of the [LoadCell](#) and subtracts the offset.
- float [get_weight](#) (byte loadcell_num)
Read the weight of the object currently on the [LoadCell](#).
- float [get_weight_with_auto_recalibration](#) (byte loadcell_num, float threshold=0.33)
Read the weight of the object currently on the [LoadCell](#) and recalibrate the offset.
- float [mass_from_raw](#) (byte loadcell_num, long raw)
Calculate mass from a raw reading.
- void [tare](#) (byte loadcell_num)
Read the raw output of the [LoadCell](#) and set this value to the offset.
- void [begin](#) (byte loadcell_num, byte dout, byte pd_sck, byte gain=128)
Begin the communication with the HX711 for a given [LoadCell](#).
- bool [is_ready](#) (byte loadcell_num)

- *Verify if the HX711 is ready for a reading.*
- void [wait_ready](#) (byte loadcell_num, unsigned long delay_ms=0)
Suspend the execution of the code until the HX711 becomes ready.
- bool [wait_ready_retry](#) (byte loadcell_num, int retries=3, unsigned long delay_ms=0)
Suspend the execution of the code until the HX711 becomes ready or for a given number of retries.
- bool [wait_ready_timeout](#) (byte loadcell_num, unsigned long timeout=1000, unsigned long delay_ms=0)
Suspend the execution of the code until the HX711 becomes ready or for a given timeout.
- void [power_up](#) (byte loadcell_num)
Wake up the chip after power down mode.
- void [power_down](#) (byte loadcell_num)
Wake up the chip after power down mode.
- byte [number_of_loadcells](#) ()
Get the number of [LoadCell](#) of the [LoadCellController](#).
- bool [is_loadcell_num_in_range](#) (byte loadcell_num)
Verify if a [LoadCell](#) number is in the range of the [LoadCellController](#).
- void [clear_eeprom](#) (int start=0, int end=1024)
Clear the EEPROM with 0 value.

Protected Member Functions

- void [easy_calibration_with_params](#) (byte loadcell_num, bool cal_tare, bool cal_scale)
Easy function managing the calibration of a [LoadCell](#).
- void [easy_save_to_persistent_memory_with_params](#) (byte loadcell_num, bool save_offset, bool save_scale)
Easy function managing the saving of calibration parameters to persistent memory.
- void [easy_read_from_persistent_memory_with_params](#) (byte loadcell_num, bool read_offset, bool read_scale)
Easy function managing the reading of calibration from persistent memory.
- void [easy_start_with_questions](#) (byte loadcell_num, byte dout, byte pd_sck, byte gain=128)
Easy function for start with questions through the serial monitor.
- void [easy_handle_exceptions](#) (byte loadcell_num, bool calibrate_offset=false, bool calibrate_scale=false, bool read_offset_persistent_memory=false, bool read_scale_persistent_memory=false, bool save_offset_persistent_memory=false, bool save_scale_persistent_memory=false, float tare_offset=0, float scale_coeff=0)
Easy function used to handle possible conflicts in [easy_start_with_params\(\)](#).

Protected Attributes

- [LoadCell](#) * [loadcells](#) [10]
Array containing the pointer of the [LoadCell](#) controlled by the [LoadCellController](#).
- int [n_loadcell](#) = 0
Member variable used to keep track of the number of LoadCells added.
- float [mouse_weight](#) = 20
Member variable used to store the weight in grams of the mouse in the cage controlled by The [LoadCellController](#).

8.2.1 Detailed Description

This library allows to control and manage many load cells with a [LoadCellController](#).

The [LoadCellController](#) library offers many features:

- Calibrate load cells, both parameters (offset and scale coefficient)
 - Member functions encapsulate the scripts needed for the calibration for both parameters. The interaction with the user is done inside the member functions.

- Save the calibration parameters to persistent memory

The library can automatically detect if an Arduino Uno (ATmega328p chip) or a FireBeetle (ESP8266 chip) is used. For Arduino Uno, EEPROM is used to store calibration parameters. For FireBeetle, SPIFFS is used.

The calibration parameters can be saved on the EEPROM after calibration for Atmega328p chip (Arduino Uno). These types of persistent memory are useful when it comes to saving because the saved values don't erase themselves when the power supply of the microcontroller is cut. The saved parameters can be reused at another moment. (tested on Arduino Uno and FireBeetle November 2023)

When it is wanted to reuse the saved parameters, it is important to add the load cell in the same order with the [add_loadcell\(\)](#) function. The calibration parameters are saved are accessible with the number of the [LoadCell](#).

- Read the calibration parameters from persistent memory (tested on Arduino Uno August 2023)
 - The calibration parameters can also be read from persistent memory after being saved.
- "Easy" start-up function that will handle everything related to the calibration and manage the calibration parameters.
 - The [LoadCellController](#) class offers ready-to-use "easy" functions that simplify the start-up of a load cell. Many scenarios are possible for the start-up of a load cell when it comes to calibration and the management of the calibration parameters.
 - A simple function [easy_start_with_params\(\)](#) takes in arguments many parameters to choose the appropriate option. Only a few parameters are needed.
 - This is useful for those who don't want to create their own sketch.
 - All the member functions that begin with "easy" are for easy start-up and don't implement any other functionalities than the other member functions. They only offer a "all-in-one" option for those who don't want to code.

- The [LoadCellController](#) class allows to access the load cells through the controller.

The load cells are added with the member function [add_loadcell\(\)](#). After that, all load cells are under the control of the [LoadCellController](#) and the member functions of the [LoadCell](#) class are accessed through the controller.

This access to the LoadCells through the [LoadCellController](#) requires to specify to [LoadCellController](#) a parameter corresponding to the number identifying the [LoadCell](#) concerned (1, 2, ...). Every member functions that have as input the number of a [LoadCell](#) (n_loadcell) will verify if the [LoadCell](#) number is in a coherent range according to the number of LoadCells added to the controller according to the member variable [n_loadcell](#). If the value is out of the range, the code will be suspended with a endless while() loop and display on the serial monitor an error message specifying where the problem occurred (in which function). This small if bloc is placed at the beginning

```
if (is_loadcell_num_in_range(loadcell_num) == false) {
  Serial.println();
  Serial.println();
  Serial.println();
  Serial.print(F("ERROR 1 name_of_the_function(): loadcell number "));
  Serial.print(loadcell_num);
  Serial.println(F(" is out of range."));
  while(1);
}
```

HX711 library: <https://github.com/bogde/HX711>

[LoadCell](#) library: <https://github.com/DCC-Lab/IntelligentCage/tree/master/Loadcell/>↵
[Arduino%20libraries/LoadCellLibrary](#)

Author

Nathan Bérubé

Date

November 10, 2023

Version

2.0.2

8.2.2 Constructor & Destructor Documentation

8.2.2.1 LoadCellController()

```
LoadCellController::LoadCellController ()
```

Construct a [LoadCellController](#) object.

8.2.3 Member Function Documentation

8.2.3.1 add_loadcell() [1/2]

```
void LoadCellController::add_loadcell (  
    LoadCell & loadcell)
```

Add a new [LoadCell](#) to the [LoadCellController](#) without pin specification.

This function adds a new [LoadCell](#) to the controller. It will add the pointer of the [LoadCell](#) object to the next index in the `loadcells` array and increase the value `n_loadcell` by 1 to keep track of the number of [LoadCell](#).

The first added [LoadCell](#) will be load cell 1, the second one will be load cell 2 and so on.

Parameters

<code>loadcell</code>	LoadCell object added to the LoadCellController .
-----------------------	---

8.2.3.2 add_loadcell() [2/2]

```
void LoadCellController::add_loadcell (  
    LoadCell & loadcell,  
    byte dout,  
    byte sck,  
    byte gain = 128)
```

Add a new [LoadCell](#) to the [LoadCellController](#) with pin specification.

This function adds a new [LoadCell](#) to the controller. It will add the pointer of the [LoadCell](#) object to the next index in the `loadcells` array and increase the value `n_loadcell` by 1 to keep track of the number of [LoadCell](#).

The first added [LoadCell](#) will be load cell 1, the second one will be load cell 2 and so on.

Parameters

<code>loadcell</code>	LoadCell object added to the LoadCellController .
-----------------------	---

<i>dout</i>	Digital pin (or analog) connected to the DOUT output pin of the HX711.
<i>sck</i>	Digital pin (or analog) connected to the SCK output of the HX711.
<i>gain</i>	Gain of the HX711. Default is 128.

8.2.3.3 calculate_scale_coeff()

```
float LoadCellController::calculate_scale_coeff (
    byte loadcell_num,
    float output,
    float mass)
```

8.2.3.4 calibrate_all_loadcells()

```
void LoadCellController::calibrate_all_loadcells ()
```

Calibrate the scale coefficient of every LoadCells added to the [LoadCellController](#).

This function interacts with the user to calibrate every [LoadCell](#) with known weights. The user is guided by the messages on the monitor to place the known weights on the load cell. The user is asked to send the weight value from the monitor. The scale coefficient are then saved to persistent memory.

8.2.3.5 calibrate_both_params()

```
void LoadCellController::calibrate_both_params (
    byte loadcell_num)
```

Proceed to the calibration of both parameters and set them for a [LoadCell](#).

This function begins the calibration of both offset and scale coefficient by calling the member functions [calibrate_tare_offset\(\)](#) and [calibrate_scale_coeff\(\)](#) that interact with the user to determine and set both calibration parameters.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

8.2.3.6 calibrate_scale_coeff()

```
void LoadCellController::calibrate_scale_coeff (
    byte loadcell_num)
```

Proceed to the calibration of the scale coefficient and set it for a [LoadCell](#).

This function use the member function [determine_scale_coeff\(\)](#) to get the scale coefficient from the calibration done by the user. This member function then sets this scale coefficient value to the member variable of the [LoadCell](#).

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

8.2.3.7 `calibrate_tare_offset()`

```
void LoadCellController::calibrate_tare_offset (
    byte loadcell_num)
```

Proceed to the calibration of the offset and set it for a [LoadCell](#).

This function use the member function [determine_offset\(\)](#) to get the offset from the calibration done by the user. This member function then sets this offset value to the member variable of the [LoadCell](#).

Parameters

<code>loadcell_num</code>	Number of the LoadCell .
---------------------------	--

8.2.3.8 `clear_eeprom()`

```
void LoadCellController::clear_eeprom (
    int start = 0,
    int end = 1024)
```

Clear the EEPROM with 0 value.

This function writes a 0 at all index on the EEPROM for a given range.

Note

The `end` parameters has a default value of 1024 since it is the size of the Arduino Uno EEPROM. It might not be the case with other microcontroller.

Parameters

<code>start</code>	First index to clear. Default is 0
<code>end</code>	Last index to clear. Default is 1024

8.2.3.9 `determine_offset()`

```
float LoadCellController::determine_offset (
    byte loadcell_num)
```

Proceed to the calibration of the offset and return the offset value.

This function interacts with the user through the serial monitor to get an offset value for a given [LoadCell](#).

This member function asks to the user to remove any object from the load cell and send "t" with the serial monitor when it is done. After that, a output measurement is done with [read_tare_average\(\)](#) to get a raw output value. This value is returned.

Parameters

<code>loadcell_num</code>	Number of the LoadCell .
---------------------------	--

Returns

The offset value.

8.2.3.10 determine_scale_coeff()

```
float LoadCellController::determine_scale_coeff (
    byte loadcell_num)
```

Proceed to the calibration of the scale coefficient and return the scale coefficient value.

This function interacts with the user through the serial monitor to get a scale coefficient value for a given [LoadCell](#).

This member function asks the user to specify the number of reference weights that will be used to calibrate the load cell.

After that, the user is asked to put the first reference weight on the loadcell and send the weight value through the serial monitor. A weight measurement is done using the member function [read_scale_coeff_average\(\)](#). A couple for our calibration linear function $\rightarrow \text{output} = \text{scale_coeff} * \text{mass} + \text{offset}$ is obtained (known mass, measured output). The scale coefficient can now be calculated.

The process described above can be repeated for each reference weight to get a scale coefficient value.

The average of all scale coefficients is taken to get the finale value returned by the function.

Note

With this simple method, the scale coefficient depends of the offset. Finding both calibration parameters (offset and scale coefficient) at the same time with a curve fit algorithm could be more effective.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

The scale coefficient value.

8.2.3.11 easy_calibration_with_params()

```
void LoadCellController::easy_calibration_with_params (
    byte loadcell_num,
    bool cal_tare,
    bool cal_scale) [protected]
```

Easy function managing the calibration of a [LoadCell](#).

This function is managing the possibilities that come with the calibration of the tare offset and the scale coefficient. It is meant to be used inside the member function [easy_start_with_params\(\)](#).

The calibration process of both parameters (offset and scale coefficient) requires a computer to display information on the serial monitor and also to send value through it for the calibration.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

<i>cal_tare</i>	Boolean telling if the offset should be calibrated.
<i>cal_scale</i>	Boolean telling if the scale coefficient should be calibrated.

8.2.3.12 easy_handle_exceptions()

```
void LoadCellController::easy_handle_exceptions (
    byte loadcell_num,
    bool calibrate_offset = false,
    bool calibrate_scale = false,
    bool read_offset_persistent_memory = false,
    bool read_scale_persistent_memory = false,
    bool save_offset_persistent_memory = false,
    bool save_scale_persistent_memory = false,
    float tare_offset = 0,
    float scale_coeff = 0) [protected]
```

Easy function used to handle possible conflicts in [easy_start_with_params\(\)](#).

This function manages the possible conflicts that can happen between the parameters passed to the [easy_start_with_params\(\)](#) member function. Since the user is specifying the starting parameters, it is probable that some are not possible simultaneously. This member function verifies all possible conflicts. If one is detected, the execution will be stopped with infinite while() loop, since it is not possible to do raise exceptions on Arduino (as I know). It is meant to be used inside the member function [easy_start_with_params\(\)](#).

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>calibrate_offset</i>	Boolean telling if the offset should be calibrated. Default is false.
<i>calibrate_scale</i>	Boolean telling if the scale coefficient should be calibrated. Default is false.
<i>read_offset_persistent_memory</i>	Boolean telling if the offset should be read from persistent_memory. Default is false.
<i>read_scale_persistent_memory</i>	Boolean telling if the scale coefficient should be read from persistent_↔ memory. Default is false.
<i>save_offset_persistent_memory</i>	Boolean telling if the offset should be saved to persistent_memory. Default is false.
<i>save_scale_persistent_memory</i>	Boolean telling if the scale coefficient should be saved to persistent_memory. Default is false.
<i>tare_offset</i>	Value of the tare offset. Default is 0.

The *tare_offset* default is 0 and is considered as the absence of a value. If no value wants to be specified, 0 should be given to the member function.

Parameters

<i>scale_coeff</i>	Value of the scale coefficient. Default is 0.
--------------------	---

The *scale_coeff* default is 0 and is considered as the absence of a value. If no value wants to be specified, 0 should be given to the member function.

8.2.3.13 `easy_read_from_persistent_memory_with_params()`

```
void LoadCellController::easy_read_from_persistent_memory_with_params (
    byte loadcell_num,
    bool read_offset,
    bool read_scale) [protected]
```

Easy function managing the reading of calibration from persistent memory.

This function is managing the possibilities that come with the reading from persistent memory of the tare offset and the scale coefficient of a [LoadCell](#). It is meant to be used inside the member function [easy_start_with_params\(\)](#).

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>read_offset</i>	Boolean telling if the offset should be read from persistent memory.
<i>read_scale</i>	Boolean telling if the scale coefficient should be read from persistent memory.

8.2.3.14 `easy_save_to_persistent_memory_with_params()`

```
void LoadCellController::easy_save_to_persistent_memory_with_params (
    byte loadcell_num,
    bool save_offset,
    bool save_scale) [protected]
```

Easy function managing the saving of calibration parameters to persistent memory.

This function is managing the possibilities that come with the saving of the tare offset and the scale coefficient of a [LoadCell](#). It is meant to be used inside the member function [easy_start_with_params\(\)](#).

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>save_offset</i>	Boolean telling if the offset should be saved to persistent memory.
<i>save_scale</i>	Boolean telling if the scale coefficient should be saved to persistent memory.

8.2.3.15 `easy_start_with_params()`

```
void LoadCellController::easy_start_with_params (
    byte loadcell_num,
    byte dout,
    byte pd_sck,
    bool calibrate_offset = false,
    bool calibrate_scale = false,
    bool read_offset_persistent_memory = false,
    bool read_scale_persistent_memory = false,
    bool save_offset_persistent_memory = false,
    bool save_scale_persistent_memory = false,
    float tare_offset = 0,
```

```
float scale_coeff = 0,
byte gain = 128)
```

Easy function managing the start-up of a [LoadCell](#) with parameters as input.

This function, with only a few parameters as input, controls everything related to the start-up of a [LoadCell](#). The calibration of the offset and the scale coefficient and their saving/reading to/from the persistent memory. All possible conflicts between parameters are handled by the member function [easy_handle_exceptions\(\)](#).

This member function was created to simplify the start-up of a [LoadCell](#), especially for non-programmers. No additional functionalities that are not accessible from the other member functions are implemented (not labeled `easy_...`).

All the following "easy" member functions are used inside [easy_start_with_params\(\)](#) to dispatch to handling of all start-up scenarios:

- [easy_calibration_with_params\(\)](#)
- [easy_save_to_persistent_memory_with_params\(\)](#)
- [easy_read_from_persistent_memory_with_params\(\)](#)
- [easy_handle_exceptions\(\)](#)

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>dout</i>	Digital pin (or analog) connected to the DOUT output pin of the HX711.
<i>pd_sck</i>	Digital pin (or analog) connected to the SCK output of the HX711.
<i>calibrate_offset</i>	Boolean telling if the offset should be calibrated. Default is false.
<i>calibrate_scale</i>	Boolean telling if the scale coefficient should be calibrated. Default is false.
<i>read_offset_persistent_memory</i>	Boolean telling if the offset should be read from persistent memory. Default is false.
<i>read_scale_persistent_memory</i>	Boolean telling if the scale coefficient should be read from persistent memory. Default is false.
<i>save_offset_persistent_memory</i>	Boolean telling if the offset should be saved to persistent memory. Default is false.
<i>save_scale_persistent_memory</i>	Boolean telling if the scale coefficient should be saved to persistent memory. Default is false.
<i>tare_offset</i>	Value of the tare offset. Default is 0.
<i>scale_coeff</i>	Value of the scale coefficient. Default is 0.
<i>gain</i>	Gain of the HX711. Default is 128.

The `tare_offset` default is 0 and is considered as the absence of a value. If no value wants to be specified, 0 should be given to the member function.

The `scale_coeff` default is 0 and is considered as the absence of a value. If no value wants to be specified, 0 should be given to the member function.

8.2.3.16 `easy_start_with_questions()`

```
void LoadCellController::easy_start_with_questions (
    byte loadcell_num,
    byte dout,
    byte pd_sck,
    byte gain = 128) [protected]
```

Easy function for start with questions through the serial monitor.

This function is managing the possibilities that come with the start-up of a [LoadCell](#) with questions that are asked through the serial monitor of the Arduino.

Todo This could be done in the future to simplify the start-up of a [LoadCell](#) especially for non-programmers.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
<i>dout</i>	Pin connected to the DOUT output of the HX711.
<i>pd_sck</i>	Pin connected to the SCK output of the HX711.
<i>gain</i>	Gain of the HX711. Default is 128

The *gain* argument can take the following values: 128, 64 and 32. For a gain of 128 and 64, channel A of the HX711 should be used. For a gain of 32, channel B should be used.

8.2.3.17 `get_offset_eeprom_address()`

```
int LoadCellController::get_offset_eeprom_address (
    byte loadcell_num)
```

Get the EEPROM address for the offset of a [LoadCell](#).

This function returns the EEPROM address for the offset value for a given [LoadCell](#). The EEPROM addresses are based on the loadcell number.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

EEPROM address for the offset value.

Note

The EEPROM addresses are spaced along the EEPROM to prevent overlap between neighboring values.

8.2.3.18 get_offset_file_name()

```
String LoadCellController::get_offset_file_name (  
    byte loadcell_num)
```

Get the SPIFFS file name for the offset of a [LoadCell](#).

This function returns the offset file name for a given [LoadCell](#). The offset file name is based on the loadcell number.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

File name for the scale coefficient.

Note

Offset file name are formatted this way: "/offset{loadcell number}.txt". For example, the offset file name for [LoadCell](#) #1 is "/offset1.txt"

8.2.3.19 get_scale_coeff_eeprom_address()

```
int LoadCellController::get_scale_coeff_eeprom_address (  
    byte loadcell_num)
```

Get the EEPROM address for the scale coefficient of a [LoadCell](#).

This function returns the EEPROM address for the scale coefficient value for a given [LoadCell](#). The EEPROM addresses are based on the loadcell number.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

EEPROM address for the scale coefficient.

Note

The EEPROM addresses are spaced along the EEPROM to prevent overlap between neighboring values.

8.2.3.20 get_scale_coeff_file_name()

```
String LoadCellController::get_scale_coeff_file_name (
    byte loadcell_num)
```

Get the SPIFFS file name for the scale coefficient of a [LoadCell](#).

This function returns the scale coefficient file name for a given [LoadCell](#). The file name is based on the loadcell number.

Parameters

<code>loadcell_num</code>	Number of the LoadCell .
---------------------------	--

Returns

File name for the scale coefficient.

Note

Offset file name are formatted this way: "/offset{loadcell number}.txt". For example, the offset file name for [LoadCell](#) #1 is "/offset1.txt"

8.2.3.21 is_loadcell_num_in_range()

```
bool LoadCellController::is_loadcell_num_in_range (
    byte loadcell_num)
```

Verify if a [LoadCell](#) number is in the range of the [LoadCellController](#).

This function returns boolean telling whether a number of a [LoadCell](#) is in the range of the possible number of [LoadCell](#) for a [LoadCellController](#) according to his member variable `n_loadcell`. This function is useful inside all member functions that loadcell_num as parameters to suspend the code execution if necessary.

Returns

Boolean telling if a [LoadCell](#) number is coherent for the [LoadCellController](#).

8.2.3.22 number_of_loadcells()

```
byte LoadCellController::number_of_loadcells ()
```

Get the number of [LoadCell](#) of the [LoadCellController](#).

This function returns the number of [LoadCell](#) that were added to the [LoadCellController](#) with the `add_loadcell()` member function since the `n_loadcell` member variable is kept protected.

Returns

Number of [LoadCell](#).

8.2.3.23 read_all_scale_coeff_from_persistent_memory()

```
void LoadCellController::read_all_scale_coeff_from_persistent_memory ()
```

Read the scale coefficient of every LoadCells added to the [LoadCellController](#).

This function read the scale coefficient of every [LoadCell](#) from persistent memory. The scale coefficient is then set to the [LoadCell](#) class variable OFFSET through the controller with a setter. This function can be used in the start-up of LoadCells when the scale coefficients are saved to persistent memory.

8.2.3.24 read_offset_from_persistent_memory()

```
long LoadCellController::read_offset_from_persistent_memory (
    byte loadcell_num)
```

Read the offset of a given [LoadCell](#) from persistent memory.

This function reads the offset of a [LoadCell](#) from persistent memory, which was added to the controller with the member function [.For](#) a ATmega328p board, the EEPROM adress is obtained with the member function [get_offset_eeprom_adress\(\)](#). The process of assigning EEPROM addresses to [LoadCell](#) is completely hidden from the user to avoid problems. For a ESP32 board, the SPIFFS file name is obtained with the member function [get_offset_file_name\(\)](#). The same way, everything is hidden from the user.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

The offset of the given [LoadCell](#) obtained from persistent memory.

8.2.3.25 read_scale_coeff_from_persistent_memory()

```
float LoadCellController::read_scale_coeff_from_persistent_memory (
    byte loadcell_num)
```

Read the scale coefficient of a given [LoadCell](#) to persistent memory.

This function reads the offset of a [LoadCell](#) from persistent memory, which was added to the controller with the member function [add_loadcell\(\)](#). For a ATmega328p board, the EEPROM adress is obtained with the member function [get_offset_eeprom_adress\(\)](#). The process of assigning EEPROM addresses to [LoadCell](#) is completely hidden from the user to avoid problems. For a ESP32 board, the SPIFFS file name is obtained with the member function [get_offset_file_name\(\)](#). The same way, everything is hidden from the user.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

Returns

The scale coefficient of the given [LoadCell](#) obtained from persistent memory.

8.2.3.26 save_offset_to_persistent_memory()

```
void LoadCellController::save_offset_to_persistent_memory (
    byte loadcell_num)
```

Save the offset of a given [LoadCell](#) to persistent memory.

This function saves the offset member variable of a [LoadCell](#), which was added to the controller with the member function [add_loadcell\(\)](#). For a ATmega328p board, the EEPROM address is obtained with the member function [get_offset_eeprom_adress\(\)](#). The process of assigning EEPROM addresses to [LoadCell](#) is completely hidden from the user to avoid problems. For a ESP32 board, the SPIFFS file name is obtained with the member function [get_offset_file_name\(\)](#). The same way, everything is hidden from the user.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

8.2.3.27 save_scale_coeff_to_persistent_memory()

```
void LoadCellController::save_scale_coeff_to_persistent_memory (
    byte loadcell_num)
```

Save the scale coefficient of a given [LoadCell](#) to persistent memory.

This function saves the scale coefficient member variable of a [LoadCell](#), which was added to the controller with the member function [add_loadcell\(\)](#). For a ATmega328p board, the EEPROM address is obtained with the member function [get_offset_eeprom_adress\(\)](#). The process of assigning EEPROM addresses to [LoadCell](#) is completely hidden from the user to avoid problems. For a ESP32 board, the SPIFFS file name is obtained with the member function [get_offset_file_name\(\)](#). The same way, everything is hidden from the user.

Parameters

<i>loadcell_num</i>	Number of the LoadCell .
---------------------	--

8.2.3.28 tare_all_loadcells()

```
void LoadCellController::tare_all_loadcells (
    bool wait_for_user = true)
```

Tare all the LoadCells added to the [LoadCellController](#).

This function interacts with the user to tare every LoadCells added to the [LoadCellController](#) when he is ready. The user is asked to send 't' from the serial monitor when all load cells are empty. The taring of each will be done. A message will be printed on the monitor when done.

Parameters

<i>wait_for_user</i>	Boolean telling if the manual confirmation of the user is needed to tare the LoadCells
----------------------	--

8.2.4 Member Data Documentation

8.2.4.1 loadcells

```
LoadCell* LoadCellController::loadcells[10] [protected]
```

Array containing the pointer of the [LoadCell](#) controlled by the [LoadCellController](#).

The only moment this variable is modified is when a [LoadCell](#) is added with the [add_loadcell\(\)](#) member function. It goes up by one every time [add_loadcell\(\)](#) is called.

8.2.4.2 mouse_weight

```
float LoadCellController::mouse_weight = 20 [protected]
```

Member variable used to store the weight in grams of the mouse in the cage controlled by The [LoadCellController](#).

Default is 20 grams. This parameter can be used as a threshold for recalibration in [get_weight_with_auto_recalibration](#)

8.2.4.3 n_loadcell

```
int LoadCellController::n_loadcell = 0 [protected]
```

Member variable used to keep track of the number of LoadCells added.

The only moment this variable is modified is when a [LoadCell](#) is added with the [add_loadcell\(\)](#) member function. It goes up by one every time [add_loadcell\(\)](#) is called.

The documentation for this class was generated from the following files:

- [LoadCellController.h](#)
- [LoadCellController.cpp](#)

Chapter 9

File Documentation

9.1 LoadCell.cpp File Reference

```
#include <Arduino.h>
#include "LoadCell.h"
#include <SPI.h>
```

Macros

- `#define HAS_ATOMIC_BLOCK` (defined(ARDUINO_ARCH_AVR) || defined(TEENSYDUINO))
- `#define ARCH_ESPRESSIF` (defined(ARDUINO_ARCH_ESP8266) || defined(ARDUINO_ARCH_ESP32))
- `#define IS_FREE_RTOS` defined(ARDUINO_ARCH_ESP32)
- `#define FAST_CPU`
- `#define SHIFTIN_WITH_SPEED_SUPPORT`(data, clock, order)
- `#define DOUT_MODE` INPUT_PULLUP

Functions

- static bool `hx711_corrupted` (long raw)

9.1.1 Macro Definition Documentation

9.1.1.1 ARCH_ESPRESSIF

```
#define ARCH_ESPRESSIF (defined(ARDUINO_ARCH_ESP8266) || defined(ARDUINO_ARCH_ESP32))
```

9.1.1.2 DOUT_MODE

```
#define DOUT_MODE INPUT_PULLUP
```

9.1.1.3 FAST_CPU

```
#define FAST_CPU
```

Value:

```
( \
  ARCH_ESPRESSIF || \
  defined(ARDUINO_ARCH_SAM)      || defined(ARDUINO_ARCH_SAMD) || \
  defined(ARDUINO_ARCH_STM32)    || defined(TEENSYDUINO) \
)
```

9.1.1.4 HAS_ATOMIC_BLOCK

```
#define HAS_ATOMIC_BLOCK (defined(ARDUINO_ARCH_AVR) || defined(TEENSYDUINO))
```

9.1.1.5 IS_FREE_RTOS

```
#define IS_FREE_RTOS defined(ARDUINO_ARCH_ESP32)
```

9.1.1.6 SHIFTIN_WITH_SPEED_SUPPORT

```
#define SHIFTIN_WITH_SPEED_SUPPORT(
    data,
    clock,
    order)
```

Value:

```
shiftIn(data, clock, order)
```

9.1.2 Function Documentation

9.1.2.1 hx711_corrupted()

```
bool hx711_corrupted (
    long raw) [inline], [static]
```

9.2 LoadCell.h File Reference

```
#include <Arduino.h>
#include "HX711.h"
```

Classes

- class [LoadCell](#)

This library extends the functionality of the HX711 to make it compatible with the [LoadCellController](#) library.

9.3 LoadCell.h

[Go to the documentation of this file.](#)

```

00001
00087
00116
00117 #ifndef LoadCell_h
00118 #define LoadCell_h
00119 #include <Arduino.h>
00120 #include "HX711.h"
00121 class LoadCell : public HX711 {
00122
00123 protected:
00128     byte tare_n_readings = 50;
00129
00130
00135     byte scale_coeff_n_readings = 50;
00136
00137
00142     byte weight_n_readings = 5;
00143 public:
00147     LoadCell();
00148
00149
00161     long safe_read(byte max_retries = 3);
00162
00163
00172     long read_raw_average();
00173
00174
00183     long read_tare_average();
00184
00185
00194     long read_scale_coeff_average();
00195
00196
00205     double get_raw_value();
00206
00207
00217     float get_weight();
00218
00219
00227     void tare();
00228
00229
00240     void set_tare_n_readings(int tare_n_readings);
00241
00242
00250     int get_tare_n_readings();
00251
00252
00263     void set_scale_coeff_n_readings(int scale_coeff_n_readings);
00264
00265
00273     int get_scale_coeff_n_readings();
00274
00275
00286     void set_weight_n_readings(int weight_n_readings);
00287
00288
00296     int get_weight_n_readings();
00297 };
00298 #endif

```

9.4 LoadCellController.cpp File Reference

```
#include "LoadCellController.h"
```

9.5 LoadCellController.h File Reference

```

#include <Arduino.h>
#include "HX711.h"
#include "LoadCell.h"

```

Classes

- class [LoadCellController](#)

This library allows to control and manage many load cells with a [LoadCellController](#).

9.6 LoadCellController.h

[Go to the documentation of this file.](#)

```

00001
00083 #ifndef LoadCellController_h
00084 #define LoadCellController_h
00085 #include <Arduino.h>
00086 #include "HX711.h"
00087 #include "LoadCell.h"
00088
00089 // Verify if the board is based on a ESP32 chip, like FireBeetle
00090 #if defined(ARDUINO_ARCH_ESP32)
00091 #include "FS.h"
00092 #include "SPIFFS.h"
00093 // Verify if the board is based on a Atmega328P chip, like Arduino Uno
00094 #elif defined(__AVR_ATmega328P__)
00095 #include <EEPROM.h>
00096 #endif
00097
00098
00099 class LoadCellController {
00100 protected:
00101     LoadCell* loadcells[10];
00110
00111
00120     int n_loadcell = 0;
00121
00130     float mouse_weight = 20;
00131
00146     void easy_calibration_with_params(
00147         byte loadcell_num,
00148         bool cal_tare,
00149         bool cal_scale
00150     );
00151
00152
00164     void easy_save_to_persistent_memory_with_params(
00165         byte loadcell_num,
00166         bool save_offset,
00167         bool save_scale
00168     );
00169
00170
00182     void easy_read_from_persistent_memory_with_params(
00183         byte loadcell_num,
00184         bool read_offset,
00185         bool read_scale
00186     );
00187
00188
00204     void easy_start_with_questions(
00205         byte loadcell_num,
00206         byte dout,
00207         byte pd_sck,
00208         byte gain=128
00209     );
00210
00211
00236     void easy_handle_exceptions(
00237         byte loadcell_num,
00238         bool calibrate_offset=false,
00239         bool calibrate_scale=false,
00240         bool read_offset_persistent_memory=false,
00241         bool read_scale_persistent_memory=false,
00242         bool save_offset_persistent_memory=false,
00243         bool save_scale_persistent_memory=false,
00244         float tare_offset=0,
00245         float scale_coeff=0
00246     );
00247
00248 public:
00252     LoadCellController();
00253
00266     void add_loadcell(LoadCell &loadcell);

```

```
00267
00283 void add_loadcell(
00284     LoadCell &loadcell,
00285     byte dout,
00286     byte sck,
00287     byte gain=128
00288 );
00289
00290
00327 void easy_start_with_params(
00328     byte loadcell_num,
00329     byte dout,
00330     byte pd_sck,
00331     bool calibrate_offset=false,
00332     bool calibrate_scale=false,
00333     bool read_offset_persistent_memory=false,
00334     bool read_scale_persistent_memory=false,
00335     bool save_offset_persistent_memory=false,
00336     bool save_scale_persistent_memory=false,
00337     float tare_offset=0,
00338     float scale_coeff=0,
00339     byte gain=128
00340 );
00341
00342
00352 void tare_all_loadcells(bool wait_for_user=true);
00353
00354
00364 void calibrate_all_loadcells();
00365
00366
00377 void read_all_scale_coeff_from_persistent_memory();
00378
00379
00392 void save_offset_to_persistent_memory(byte loadcell_num);
00393
00406 void save_scale_coeff_to_persistent_memory(byte loadcell_num);
00407
00421 long read_offset_from_persistent_memory(byte loadcell_num);
00422
00436 float read_scale_coeff_from_persistent_memory(byte loadcell_num);
00437
00447 void calibrate_both_params(byte loadcell_num);
00448
00458 void calibrate_tare_offset(byte loadcell_num);
00459
00469 void calibrate_scale_coeff(byte loadcell_num);
00470
00484 float determine_offset(byte loadcell_num);
00485
00513 float determine_scale_coeff(byte loadcell_num);
00514
00515
00516 float calculate_scale_coeff(
00517     byte loadcell_num,
00518     float output,
00519     float mass
00520 );
00521
00522
00536 int get_offset_eeprom_adress(byte loadcell_num);
00537
00538
00552 int get_scale_coeff_eeprom_adress(byte loadcell_num);
00553
00554
00568 String get_offset_file_name(byte loadcell_num);
00569
00570
00584 String get_scale_coeff_file_name(byte loadcell_num);
00585
00595
00605 float get_offset(byte loadcell_num);
00606
00607
00617 void set_offset(byte loadcell_num, float offset);
00618
00619
00629 float get_scale(byte loadcell_num);
00630
00631
00641 void set_scale(byte loadcell_num, float scale);
00642
00643
00653 void set_tare_n_readings(byte loadcell_num, int n_readings);
00654
00655
```

```
00665     byte get_tare_n_readings(byte loadcell_num);
00666
00667
00677     void set_scale_coeff_n_readings(byte loadcell_num, int n_readings);
00678
00679
00689     byte get_scale_coeff_n_readings(byte loadcell_num);
00690
00691
00701     void set_weight_n_readings(byte loadcell_num, int n_readings);
00702
00703
00713     byte get_weight_n_readings(byte loadcell_num);
00714
00715
00724     void set_all_loadcells_tare_n_readings(int n_readings);
00725
00726
00735     void set_all_loadcells_scale_coeff_n_readings(int n_readings);
00736
00737
00746     void set_all_loadcells_weight_n_readings(int n_readings);
00747
00748
00758     void set_mouse_weight(float weight);
00759
00760
00768     float get_mouse_weight();
00769
00770
00781     long read_raw_average(byte loadcell_num);
00782
00783
00794     long read_tare_average(byte loadcell_num);
00795
00806     long read_scale_coeff_average(byte loadcell_num);
00807
00808
00819     double get_raw_value(byte loadcell_num);
00820
00821
00833     float get_weight(byte loadcell_num);
00834
00835
00853     float get_weight_with_auto_recabibration(
00854                                     byte loadcell_num,
00855                                     float threshold=0.33);
00856
00857
00869     float mass_from_raw(byte loadcell_num, long raw);
00870
00871
00879     void tare(byte loadcell_num);
00880
00881
00896 void begin(
00897     byte loadcell_num,
00898     byte dout,
00899     byte pd_sck,
00900     byte gain = 128
00901 );
00902
00903
00904
00917 bool is_ready(byte loadcell_num);
00918
00919
00934 void wait_ready(
00935     byte loadcell_num,
00936     unsigned long delay_ms=0
00937 );
00938
00939
00953 bool wait_ready_retry(
00954     byte loadcell_num,
00955     int retries=3,
00956     unsigned long delay_ms=0
00957 );
00958
00959
00974 bool wait_ready_timeout(
00975     byte loadcell_num,
00976     unsigned long timeout=1000,
00977     unsigned long delay_ms=0
00978 );
00979
00980
00989 void power_up(byte loadcell_num);
```

```
00990
00991
01002     void power_down(byte loadcell_num);
01003 // End of LoadCell functions for LoadCellController group
01005
01006
01017     byte number_of_loadcells();
01018
01019
01030     bool is_loadcell_num_in_range(byte loadcell_num);
01031
01043     void clear_eeprom(int start=0, int end=1024);
01044 };
01045 #endif
```

9.7 STUAART.ino File Reference

