

TT220901 - OPENview - Battery has to be Replaced Alarm


1. When you see the below alarm in the controller, this means you have to consider replacing the battery in the controller.

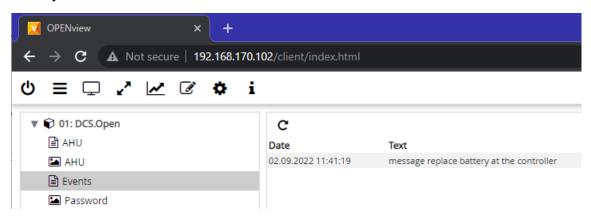

2. To reset the alarm, expand the "General" tab from the tree, and click "settings message text".

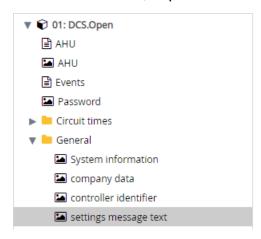

3. Now you should see the following screen.

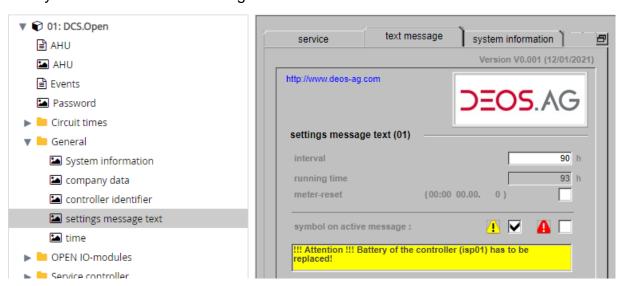


4. Tick the "meter-reset" checkbox, and the alarm will be cleared. The "running time" will also reset to 0.



5. Below are the default settings for the alarm. When the controller running time reach the "interval", the alarm will be raised. 26280 hours is 3 years.



6. If you get this alarm for a new controller, this is most likely because you forgot to do a "preset" after the first upload to the controller. So, please remember this when setting up you next new controller.

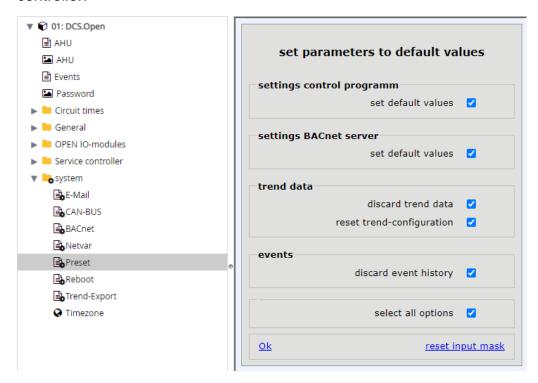

7. Please refer to the below document if you need to replace the battery in the controller.

