AMX TP3 FEATURES

DVS

MixerFX

MacroFX

Resonant Filter

PadFX

BeatMasher

UserFX

Loops

BeatJump

Slip Reverse

6x Cues

4x Decks

Sampler

Key Adjust

JogFX

Filter Roll

PAGES NAVIGATION



Initialize Mapping




Go MFX page





Go PFX page

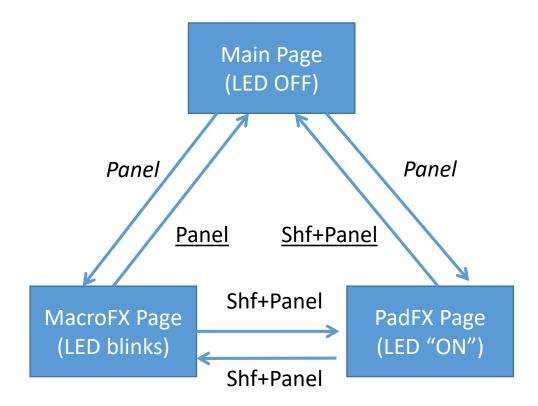


MAIN PAGE – SHIFTS





5x Shifts



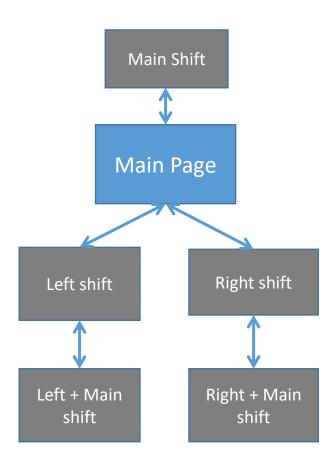

MAIN PAGE – TRANSPORT



No action!



Sync



Cue



Play/Pause



Gain



Equalization

VU-METER DISPLAY

ACTIVE DECK DISPLAY:







(Track position)


LOOP STZE AND POSITION DISPLAY:







MAIN SHIFT

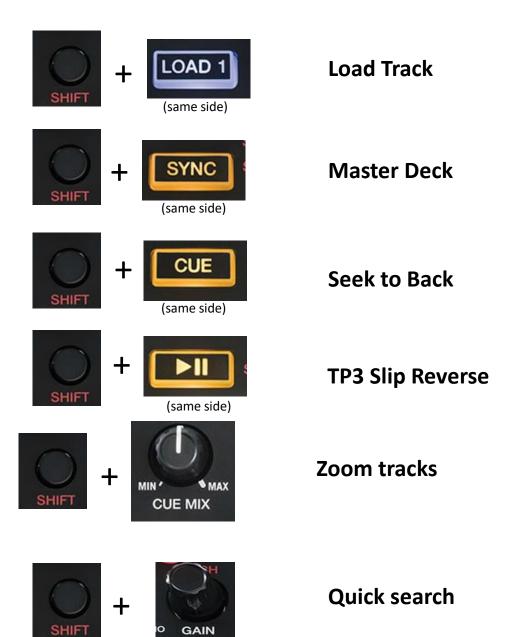

LOOPS







Loop Size







Loop 4-beat







Loop (selected)

LOOP SIZE AND POSITION DISPLAY:









BEATJUMP / LOOP MOVE







BeatJump









Loop Move

CUE CONTROL

Set Cue #1 to #6:

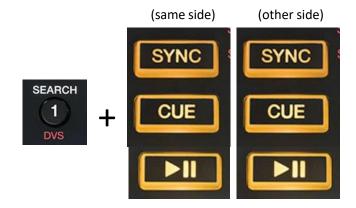

Delete x6 Cues:

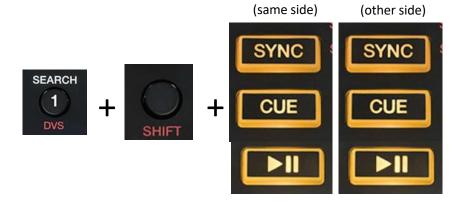

TEMPO







Tempo bend











Tempo Set









Tempo Range

TRACK SEARCH







Quick search







When stopped: Slow search

EVEN MORE SHIFTS





Reset Gain, Left

Reset Gain, Right







Key Lock, Left







Key Lock, Right








Toggle Deck 1/3







Toggle Deck 2/4

BROWSER



























(press)

Select Track

Select Folder

Open/Close Folder

Page up/Page Down

Magnifier

Favorites Select

PREVIEW PLAYER



Start Preview Player



Seek Preview Player

FILTER FUNCTIONS

FILTER SELECTION:



Select 5x TP3 MixerFX





Select Resonant Filter





Select 7x MacroFX

FILTER CONTROL:



Apply selected Filter



Filter Toggle





Filter Reset

PADFX

PFX SELECTION:







Go PFX page

Select 5x PFX sub-page

(PFX sub-page info)

PFX CONTROL:



Apply FX combo



CUE

(same side)



Toggle FX1

Toggle FX2

Toggle FX3

JOG FX



Required for JogFX!



JogFX ON/OFF



Touch: start jogFX Turn: change jogFX Release: stop jogFX

FILTER ROLL



Required for Filter Roll!




Filter Roll ON/OFF



Touch: start roll Turn: change roll Release: stop roll

KEY CONTROL

(in PadFX and MFX modes)

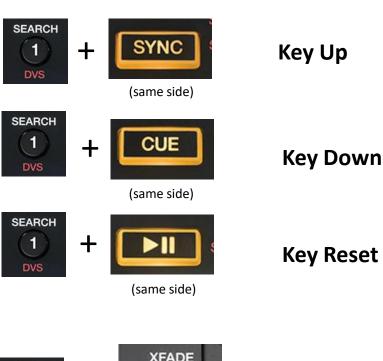





Key Adjust

SAMPLER



MFX page





PFX page









Mute all samples

Sample Tempo



(left)

Sample Volume



MANUAL FX



FX Delay T3



FX Flanger





FX Reverb





MFX Select





MFX control





FX Select





FX Parameter





FX Dry/Wet

OTHER FX



DECK SIZE / LAYOUT



Deck Size 1+2





Deck Size 3+4





Layout (2-deck or 4-decks)

CROSSFADER



Disable CF



Enable CF (normal)





Enable CF (inverted)

4-DECK (Toggle mode)



(Active Deck info)







Toggle deck 1/3








Toggle deck 2/4

4-DECK (Direct mode)

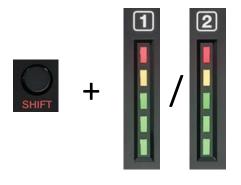

(Active Deck info)





To Enter Deck Select mode









Select Deck1



(same side)





Select Deck2



(same side)







Select Deck3



(same side)





Select Deck4

BEATGRID MODE (Enter/Exit)

To ENTER BeatGrid Mode:




To EXIT (via Toggle):




To Exit (via Direct Selection):



(Active Deck info):

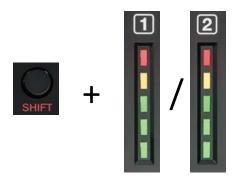

BEATGRID MODE (navigation)

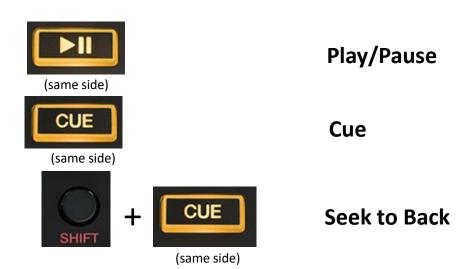









(same side)

BEATGRID MODE (BPM)

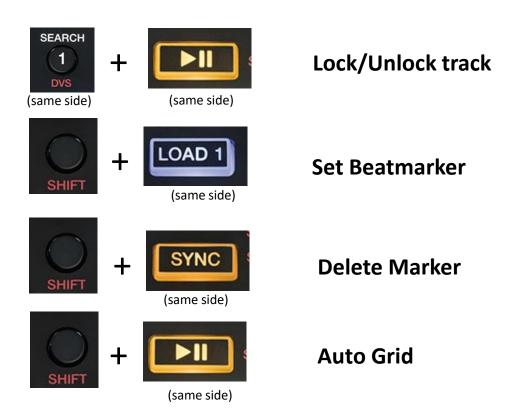





MAIN PAGE - LAYERS

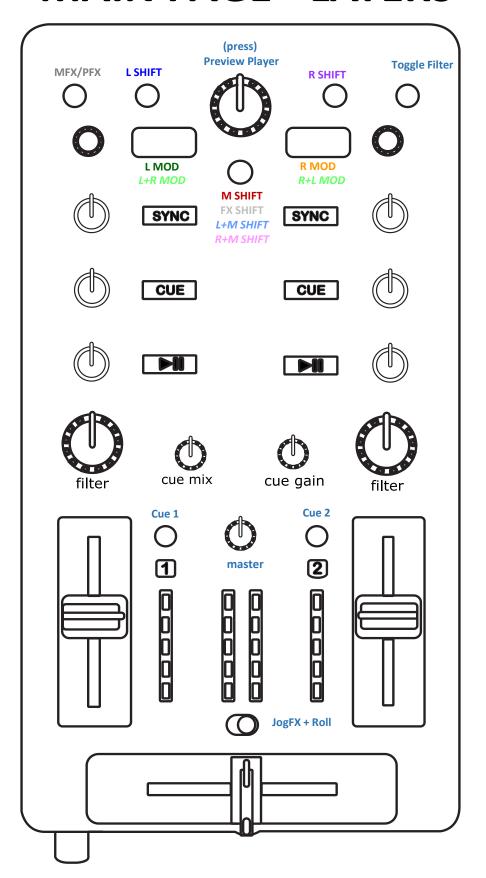


MAIN PAGE

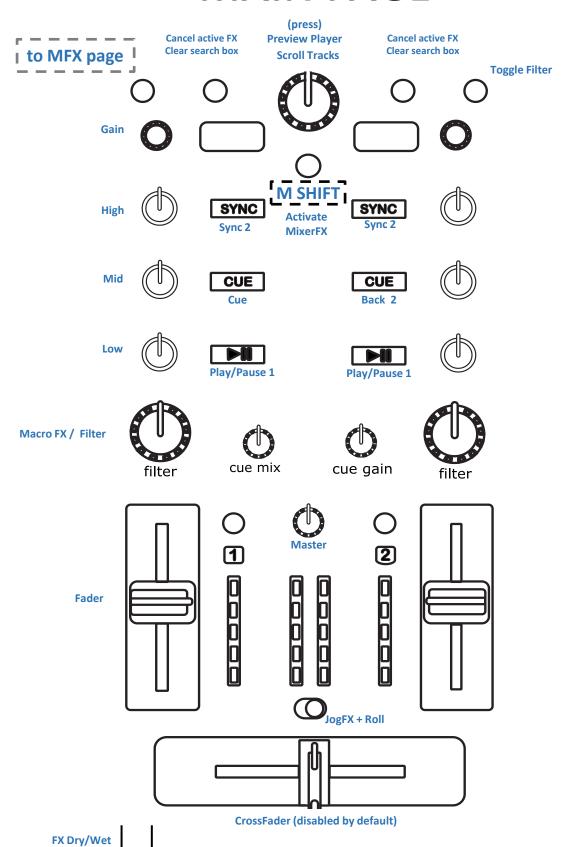


MAIN SHIFT

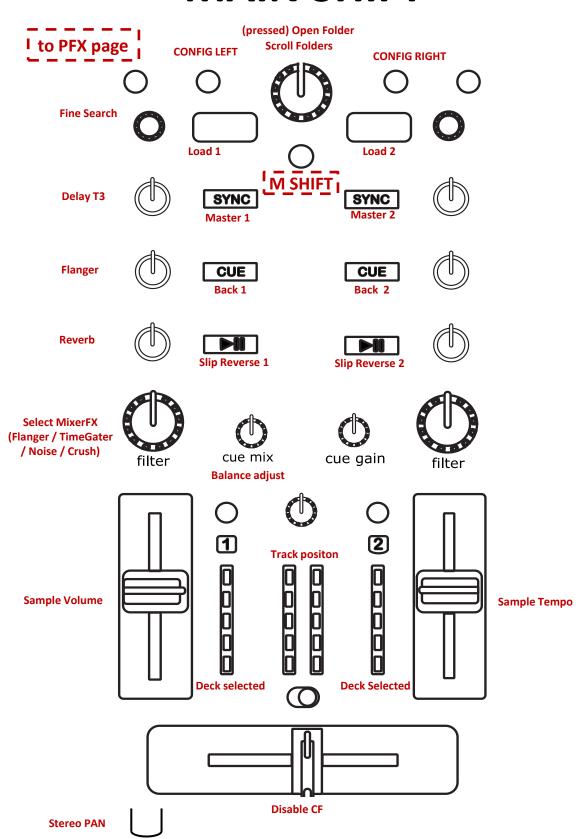


LEFT SHIFT

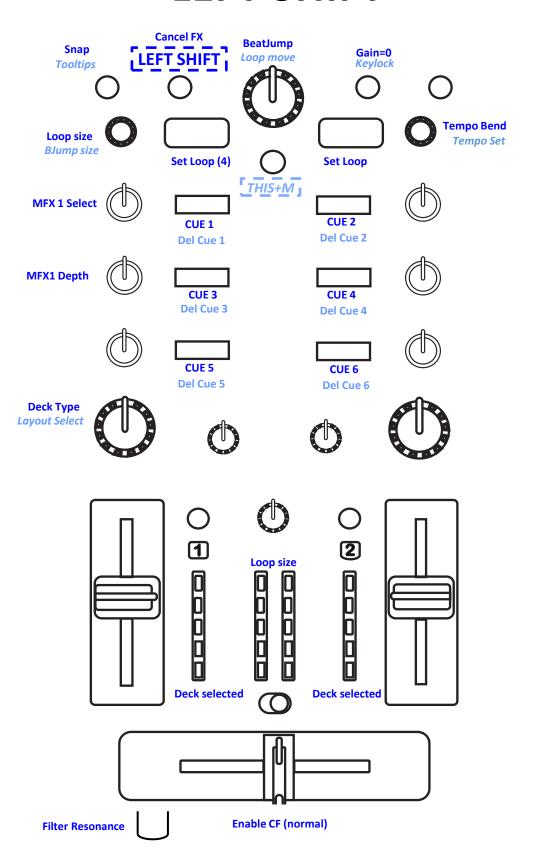


RIGHT SHIFT

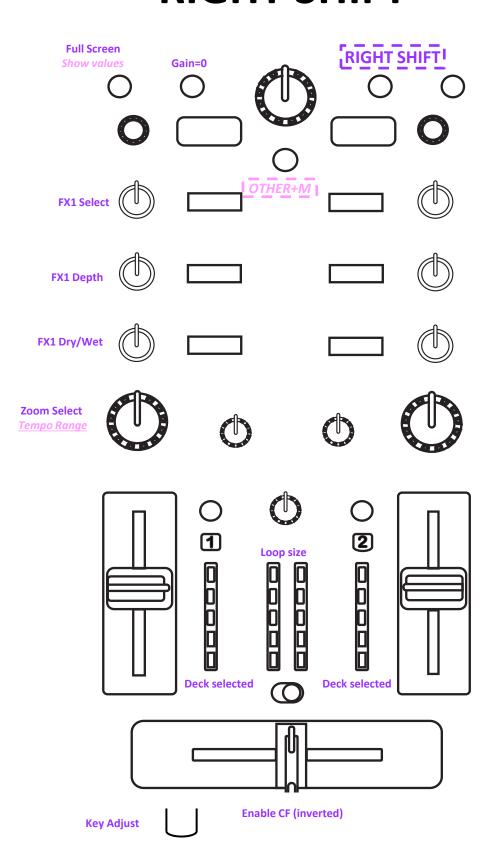


MACRO FX PAGE (main)

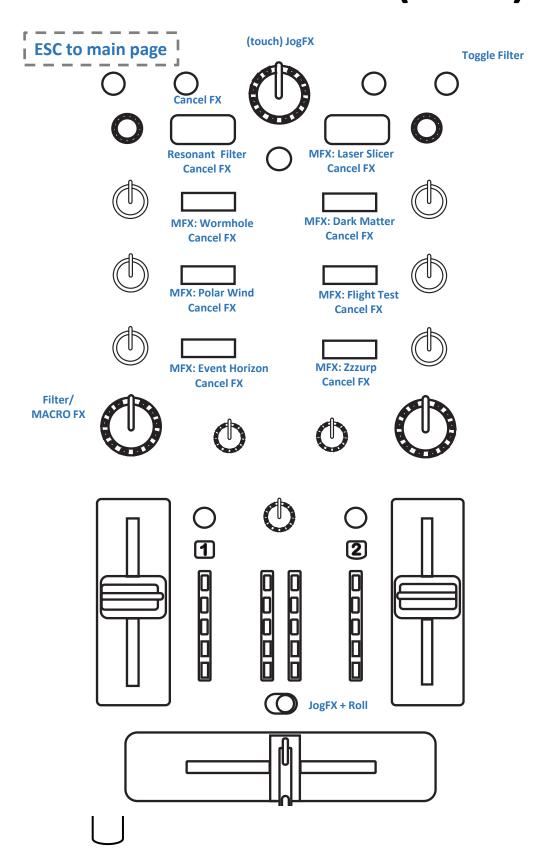


MACRO FX PAGE (shifted)

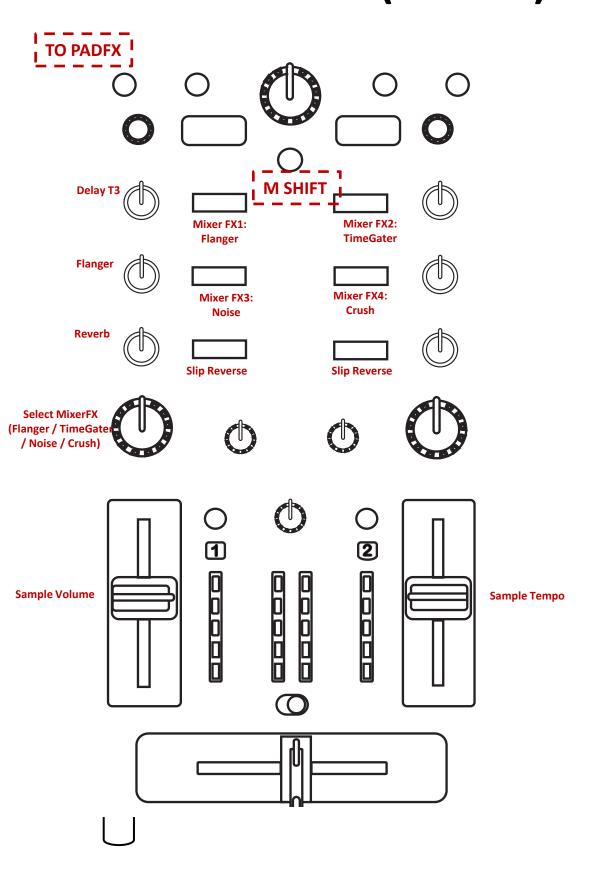


MACRO FX PAGE (shifted2)

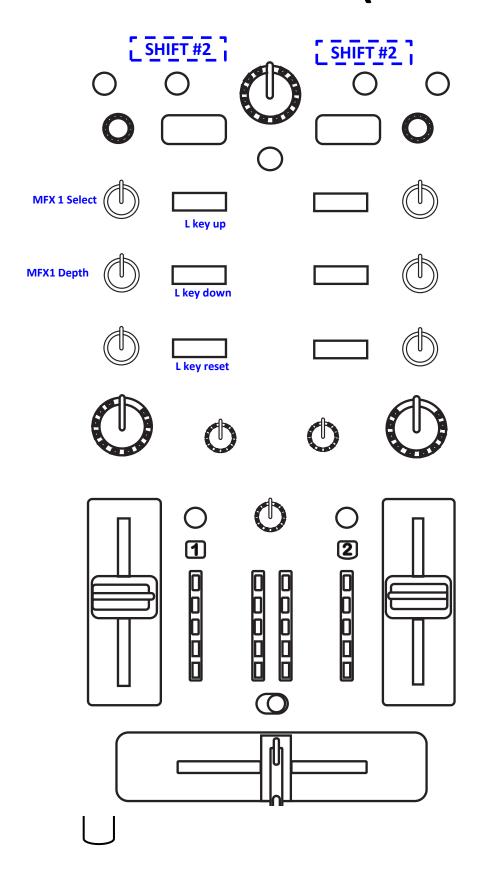

PAD FX PAGE (main)

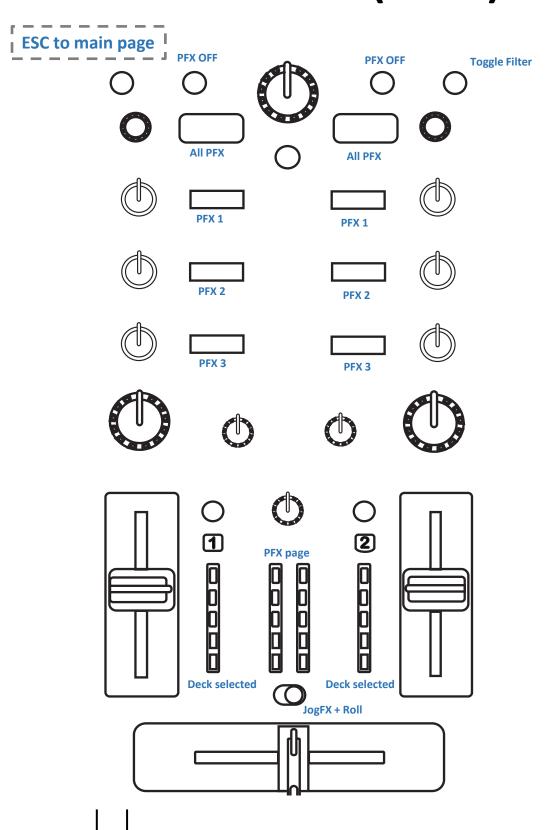

PAD FX (shift) / SAMPLER

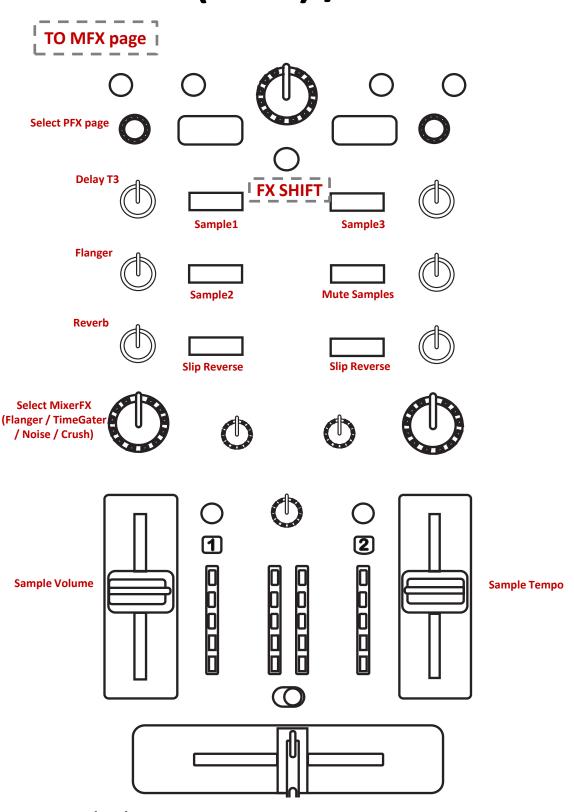


BROWSER / PREVIEW

(press) Preview Track Scroll Folders (pressed) Open Folder


Page down files

Page down folder

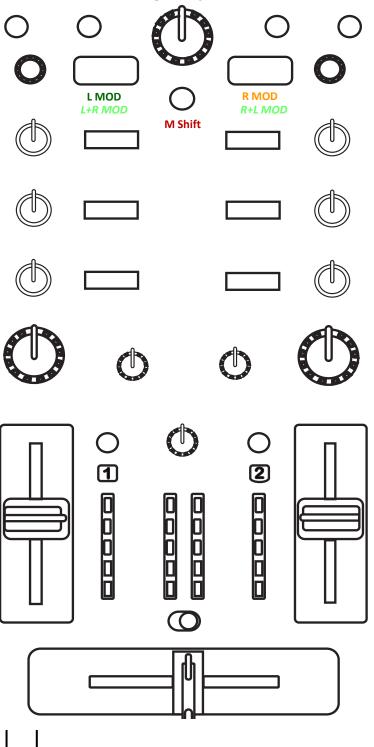


TOUCH MODE

Touch: start JogFX
Turn: change jogFX

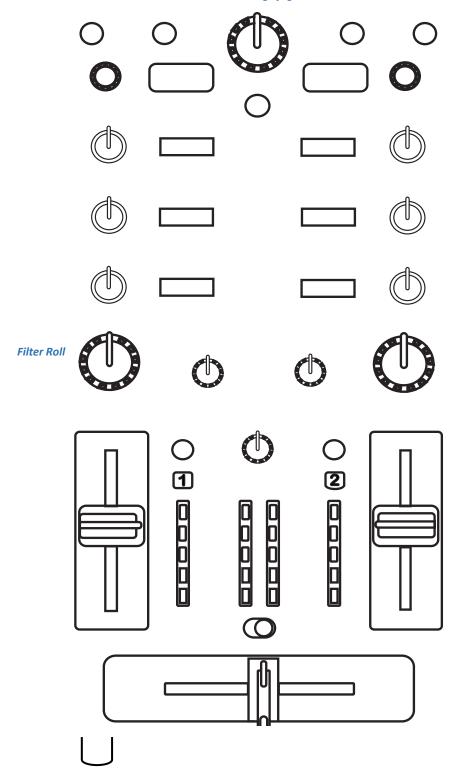

DECK SELECT

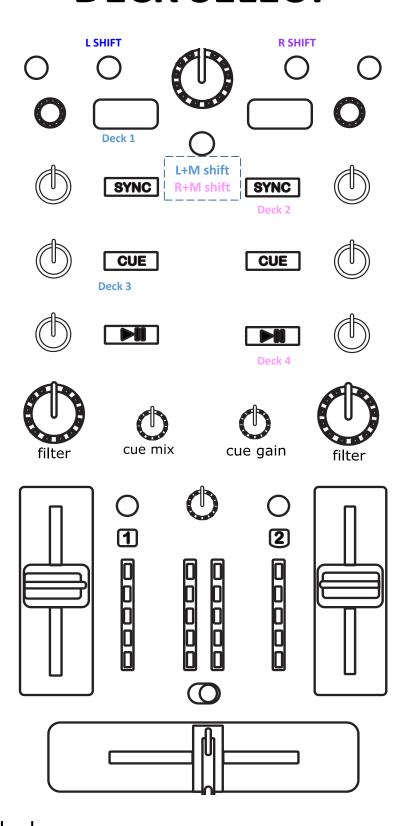

BEATGRID MODE

