




Chengdu Ebyte Electronic Technology Co.,Ltd

Wireless Modem

User Manual

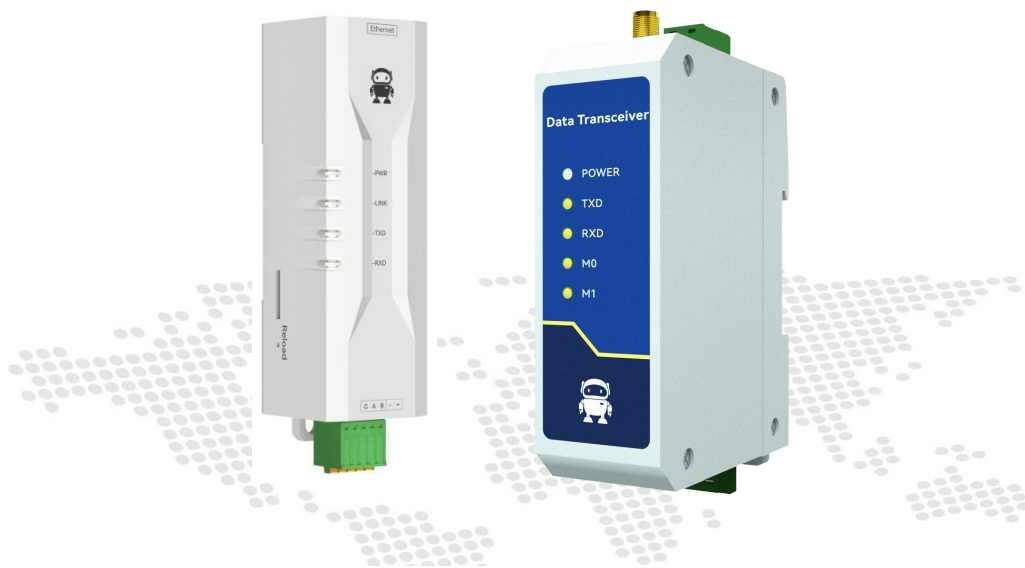

Serial Port Ethernet Serial Server NA111/NA111-A/NA111-M/NA111-E

All rights to interpret and modify this manual belong to
Chengdu Ebyte Electronic Technology Co., Ltd.

目录

1. Product Introduction	1
1.1.1. Network test environment	2
2. Quick Start	3
2.1. Preparation for use	3
2.2. Equipment wiring	3
2.3. Software settings	4
2.3.1. Default parameters	5
2.3.2. Data transmission test	5
3. Product Overview	8
3.1. Product specification	8
3.2. technical parameter	9
3.3. Indicator Description	10
3.3.1. NA111/NA111-A/NA111-E	10
3.3.2. NA111-M	10
3.4. Mechanical dimensions	12
3.4.1. NA111/NA111-A/NA111-E	12
3.4.2. NA111-M	12
3.5. Pin definition	13
3.5.1. NA111/NA111-A/NA111-E	13
3.5.2. NA111-M	14
3.6. Installation method	15
3.6.1. NA111/NA111-A/NA111-E	15
3.6.2. NA111-M	15
4. Product Function	17
4.1. Network parameters	17
4.1.1. IP address type	17
4.1.2. Domain name resolution (DNS)	18
4.1.3. Intranet access port	18
4.2. Network operation mode	18
4.2.1. TCP server mode	18
4.2.2. TCP client mode	19
4.2.3. UDP server mode	19
4.2.4. UDP client mode	20
4.2.5. HTTP client mode	21
1. GET	21
2. POST	23
4.2.6. MQTT client mode	25
4.3. Serial port parameters	27
4.4. Advanced parameters	27
4.4.1. Disconnection and reconnection function	27
4.4.2. Timeout restart function	28
4.4.3. Short connection function	28
4.4.4. Connection emptying cache function	28

4.4.5. Heartbeat packet function	29
4.4.6. Registration package function	29
4.5. Modbus gateway	30
4.5.1. Simple protocol conversion mode	30
4.5.2. Multi-host mode	33
4.5.3. Storage gateway	35
4.5.4. Configurable gateway	37
4.5.5. Automatic upload	38
4.6. Introduction to basic functions	40
4.6.1. Web page configuration	40
4.6.2. Restore factory settings	41
4.6.3. AT instruction configuration	42
4.6.4. Configuration tool software settings	42
4.6.5. Random native port	42
4.6.6. Remote upgrade	42
Revision History	48
About us	48

1. Product Introduction

NA111/NA111-A/NA111-E/NA111-M is a serial port server that converts serial port data to Ethernet data; It has multiple Modbus gateway modes and MQTT/HTTPC Internet of Things gateway modes, which can meet the networking functions of various serial port devices/PLCs; Adopt industrial design standards to ensure equipment reliability; The product is equipped with RJ45 interface and RS485 port is 3 × 3.81mm Phoenix terminal, the product can be installed with guide rail.



Features


- RJ45 supports 10M Ethernet interface;
- Support multiple working modes (TCP Server, TCP Client, UDP Server, UDP Client, HTTPC, MQTT);
- Support configuration tools, web pages and AT commands;
- The server mode supports multiple socket connections;
- NA111-E supports POE power receiving;
- Support multiple baud rates;
- Support DHCP function;
- DNS (domain name resolution) is supported, and the domain name resolution server can be customized;
- Support multiple Modbus gateways (simple protocol conversion, multi-host mode, storage gateway, configurable gateway);
- Support fast access to Alibaba Cloud, Baidu Cloud, OneNET, Huawei Cloud, and version 3.1 standard MQTT servers;
- Support HTTP protocol (GET/POST request);
- Support virtual serial port;
- Support timeout restart function and customize the restart time;
- Support the short connection function and customize the short connection interval;
- Support heartbeat package and registration package functions;
- Support serial port cache cleaning function;
- Support access to the Internet and LAN;
- Support hardware restoration to factory settings;

- Support online upgrade function.

1.1.1. Network test environment

To avoid server search failure and inability to open web pages and other related problems in the actual application process, it is recommended to check the relevant settings of the computer first.

- (1) Turn off the firewall and antivirus software of the computer;
- (2) Configure the network card connected to the device;
- (3) This case is for the test of direct connection of the equipment to the computer. The computer needs to be configured as static IP (the computer is directly connected to the serial port server, there is no router to assign, and the computer cannot obtain the IP address). The use of a switch or router needs to ensure that the equipment and the computer are on the same network end (for example, 192.168.3. xxx);
- (4) The static IP of the computer is 192.168.3.4 (the same network segment as the serial port server), the subnet mask is 255.255.255.0, and the default gateway is 192.168.3.1.

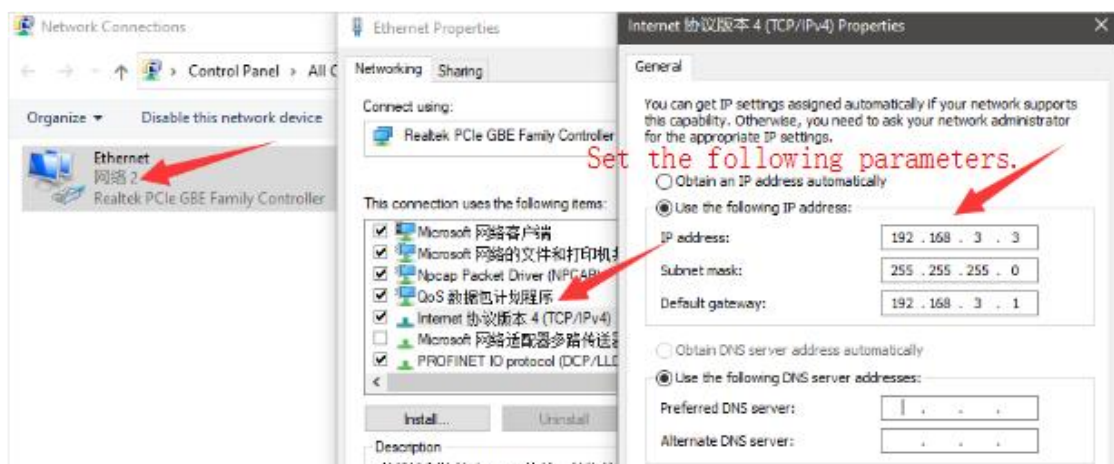


2. Quick Start

If there is a problem in the use process, click the official website

link:<https://www.cdebyte.com/Modem>

2.1. Preparation for use

Before using the serial server (hereinafter referred to as the "device"), it is necessary to prepare the network cable, computer, USB to serial converter and other relevant auxiliary materials. The details are as follows:

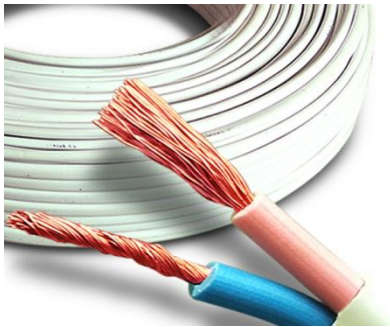		
NA111	Network cable	computer
		
DC 12V switch power supply	USB to RS485	Several cables

[Note] This case uses NA111 equipment, and NA111-A only has different power input.

2.2. Equipment wiring

NA111、NA111-M、NA111-E power wiring (DC 8~28V,+(positive, red), - (negative, black)):




NA111-A power wiring (AC 85~265V, L (live line, red), N (zero line, blue)):



Serial port and network port and wiring:

- 1、 The standard 10M RJ45 network port is adopted, and the M1 indicator light of the equipment is always on after the correct connection;
- 2、 RS485 interface (3 × 3.81mm Phoenix terminal), device A is connected to A of USB to RS485 converter, device B is connected to B of USB to RS485 converter (please use standard RS485 twisted pair shielded cable for a long distance), and the GND of the converter is connected to G of the device (optional).

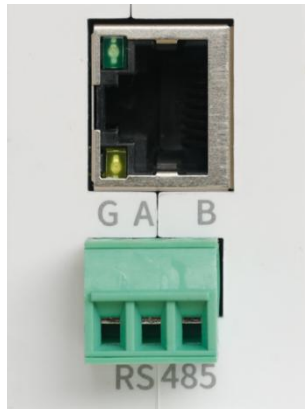

Note: NA111-E supports POE power receiving, and can use POE switches to supply power through network cables.

2.3. Software settings

2.3.1.Default parameters


project	Default parameters
IP address	192.168.3.7
Default local port	8887
Subnet mask	255.255.255.0
Default gateway	192.168.3.1
Default working mode	TCP Server
Serial baud rate	115200
Serial port parameters	8 / None / 1

2.3.2.Data transmission test


After the above operation steps, follow the factory default parameters of the equipment and perform the following operations to realize the transparent data transmission test.

The operation steps are as follows:


- (1) Open the test TCP/IP debugging assistant software;
- (2) In the "Network Settings" area, select the TCP Client mode. The remote host address corresponds to the device's default local IP: 192.168.3.7. The remote host port corresponds to the device's factory local port 8887. Click Connect;
- (3) Wait for the computer to connect to the serial port server. After the connection is completed, M0 of the serial port server is always on;

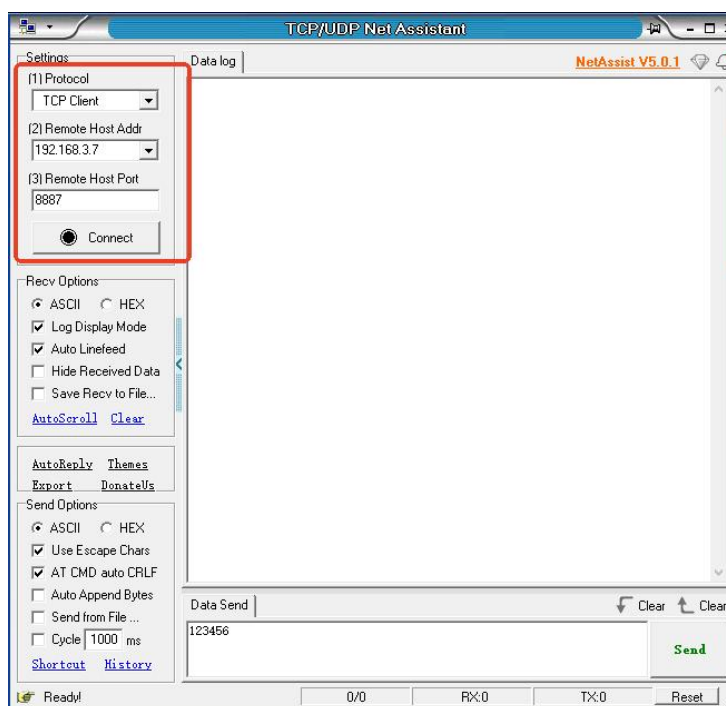

(4) Open the serial port assistant, set the serial port baud rate to 115200, set the serial port parameter to 1/8/None, and click to open the serial port;

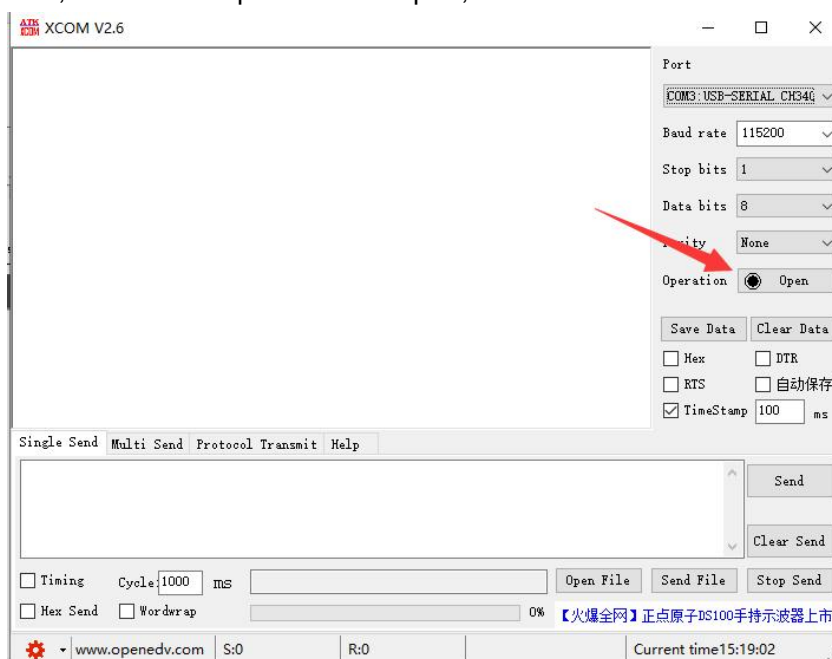

(5) For data transmission test, the serial port assistant (serial port end) sends the test data, and the network debugging assistant (network end) receives the test data. The network debugging assistant (network side) sends the test data, and the serial port assistant (serial port side) receives the test data. Realize duplex communication (i.e. local to network two-way data receiving and sending).

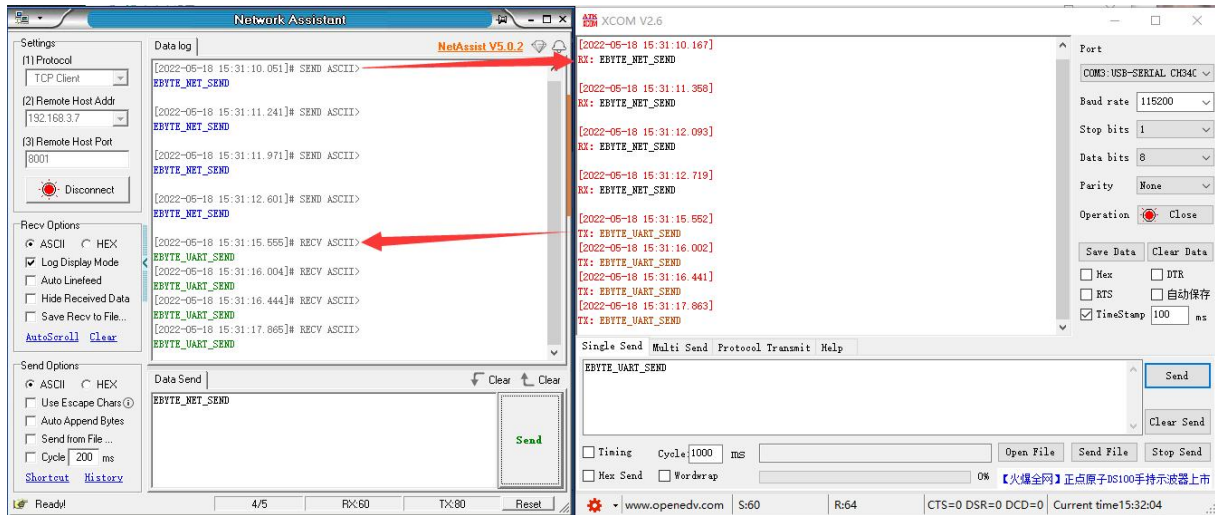

3. Product Overview

3.1. Product specification

Product model	product type	Socket Number of connections	Working mode	working voltage	Product size (mm)
NS1	Chip module	6-way	TCP Server TCP Client UDP Server UDP Client MQTT Client HTTP Client	3.0~5.5V(DC)	17×19×4
NT1	In-line module	6-way		3.0~5.5V(DC)	35×22×30
NT1-B					
NA111	DTU	6-way		8~28V(DC)	110×66×30
NA111-A				85~265V(AC)	
NA111-M				8~28V(DC)	93×28×27
NA111-E				8~28V(DC)	110×66×30
NB114	DTU	6-way		8~28V(DC)	102×84×25

3.2. technical parameter

project	explain
working voltage	8~28V DC (NA111/NA111-M/NA111-E) /85~265V AC (NA111-A)
Interface	Serial port (RS485, 3 × 3.81mm Phoenix terminal)
	Network interface (RJ45), NA111-M supports POE power supply
Working mode	TCP Server (default), TCP Client, UDP Server, UDP Client, HTTP Client, MQTT Client
Socket connection	TCP server supports 6-way client connections
Network protocol	TCP/UDP、MQTT、HTTP、IPv4、DHCP、DNS
IP acquisition method	Static IP (default), DHCP
DNS domain name resolution	support
Domain name resolution server	114.114.114.114 (customizable)
collocation method	Web page, parameter configuration tool, AT command
IP address	192.168.3.7 (customizable)
user name	Admin (customizable)
password	Admin (customizable)
Local Port	8887 (customizable)
Subnet mask	255.255.255.0 (customizable)
gateway	192.168.3.1 (customizable)
Serial port cache	1024 Byte
Packaging mechanism	512 Byte
Serial baud rate	1200~230400 bps (115200 by default)
Data bits	5, 6, 7, 8 (default)
Stop bit	1 (default), 2
Check bit	None (default), Odd, Even
Flow control	NONE (default), RTS/CTS, DSR/DTR, XON/XOFF
Product size	MA111/NA111-A/NA111-E: 110×66×30mm (L×W×H) NA111-M: 93×28×27mm (L×W×H)
Product weight	NA111: 80g ± 5g NA111-A/NA111-E: 90g ± 5g NA111-M: 40g ± 5g
Working temperature and humidity	-40~+85 ℃, 5%~95% RH (no condensation)
Storage temperature and humidity	-40~+105 ℃, 5%~95% RH (no condensation)

3.3. Indicator Description


3.3.1. NA111/NA111-A/NA111-E



Serial number	name	function	explain
1	POWER	Power indicator	Power on: the blue light is always on. Power off: the lamp is off.
2	TXD	Serial port transmission indicator	3 seconds before power-on: flash. When waiting for the network cable: always on. Data is sent: the red light flashes. No data transmission: the light is off.
3	RXD	Serial port receiving indicator	3 seconds before power-on: flash. When waiting for the network cable: always on. There is data reception: the green light flashes. No data reception: the light is off.
4	M0	Link indicator	3 seconds before power-on: flash. When waiting for the network cable: always on. Network connection: the green light is always on. Network disconnection: the light is off. UDP mode: the green light is always on.
5	M1	STATE indicator	Network cable connection: the yellow light is always on. The network cable is disconnected: the light is off.

[Note] When the network cable is not connected, POWER, TXD, RXD and M0 are all on, M1 is off, and the device is in standby state.


3.3.2. NA111-M

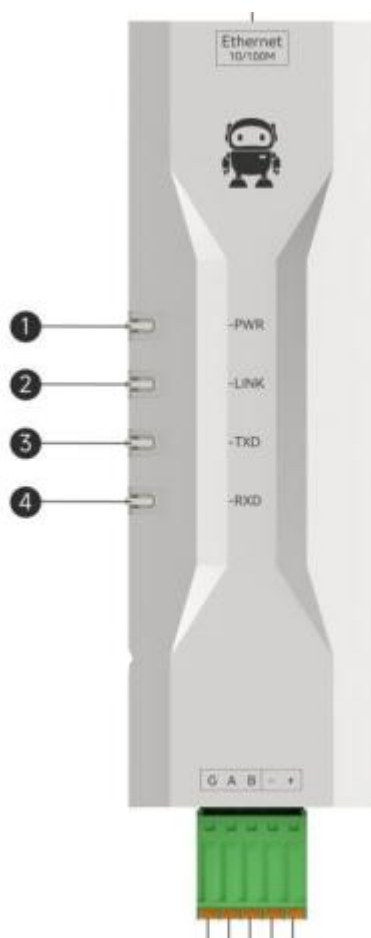


Serial number	name	function	explain
1	POWER	power light (blue)	Power on: the light is always on. Power off: the lamp is off.
2	LINK	Connect the indicator light (yellow)	Network connection: the green light is always on. Network disconnection: the light is off. UDP mode: the green light is always on.
3	TXD	Serial port to send the indicator light (green)	Data is sent: the red light flashes. No data transmission: the light is off.
4	RXD	Serial port reception indicator light (yellow)	There is data reception: the green light flashes. No data reception: the light is off.

3.4. Mechanical dimensions

3.4.1. NA111/NA111-A/NA111-E

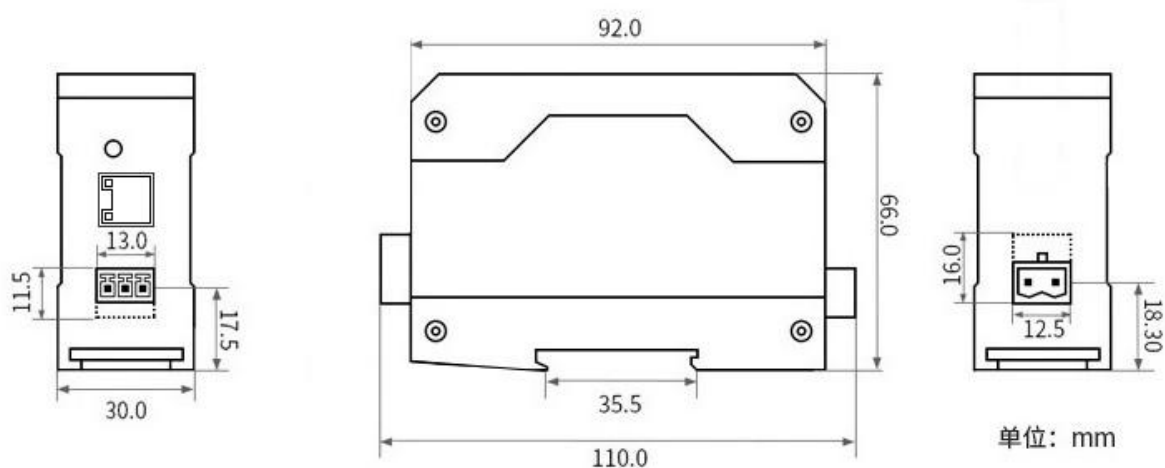


3.4.2. NA111-M

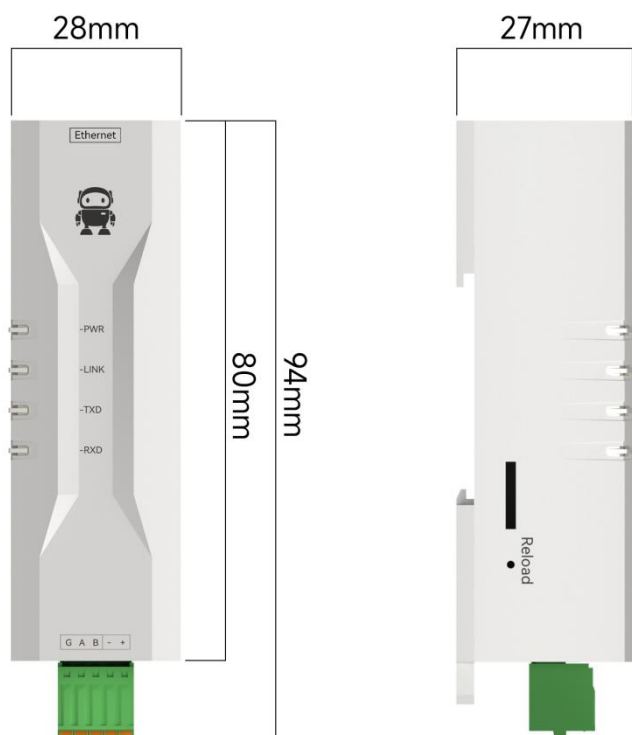

3.5. Pin definition


3.5.1. NA111/NA111-A/NA111-E

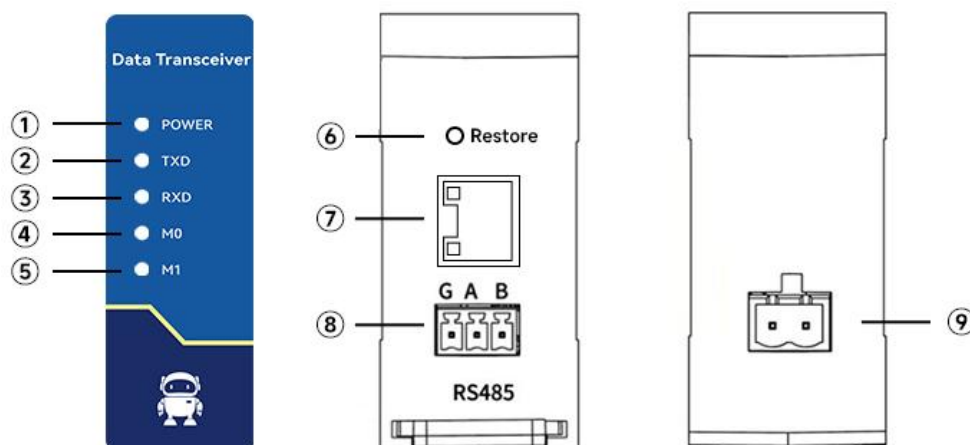

Serial number	name	function	explain
1	POWER	Power indicator	Power on: the blue light is always on. Power off: the lamp is off.
2	TXD	Serial port transmission indicator	3 seconds before power-on: flash. Data is sent: the red light flashes. No data transmission: the light is off.
3	RXD	Serial port receiving indicator	3 seconds before power-on: flash. Data is sent: the green light flashes. No data transmission: the light is off.
4	M0	Link indicator	3 seconds before power-on: flash. Network connection, the green light is always on. The network is disconnected and the light is off. UDP mode: the green light is always on.
5	M1	STATE indicator	The yellow light is always on when the network cable is connected. The network cable is disconnected and the light is off.
6	Restore	Reset button	Press and hold until the POWER, TXD, RXD and M0 indicator lights are always on and then release.
7	RJ45	Network interface	10M network port, NA111-E supports POE power supply
8	RS485	RS485 interface	A connects to A and B connects to B.

9	Power input	NA111/NA111-E (DC) NA111-A (AC)	NA111/NA111-E: 8-28V DC input, 2 × 5.08mm Phoenix terminal. NA111-A: 85-265V AC input, 2 × 5.08mm Phoenix terminal.
---	-------------	------------------------------------	--

3.5.2. NA111-M

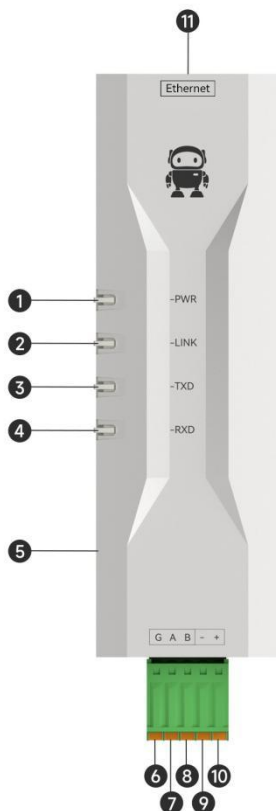


Serial number	name	function	explain
1	POWER	power light (blue)	Power on: the light is always on. Power off: the lamp is off.
2	LINK	Connect the indicator light (yellow)	Network connection: the green light is always on. Network disconnection: the light is off. UDP mode: the green light is always on.
3	TXD	Serial port to send the indicator light (green)	Data is sent: the red light flashes. No data transmission: the light is off.
4	RXD	Serial port reception indicator light (yellow)	There is data reception: the green light flashes. No data reception: the light is off.

5	Reload	Reset button	Long press to LINK, M0, M1 indicator light often on and release to restore the factory success.
6	G	GND	Connect the RS485 cable shield layer or RS232-G
7	A	485-A	Connect the RS485-A interface.
8	B	485-B	Connect the RS485-B interface.
9	-	Power anode	Connect 8 to 28 v Power Supply V-
10	+	Power positive pole	Connect the 8 to 28 v power supply V +
11	Ethernet	internet access	Standard RJ 45 interface, 10M network port

3.6. Installation method



3.6.1. NA111/NA111-A/NA111-E

The equipment is installed by guide rail.

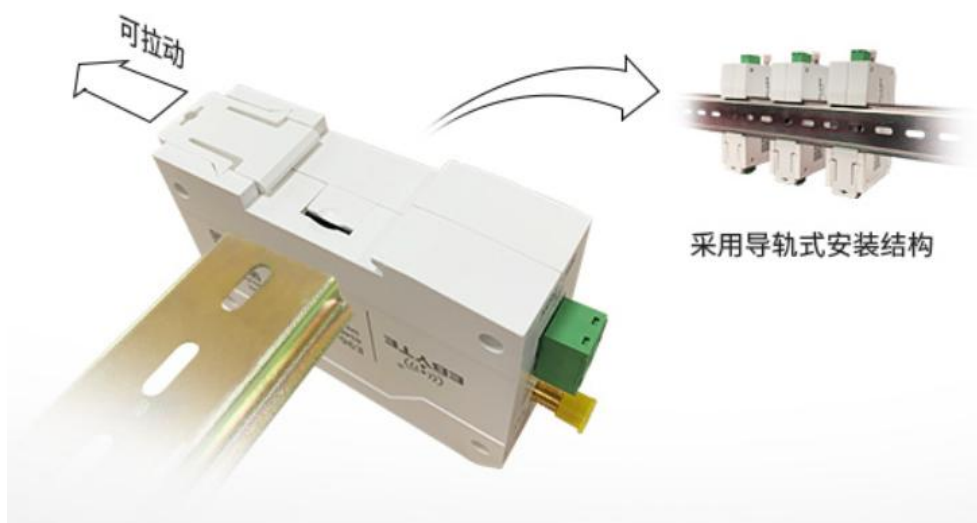

3.6.2. NA111-M

The equipment shall be installed by guide rail or positioning hole.

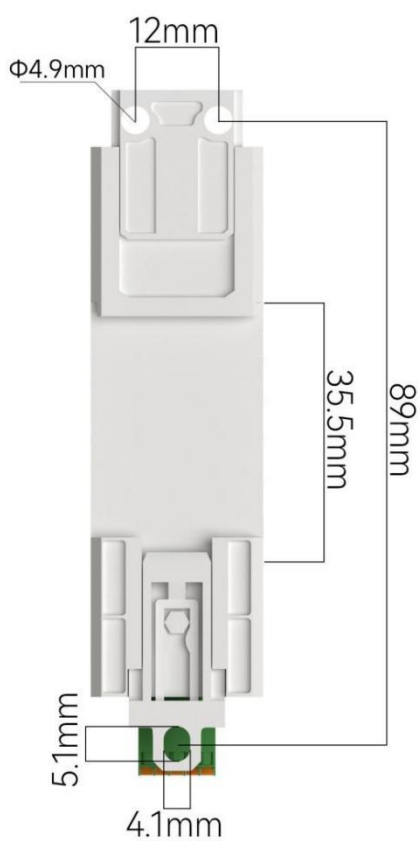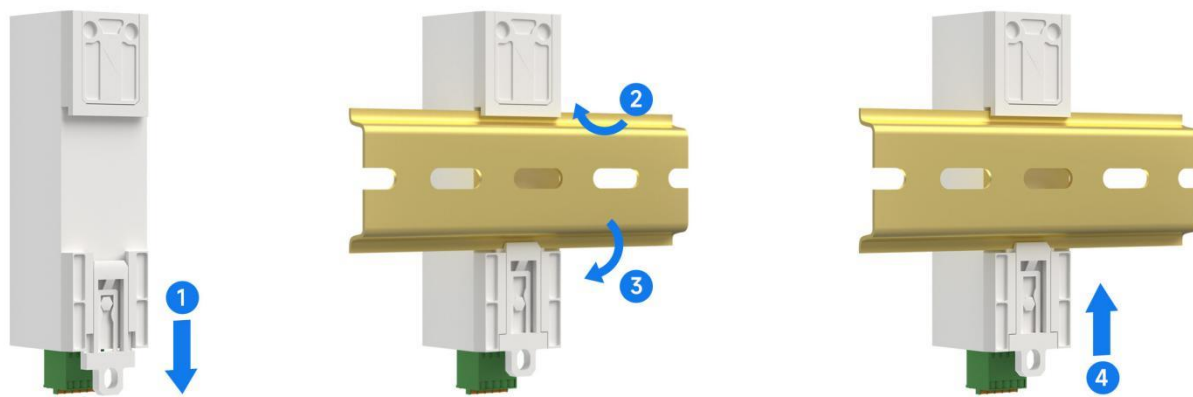

4. Product Function

4.1. Network parameters

4.1.1. IP address type

The IP address is the identification of the module in the LAN, which is unique in the LAN. Therefore, it cannot be duplicated with other devices in the same LAN. The IP address of the module can be obtained by static IP and DHCP.

- (1) Static IP: The static IP needs to be set manually by the user. In the process of setting, pay attention to writing the IP, subnet mask and gateway at the same time. The static IP is suitable for the scenario where the IP and device need to be counted and corresponding one by one.

Advantages: access to devices that cannot be assigned IP addresses can be searched through the full-segment broadcast mode, which is convenient for unified management;

Disadvantages: Different intranet segments in different LANs lead to the failure of normal TCP/UDP communication.

- (2) Dynamic DHCP: DHCP is mainly used to dynamically obtain IP address, gateway address, DNS server address and other information from the gateway host, thus eliminating the tedious steps of setting IP address. It is applicable to scenarios where there is no requirement for IP and no requirement for one-to-one correspondence between IP and modules.

Advantages: The access router and other devices with DHCP server can communicate directly, reducing the trouble of setting IP address gateway and subnet mask.

Disadvantages: If the module is connected to a network without a DHCP server, for example, if it is directly connected to a computer, the module will not work properly.

The subnet mask is mainly used to determine the network number and host number of the IP address, indicate the number of subnets, and determine whether the module is in the subnet.

The subnet mask must be set. Our commonly used Class C subnet mask is 255.255.255.0, the network number is the first 24 digits, the host number is the last 8 digits, the number of subnets is 255, and the module IP is within the range of 255, then the module IP is considered to be in the subnet.

Gateway refers to the network number of the network where the module's current IP address is located. If the router and other devices are accessed when connecting to the external network, the

gateway is the router.

4.1.2.Domain name resolution (DNS)

Domain name resolution converts the domain name into an IP address recognized by the network through the domain name resolution (DNS) server. The domain name resolution (DNS) server address of the serial port server supports user customization. It can achieve domain name resolution through the customized domain name resolution server in case of domain name server exception. The device will report the resolution request to the customized domain name resolution (DNS) server during domain name resolution, and return the device connection parameters (generally IP address) after the resolution is completed.

In DHCP mode, the domain name resolution (DNS) server address is automatically obtained (synchronous router domain name resolution address) and cannot be modified.

In the static IP mode, the default address of the domain name resolution (DNS) server is 114.114.114.114.

4.1.3.Intranet access port

The default intranet access port is 80.

[Note] If the port number is modified, the port number should be added in the address input column. For example, to modify the web page access port to 8080, you need to enter 192.168.3.7:8080 in the address column to connect to the web page configuration.


4.2. Network operation mode

4.2.1.TCP server mode

TCP Server is a TCP server. In the TCP Server mode, the device listens to the local port, accepts the connection request of the client and establishes a connection for data communication, which is usually used for communication with TCP clients in the LAN.

When the Modbus gateway function is turned off, the device will send the data received by the serial port to all the client devices that have established a connection with the device. At most, it can connect 6 clients. After the Modbus gateway function is enabled, the non-Modbus data will be cleared and will not be forwarded.

Take NA111-M as an example, use the host computer for operation and configuration to establish a connection.

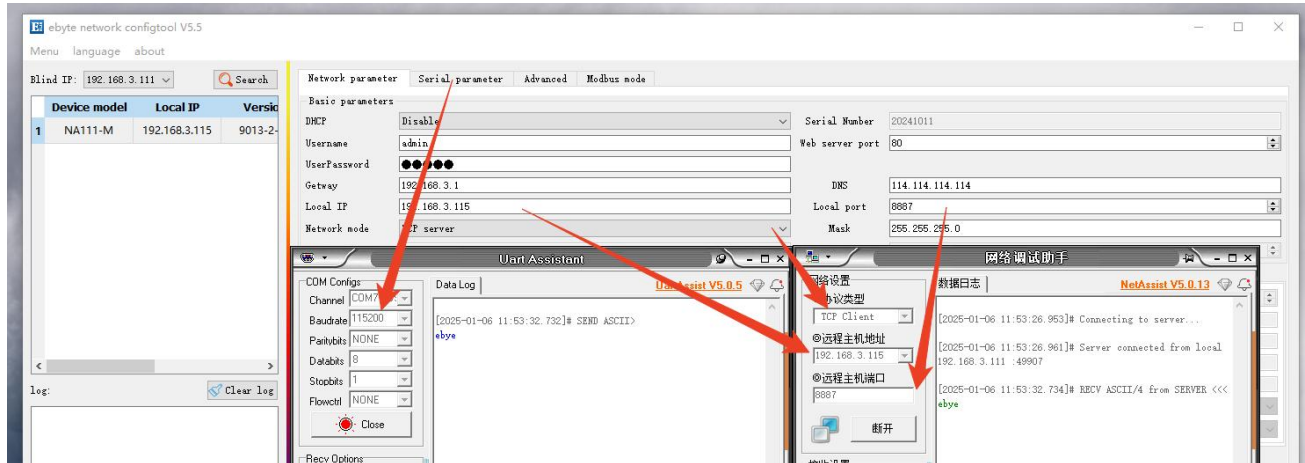


4.2.2.TCP client mode

TCP Client is the TCP client. When the device works, it will actively send a connection request to the server and establish a connection to realize the interaction between serial port data and server data.

To use the client, you need to configure the IP address/domain name and target port of the target accurately.

Take NA111-M as an example, use the host computer for operation and configuration to establish a connection.

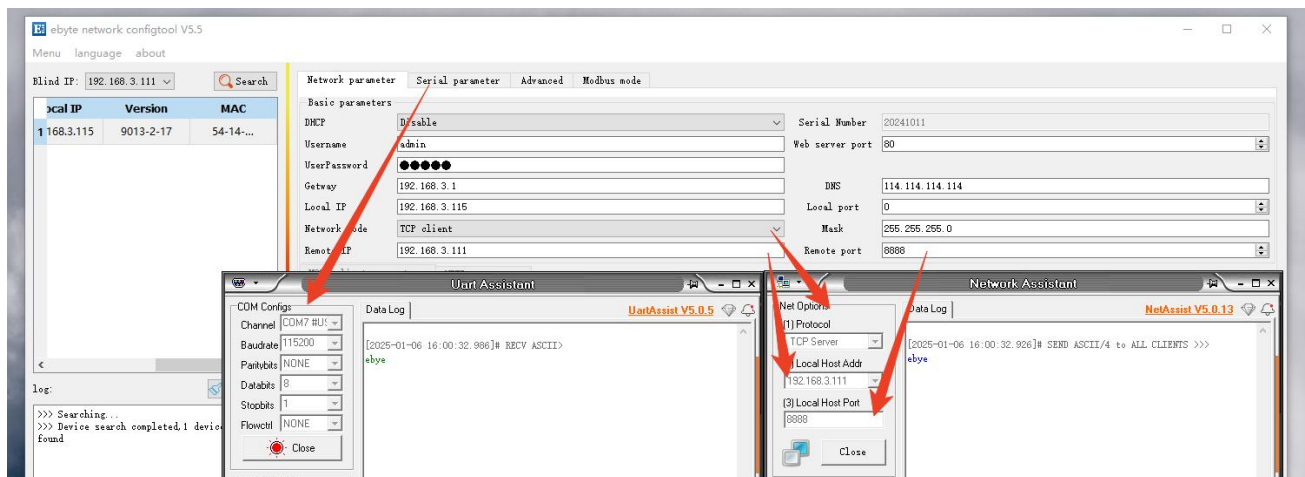

4.2.3.UDP server mode


UDP Server means that the device does not verify the data source IP address when communicating with UDP protocol. After receiving a UDP packet, it saves the source IP address and source port of the packet and sets it as the target IP address and port. Therefore, the data sent by the device only sends the data packet to the source IP address and port of the last time the device received the data.

This mode is usually used in scenarios where multiple network devices communicate with this device, and the frequency is high, and TCP Server cannot meet the conditions.

Using UDP Server requires remote UDP devices to send data first, otherwise data cannot be sent normally.

[Note] In UDP mode, the data sent by the network to the device should be less than 512Bit per packet, otherwise it will cause data loss.

Take NA111-M as an example, use the host computer for operation and configuration to establish a connection.

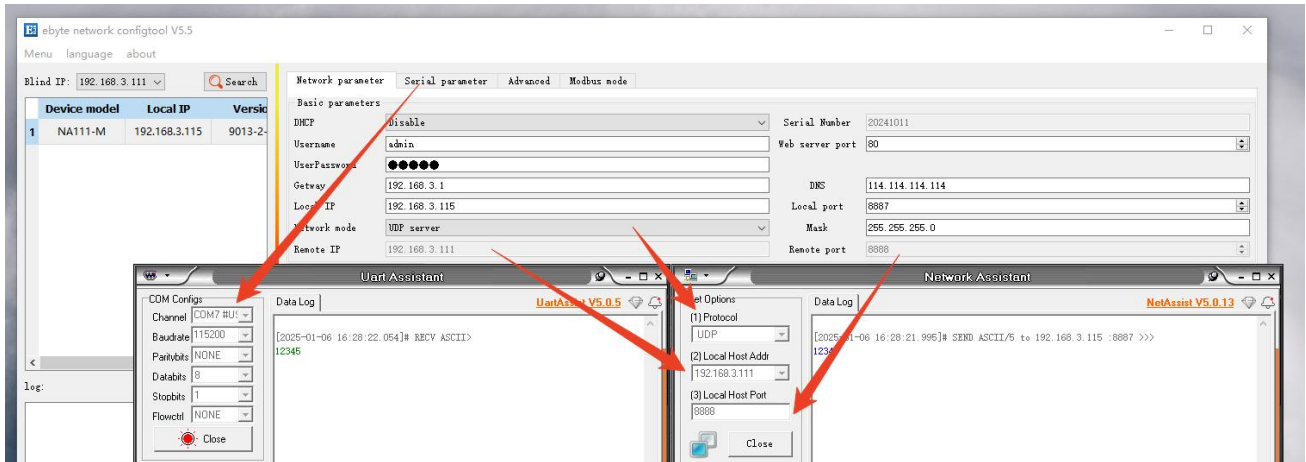


4.2.4.UDP client mode

UDP Client is a connectionless transport protocol that provides simple and unreliable transaction-oriented information transmission services. There is no connection establishment and disconnection. You only need to configure the destination IP and destination port to send data to each other. Usually used in data transmission scenarios where there is no requirement for packet loss rate, the data packet is small and the transmission frequency is fast, and the data is to be transmitted to the specified IP.

In UDP Client mode, the device will only communicate with the configured (target IP and target port) remote UDP device.

In this mode, the target address is set to 255.255.255.255, and the transmitted data will be broadcast in the whole network segment, but the receiving and transmitting equipment needs to ensure the port consistency, and the equipment can also receive the broadcast data.

Take NA111-M as an example, use the host computer for operation and configuration to establish a connection.

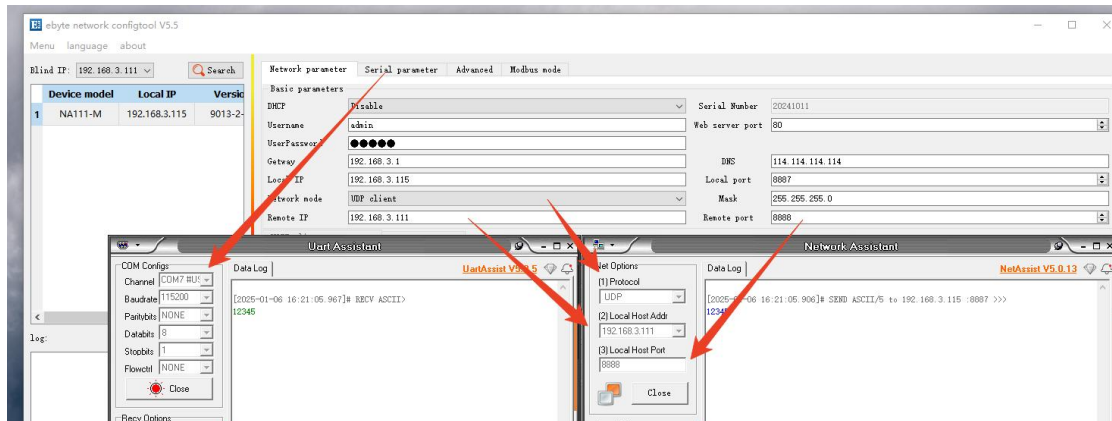

4.2.5.HTTP client mode

This mode can realize the HTTP packet grouping function, and provides two modes: GET and POST. The customer can configure parameters such as URL, Header, and send packets by the device (serial port server) to realize the fast communication between the serial port device and the HTTP server. The HTTP client mode is recommended to use the random port and open a short connection to save the HTTP server resources.

1. GET

Use the HTTP mode of OneNET multi-protocol access to test the HTTP-GET request of the device, as shown in the following figure.

(1) Return data configuration with header:

Chengdu Ebyte Electronic Technology Co.,Ltd



Device info		
Device model	NA111-M	Device SN
Version	9013.2.17	Username
		Password
Network parameter		
DHCP	enable	Work mode
Local IP	192.168.3.115	Local port
subnet mask	255.255.255.0	Gateway
Target IP	192.168.3.111	Target port
Serial parameter		
Baud rate	115200	Data bit
Stop bit	1	Parity
Flow	NONE	
HTTP client parameter		
HTTP request method		
URL		
HTTP head		
No HTTP header		
MODBUS parameter		
MODBUS TCP to RTU		
address filter		
Modbus instructions		

Network parameter		Serial parameter	Advanced	Modbus mode
Basic parameters				
DHCP	enable	Serial Number	20241011	
Username	admin	Web server port	80	
UserPassword	*****	DNS	114.114.114.114	
Gateway	192.168.3.1	Local port	0	
Local IP	192.168.3.115	Mask	255.255.255.0	
Network mode	HTTP client	Remote IP	8888	
Remote IP	192.168.3.111			
HTTP client parameters		HTTP parameters		
HTTP request mode		GET		
HTTP URL		http://www.micromet.cn		
Http head		User-Agent: Mozilla/5.0		
		No HTTP header		


Data return test:



(2) Return data configuration without header:

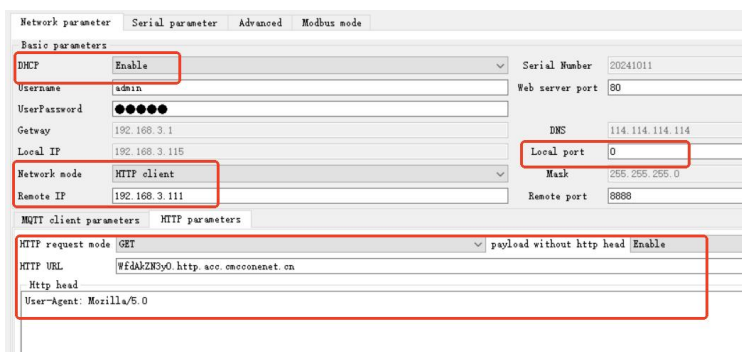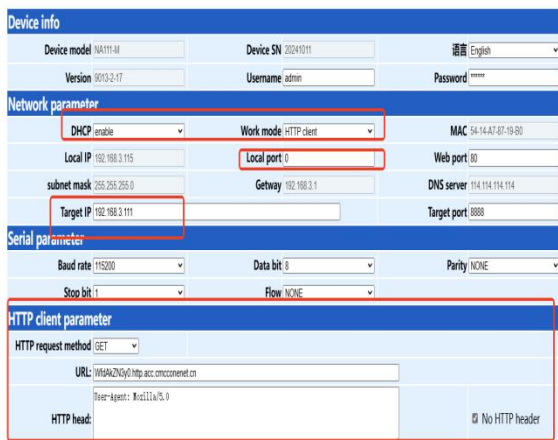

Data return test:

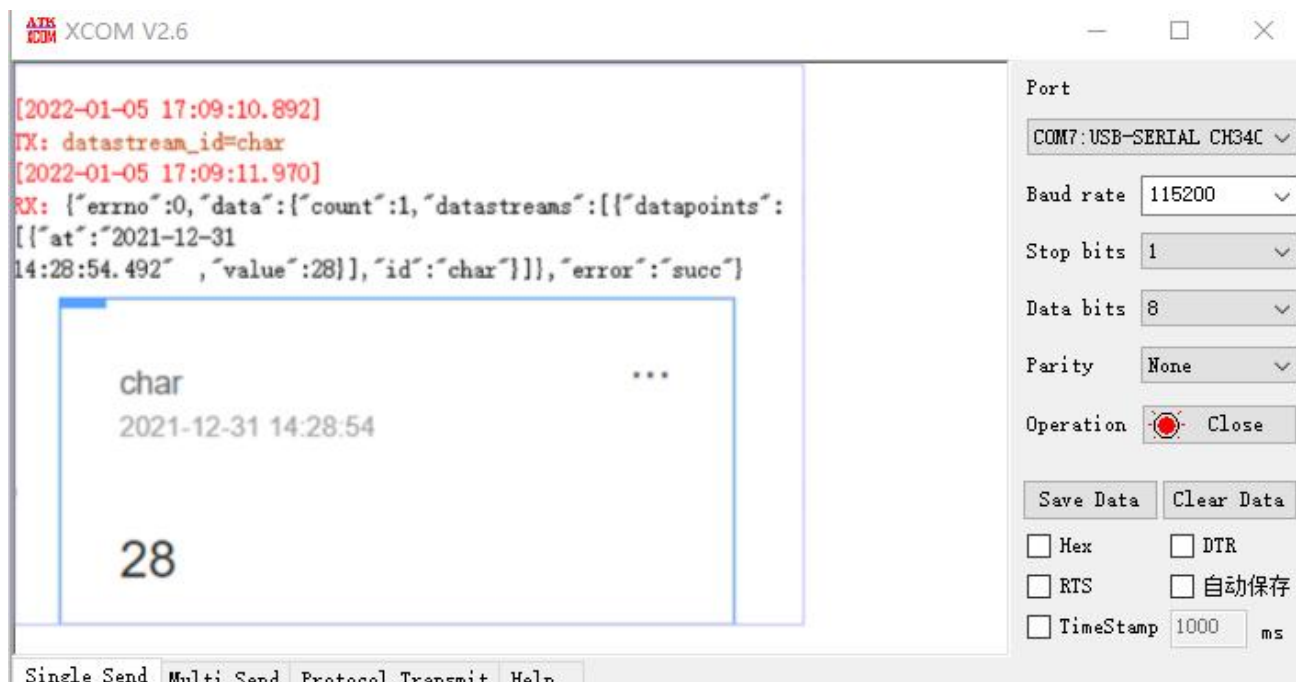

2. POST


Use the HTTP mode of OneNET multi-protocol access to test the HTTP-POST request of the device, as shown in the following figure.

(1) Return data configuration with header:

Chengdu Ebyte Electronic Technology Co.,Ltd

Device info		
Device model	NA111-M	Device SN
Version	9013-2-17	Username
		Password
Network parameter		
DHCP	enable	Work mode
Local IP	192.168.3.115	Local port
subnet mask	255.255.255.0	Getway
Target IP	192.168.3.111	MAC
		Web port
		DNS server
		Target port
Serial parameter		
Baud rate	115200	Data bit
Stop bit	1	Flow
		Parity
HTTP client parameter		
HTTP request method		
URL		
User-Agent		
HTTP head:		☐ No HTTP header
MODBUS parameter		

Data return test:

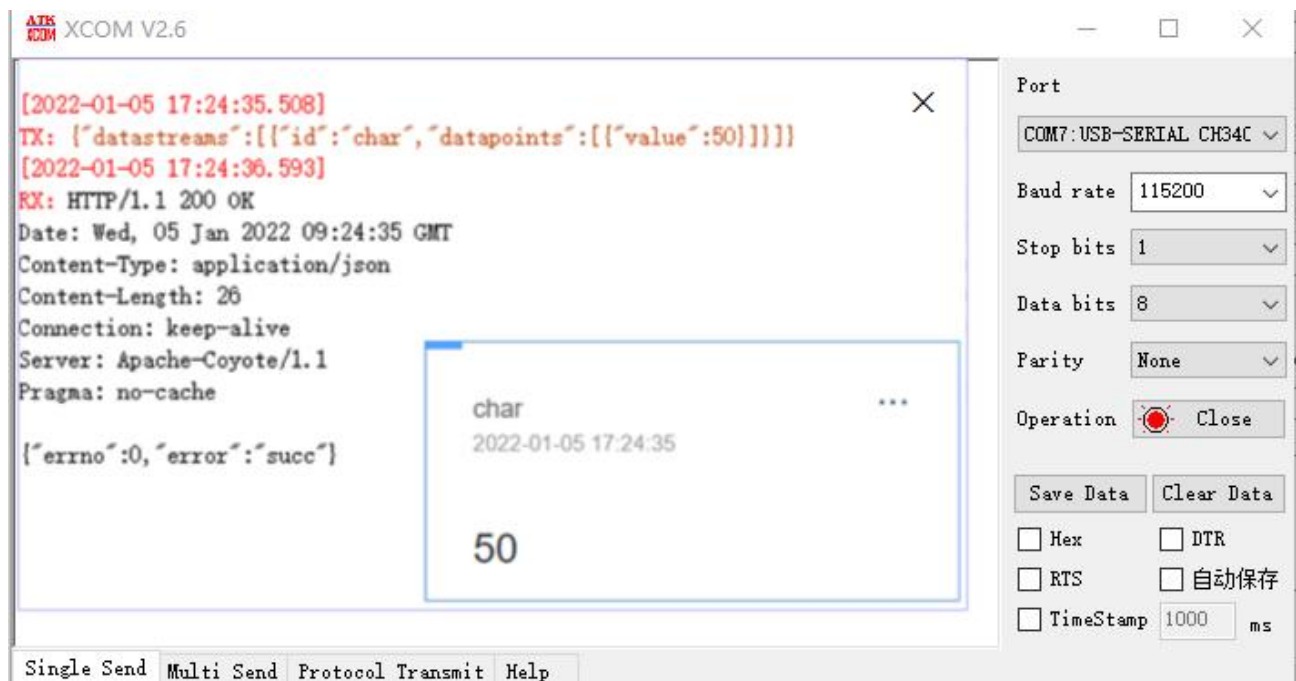

(2) Return data configuration without header:

Device info			
Device model	NA111-M	Device SN	20241011
Version	9013-2-17	Username	admin
		语言	English
		Password	*****
Network parameter			
DHCP enable		Work mode	HTTP client
Local IP	192.168.3.115	Local port	0
subnet mask	255.255.255.0	Gateway	192.168.3.1
Target IP	192.168.3.111	MAC	54-14-A7-87-19-B0
		Web port	80
		DNS server	114.114.114.114
		Target port	80
Serial parameter			
Baud rate	115200	Data bit	8
Stop bit	1	Flow	NONE
		Parity	NONE
HTTP client parameter			
HTTP request method		POST	
URL		http://WfdAkZN3y0.http.cc.cmcconet.cn	
User-Agent		Mozilla/5.0	
HTTP head:		☒ No HTTP header	
MODBUS parameter			
MODBUS TCP to RTU	Close	address filter	0
Modbus mode	disable	MODBUS polling interval	500
Modbus timeout	1000	MODBUS keep time	10
Range:0-65535ms		Range:0-255s	
		Mosbus instructions	
		spare space 49	
		01 03 00 00 00 0A	
		☒	
Instruction format: "XX XX XX XX XX XX";"XX" is a 2-digit hex number. Must add a space between each hex, up to 50 instructions can be configured			
Advanced			
Outage reconnect time	10	Reconnection times	2
Off:0;Range:10-255s		Range:0-255	
Chart connection	0	NET connected clear code	1800
			Off:0;Range:180-65535s

Data return test:

4.2.6.MQTT client mode

The serial server supports the fast access standard MQTT3.1 protocol server (OneNET, Baidu Cloud, Huawei Cloud, user-built and other server types) and Alibaba Cloud server, supports the quality of service level configuration (Qos 0, Qos 1), supports the ultra-long text configuration, and facilitates better access to network service operators (server address, three elements, subscription and publishing address support the configuration of up to 128 characters).

Standard MQTT3.1.1

Here, the standard MQTT3.1.1 connection takes Tencent's standard MQTT3.1.1 server as an example. The "three elements" described in the standard can be obtained from Tencent server as shown in the following figure:

Client ID ELD0ERCUKDDEV01 复制

MQTT Username ELD0ERCUKDDEV01;12010126;ED6M4;1677376303 复制

MQTT Password b7... 269899;hmacsha256 复制

Parameter configuration (upper computer and web page) is described as follows:

Device info

Device model	NA111-M	Device SN	20241011	语言	English
Version	9013-2-17	Username	admin	Password	*****

Network parameter

DHCP	enable	Work mode	MQTT client	MAC	54-14-A7-87-19-B0
Local IP	192.168.3.115	Local port	0	Web port	80
subnet mask	255.255.255.0	Getway	192.168.3.1	DNS server	114.114.114.114
Target IP	192.168.3.111	Target port	8888		

Serial parameter

Baud rate	115200	Data bit	8	Parity	NONE
Stop bit	1	Flow	NONE		

MQTT client parameter

MQTT server	Standard 3.1.1	keepAlive	120	Range:30-1200 s
Device name: (Client ID)	test-iot			
user name: (Device name)	1234/all			
password: (Device secret)	123456789			
PrductKey	123456			
Publish topic	all/00000009000000094411/sub			Qos 0
Subscribe topic	all/00000009000000094411/sub			Qos 0

Network parameter Serial parameter Advanced Modbus mode


Basic parameters

DHCP	Enable	Serial Number	20241011
Username	admin	Web server port	80
UserPassword	●●●●●●		
Getway	192.168.3.1	DNS	114.114.114.114
Local IP	192.168.3.115	Local port	0
Network mode	MQTT client	Mask	255.255.255.0
Remote IP	192.168.3.111	Remote port	8888

MQTT client parameters HTTP parameters

MQTT server	typical MQTT 3.1.1	Keepalive cycle	120sec
ClientID	test-iot		
UserName	1234/all		
Password	123456789		
	123456		
Subscribe topic	all/00000009000000094411/sub		Qos 0
Publish topic	all/00000009000000094411/sub		Qos 0

Configure the corresponding subscription publishing address, and use the platform online debugging to send data for communication test:

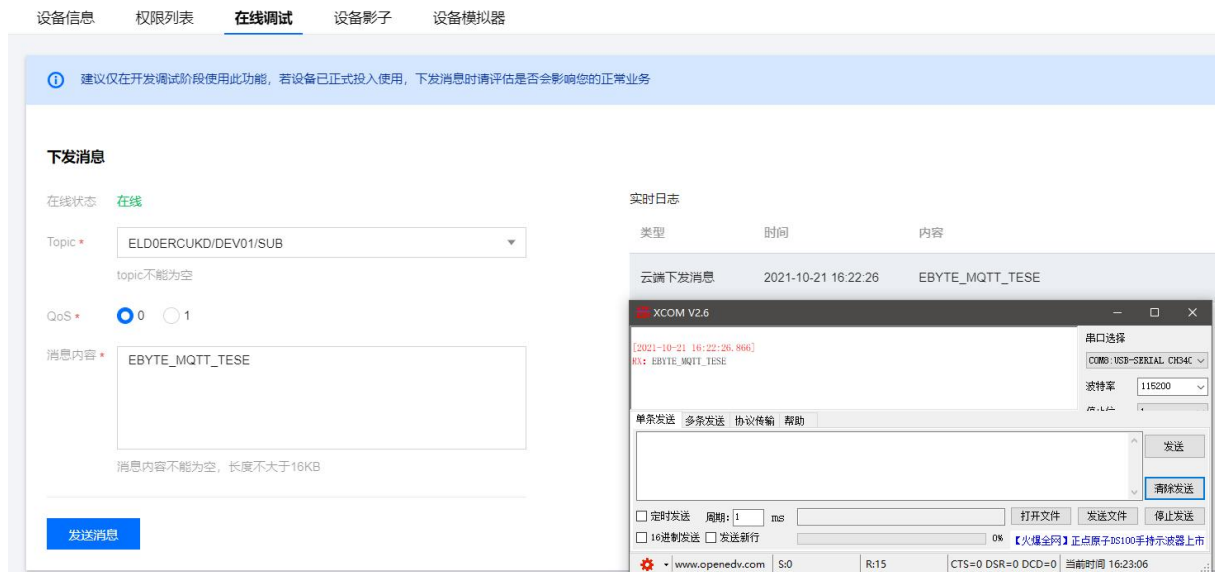

4.3. Serial port parameters

Serial port parameters include baud rate, data bit, check bit and stop bit.

Baud rate: serial communication rate, 1200, 2400, 4800, 9600, 14400, 19200, 38400, 57600, 115200, 230400bps can be configured.

Data bit: length of data bit, range 5, 6, 7, 8.

Check bit: the check bit of data communication. It supports three verification methods: None, Odd and Even. By setting the serial port parameters, keeping the serial port parameters consistent with the serial port parameters of the serial port connecting device can ensure the normal operation of the communication.

Stop bit: range 1 and 2 can be set.



4.4. Advanced parameters

4.4.1. Disconnection and reconnection function

In the client mode, after the device is disconnected from the network, it tries to actively connect to the server at the specified time. If the request times out and the set number of reconnections has not been successfully reconnected, the device will restart to prevent the network from being unable to recover after

the device is disconnected.

Disconnection and reconnection time: the time interval between each attempt of the device to reestablish the network.

Reconnect times: the number of times the device attempts to reestablish the network. The cumulative number of requests reaches the preset value. If the connection is not successful, the device will automatically restart.

The actual time to restart is the period of disconnection and reconnection times. It is recommended to use the factory default parameters if there is no special requirement.

4.4.2.Timeout restart function

The timeout restart function (default: 300 seconds) is supported. This function is mainly used to ensure the long-term stable operation of the equipment. If data transmission and reception are not performed within the set timeout restart time, the equipment will restart to avoid the impact of abnormal conditions on communication.

When the timeout restart function is turned on, the timeout restart time setting parameter range is (60-65535) seconds.

4.4.3.Short connection function

In the client mode, the network short connection is supported (the function is turned off by default). TCP short connection is mainly used to save server resource costs, and is generally used in multi-point (multi-client) to one-point (server) scenarios.

The TCP short connection function is applied in the TCP Client mode. After the short connection function is enabled, the device will only request to connect with the server when sending information. After the connection is successful, the serial port does not receive data or the network port does not receive data within the set time, and the device will automatically disconnect.

When the short connection function is turned on, the short connection time setting parameter range is (2-255) seconds.

4.4.4.Connection emptying cache function

The device is in the client mode. When the TCP connection is not established, the data received by the serial port will be placed in the cache area. The serial port receive cache is 1024 bytes, and the data received earlier will be overwritten by more than 1024 bytes. After the network connection is successful,

you can choose to clear the serial port cache or send the cache through the network through configuration.

Enable: The device does not save the data received by the serial port before the connection is established.

Disable: After the connection is established, the network will receive the data cached by the serial port.

4.4.5.Heartbeat packet function

In the client mode, users can choose to send heartbeat packets and customize the heartbeat packet time. The heartbeat packet can be selected from two modes: network heartbeat packet and serial heartbeat packet. It supports sending in hexadecimal and ASCII code. This heartbeat packet is not MQTT heartbeat. It needs to be turned off in MQTT client mode. MQTT heartbeat only needs to be configured in "MQTT mode". It is recommended not to configure the heartbeat packet cycle time less than 60s. For example, 120s is recommended in Alibaba Cloud manual.

Heartbeat packet sending mode:

- (1) The default is to turn off heartbeat packet mode.
- (2) Serial heartbeat packet ->The device sends heartbeat content to the serial bus according to the set heartbeat interval.
- (3) Network interface heartbeat packet ->The device sends heartbeat content to the network interface bus according to the set heartbeat time interval.

Custom heartbeat packet content (up to 40 bytes (ASCII) data, 20 bytes (HEX) data).

Customize the heartbeat packet sending interval. If the setting value is greater than zero, the heartbeat packet function will be turned on. When it is turned on, the range can be set: (1-65536) seconds, and when it is turned off, it is 0.

4.4.6.Registration package function

In the client mode, users can choose to send the registration package, customize the time of the registration package, and customize the content of the registration package (up to 40 bytes (ASCII) data, 20 bytes (HEX) data).

The registration package supports the following modes:

- (1) Send MAC address when the network establishes a connection with the device
- (2) Send the data of the custom registration package when the network establishes a connection with the device

- (3) After the connection between the network and the device is established, each packet of data sent by the device to the network is preceded by a MAC address
- (4) After the connection between the network and the device is established, each packet of data sent by the device to the network is preceded by the user-defined registration packet data

4.5. Modbus gateway

4.5.1. Simple protocol conversion mode

On: the Modbus RTU protocol and Modbus TCP protocol are converted to each other, and non-Modbus data (RTU/TCP) is discarded without conversion.

Off: Modbus data is verified without protocol conversion, and non-Modbus data (RTU/TCP) is discarded.

Simple protocol conversion can work in any mode (TCP client, TCP server, UDP client, UDP server, MQTT client, HTTP client). No matter what mode it works in, there can only be one Modbus master station.

Upper computer/web page configuration:

Network parameter	Serial parameter	Advanced	Modbus mode
Modbus parameters			
MODBUS Gateway	Simple protocol conversion mode		Modbus TCP to RTU: Enable
Modbus timeout	1000ms	Modbus keep time	10sec
Modbus polling interval	500ms	Modbus address filtering	0
Instruction list			
1 01,03,00,00,00,0A Add Delete			

Network parameter			
DHCP	disable	Work mode	TCP server
Local IP	192.168.4.164	Local port	8886
subnet mask	255.255.255.0	Gateway	192.168.4.1
Target IP	192.168.3.111	MAC	54-14-A7-87-19-B0
		Web port	80
		DNS server	192.168.4.1
		Target port	8888
Serial parameter			
Baud rate	115200	Data bit	8
Stop bit	1	Flow	NONE
Parity	NONE		
MODBUS parameter			
MODBUS TCP to RTU	Open	address filter	0
Modbus mode	Simple	MODBUS polling interval	500
Modbus timeout	1000		Range:0-65535ms
	Range:0-65535ms	Modbus keep time	10
			Range:0-255s
		Mosbus instructions	
		add clear spare space 49 01 03 00 00 00 0A X	

Modbus Poll and Modbus Slave software debugging:

Software connection settings:

Modbus Poll - Mbpoll1

File Edit Connection Setup Functions Display View Window Help

05 06 15 16 17 22 23 TC

Connection Setup

Connection: Modbus TCP/IP

Serial Settings: USB-SERIAL CH340 (COM4)

Mode: RTU

Response Timeout: 1000 [ms]

Delay Between Polls: 20 [ms]

Remote Modbus Server

IP Address or Node Name: 192.168.4.164

Server Port: 8886

Connect Timeout: 3000 [ms]

IPv4

Modbus Slave - Mbslave1

File Edit Connection Setup Display View Window Help

ID = 1; F = 03

Connection Setup

Connection: Serial Port

Serial Settings: USB-SERIAL CH340 (COM11)

Mode: RTU

Flow Control: DSR CTS RTS Toggle

TCP/IP Server

IP Address: 192.168.3.3

Port: 8886

Any Address

Ignore Unit ID

IPv4

IPv6

Software register reading and simulation configuration:

Poll menu, select →SetupRead/Write Definition

Read/Write Definition

Slave ID: 1 OK Cancel

Function: 03 Read Holding Registers (4x) v

Address: 0 PLC address = 40001

Quantity: 5 Poll

Scan Rate: 1000 [ms] Apply

Disable

☐ Read/Write Disabled

☐ Disable on error Read/Write Once

View

Rows

☒ 10 ☐ 20 ☐ 50 ☐ 100 ☐ Fit to Quantity

☐ Hide Alias Columns ☐ PLC Addresses (Base 1)

☐ Address in Cell ☐ Enron/Daniel Mode

Request

RTU 01 03 00 00 00 05 85 C9

ASCII 3A 30 31 30 33 30 30 30 30 30 30 35 46 37 0D 0A

Select SetupSlave Definition from the →Slave menu

Slave Definition

Slave ID: 1 OK Cancel

Function: 03 Holding Register (4x) v

Address mode

☒ Dec ☐ Hex

Address: 0 PLC address = 40001

Quantity: 5

View

Rows

☒ 10 ☐ 20 ☐ 50 ☐ 100 ☐ Fit to Quantity

☐ Hide Name Columns ☐ PLC Addresses (Base 1)


☐ Address in Cell

Error Simulation

☐ Skip response ☐ Insert CRC/LRC error (Not when using TCP/IP)

0 [ms] Response Delay ☐ Return exception 06, Busy

Communication demonstration:

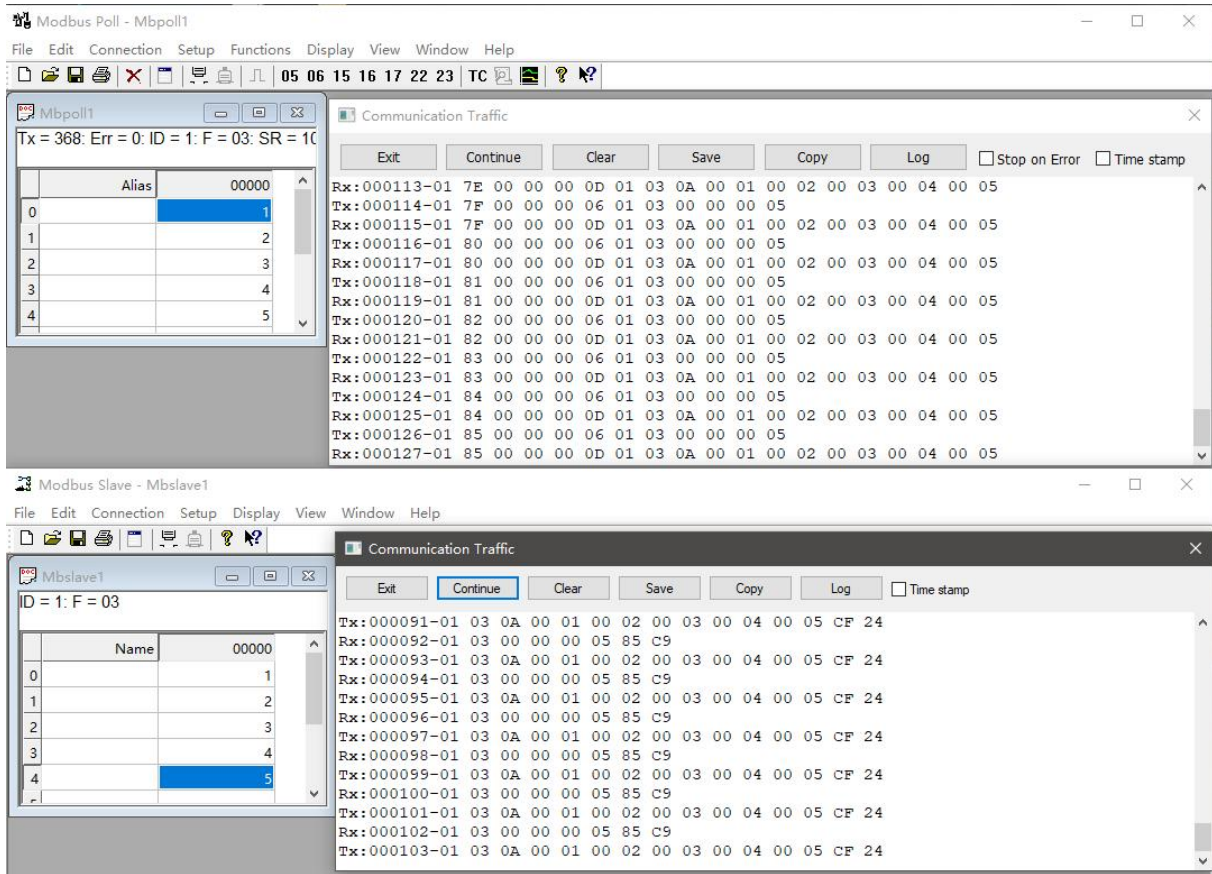

4.5.2. Multi-host mode

The multi-host mode can handle up to 6 Modbus TCP hosts. When multiple Modbus hosts access the Modbus gateway at the same time, the bus occupation scheduling will be carried out (RS-485 bus can only process one request at a time, while the multi-host mode will sort and process according to the TCP request sequence, and other links will wait), so as to solve the bus conflict problem (currently only supports 6-host connection), and only supports working in the TCP server mode, The slave can only be on the serial port, otherwise it cannot work normally.

It is recommended to configure it as "simple protocol conversion" when there is no multi-channel host.

Upper computer/web page configuration:

Network parameter		Serial parameter	Advanced	Modbus mode
Basic parameters				
DHCP	Disable	Serial Number	20241011	
Username	admin	Web server port	80	
UserPassword	●●●●●●			
Gateway	192.168.4.1	DNS	192.168.4.1	
Local IP	192.168.163	Local port	8887	
Network mode	TCP server	Mask	255.255.255.0	
Remote IP	192.168.3.111	Remote port	8888	

Network parameter	Serial parameter	Advanced	Modbus mode
Serial port parameter			
Boud rate	115200	Databits	8
Parity	NONE	Stopbits	1
Flow control	NONE		

Network parameter	Serial parameter	Advanced	Modbus mode
Modbus parameters			
MODBUS Getway	Multihost mode	Modbus TCP to RTU	Enable
Modbus timeout	1000ms	Modbus keep time	10sec
Modbus polling interval	500ms	Modbus address filtering	0
Instruction list			
Add Delete			

Device info

Device model	NA111-M	Device SN	20241011	语言	English
Version	9013-2-17	Username	admin	Password	*****

Network parameter

DHCP	disable	Work mode	TCP server	MAC	54-14-A7-87-19-B0
Local IP	192.168.4.164	Local port	8887	Web port	80
subnet mask	255.255.255.0	Getway	192.168.4.1	DNS server	192.168.4.1
Target IP	192.168.3.111			Target port	8888

Serial parameter

Baud rate	115200	Data bit	8	Parity	NONE
Stop bit	1	Flow	NONE		


MODBUS parameter

MODBUS TCP to RTU	Open	address filter	0	Mosbus instructions add clear
Modbus mode	Multi host	MODBUS polling interval	500	
			Range:0-65535ms	
Modbus timeout	1000	Modbus keep time	10	spare space 49 01 03 00 00 00 0A
	Range:0-65535ms		Range:0-255s	X

Instruction format: "XX XX XX XX XX XX";"XX" is a 2-digit hex number.
 Must add a space between each hex. up to 50 instructions can be configured

Modbus Poll and Modbus Slave software debugging:

Refer to "Simple Protocol Conversion" for software configuration and register configuration. Start multiple Modbus Poll software at the same time (for example, 3 channels can be supported up to 6 channels).

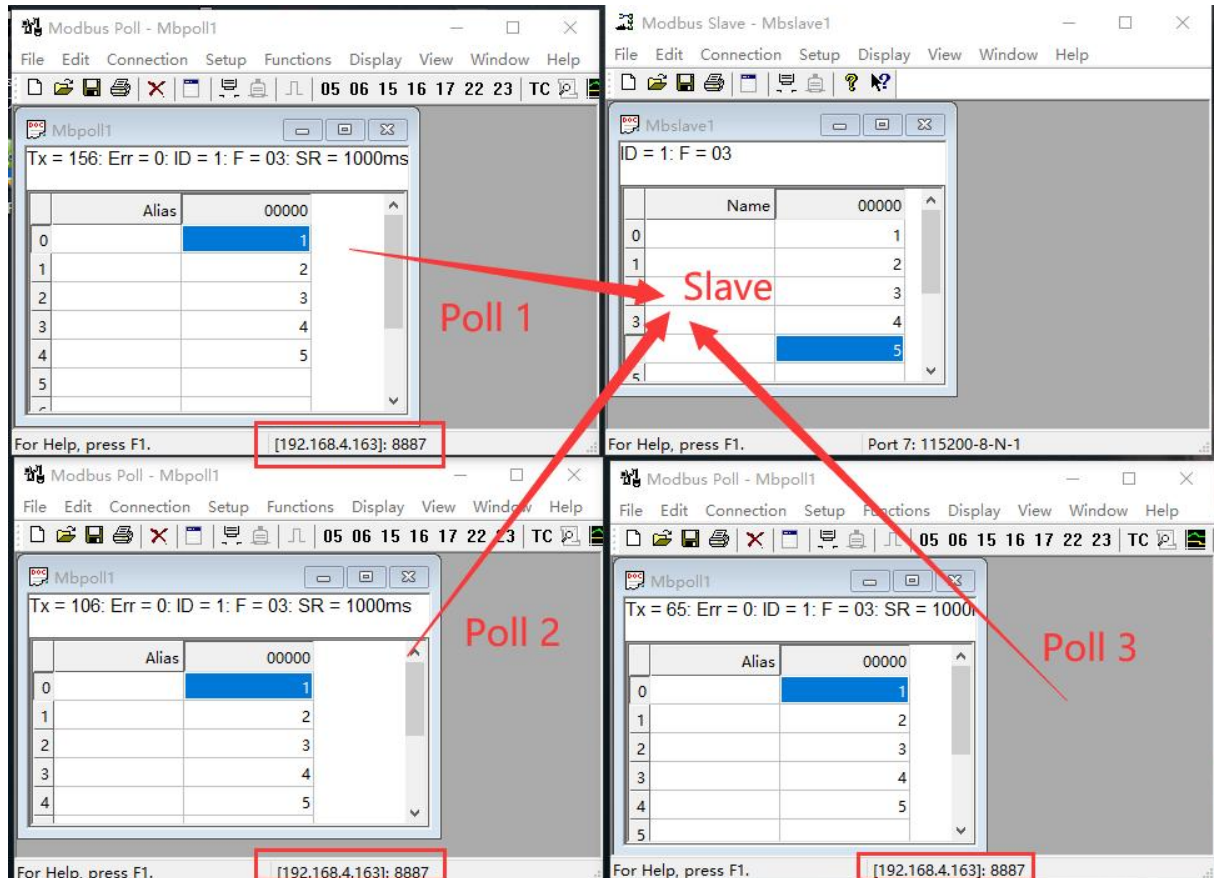

4.5.3.Storage gateway

The storage gateway not only arbitrates the bus data, but also stores the repeated read instructions. When different hosts request the same data, the gateway does not need to query the register status of RTU device many times, but directly returns the cached data in the storage area, which greatly improves the multi-host request processing capability of the gateway, and also reduces the time consumed by the entire request process. Users can customize the instruction polling interval and instruction storage time of the storage area according to their needs.

As the optimization of multi-host request performance, the storage gateway can only work in the TCP server mode, which improves the response speed on the network side.

characteristic:

- (1) The gateway has a 5K cache for storing instructions and returned results (taking reading 10 holding registers as an example, 189 instructions and returned results can be stored);
- (2) RTU response timeout automatically clears the cache to ensure the real-time and authenticity of data;
- (3) The polling interval can be customized, 0-65535ms;

- (4) The gateway will poll the RTU device according to the instruction storage time used for configuration. If the MODBUS host does not query the instruction again during the storage time, the gateway will automatically delete the storage instruction and release the cache;
- (5) The first command and control command (05, 06, 0F, 10 function code) will directly access RTU equipment;
- (6) Only 01, 02, 03 and 04 Modbus function code query results can be stored;

Storage gateway host computer and web page configuration:

Network parameter		Serial parameter		Advanced		Modbus mode	
Basic parameters							
DHCP	Disable	Serial Number	20241011				
Username	admin	Web server port	80				
UserPassword	●●●●●●						
Gateway	192.168.4.1	DNS	192.168.4.1				
Local IP	192.168.163	Local port	8887				
Network mode	TCP server	Mask	255.255.255.0				
Remote IP	192.168.3.111	Remote port	8888				

Network parameter
Serial parameter
Advanced
Modbus mode

Serial port parameter

Boud rate
115200
Databits
8

Parity
NONE
Stopbits
1

Flow control
NONE

Network parameter

Serial parameter

Advanced

Modbus mode

Modbus parameters

MODBUS Getway

Storable gateway

Modbus TCP to RTU

Enable

Modbus timeout

1000ms

Modbus keep time

10sec

Modbus polling interval

500ms

Modbus address filtering

0

Instruction list

Add

Delete

1 01,03,00,00,00,0A

Network parameter			
DHCP	disable	Work mode	TCP server
Local IP	192.168.4.164	Local port	8887
subnet mask	255.255.255.0	Getway	192.168.4.1
Target IP	192.168.3.111	MAC	54-14-A7-87-19-B0
		Web port	80
		DNS server	192.168.4.1
		Target port	8888

Serial parameter		
Baud rate	115200	Parity
Stop bit	1	NONE
Data bit	8	
Flow	NONE	

MODBUS parameter		
MODBUS TCP to RTU	Open	address filter
Modbus mode	Multi host	0 0:close,range:1-255
Modbus timeout	1000 Range:0-65535ms	MODBUS polling interval
		500 Range:0-65535ms
		Modbus keep time
		10 Range:0-255s
		Mosbus instructions
		 spare space 49 01 03 00 00 00 0A X

Instruction format: "XX XX XX XX XX XX";"XX" is a 2-digit hex number.
Must add a space between each hex, up to 50 instructions can be configured

4.5.4. Configurable gateway

The gateway automatically polls the RTU device register according to the preconfigured MODBUS instruction (only supports the configuration of MODBUS read instruction), and the instruction in the non-storage table will directly operate the RTU device. The frequently read instructions can be stored in the gateway in advance to shorten the response time (query the configured instructions). Because of the above characteristics, the serial port side of the configurable gateway can only connect to the Modbus slave station.

Instruction storage description (add, instruction error and format error cannot be added):

Instruction storage description (delete):

MODBUS parameter		
MODBUS TCP to RTU: Open	address filter: 0 0:close,range:1-255	Mosbus instructions
Modbus mode: Storable	MODBUS polling interval: 500 Range:0-65535ms	01 03 00 00 00 01 add clear
Modbus timeout: 1000 Range:0-65535ms	Modbus keep time: 10 Range:0-255s	spare space: 49 01 03 00 00 00 01 X
Instruction format: "XX XX XX XX XX XX"; "XX" is a 2-digit hex number. Must add a space between each hex, up to 50 instructions can be configured		
Advanced		

Upper computer/web page configuration:

Network parameter	Serial parameter	Advanced	Modbus mode
Modbus parameters			
MODBUS Getway: Configurable gateway	Modbus TCP to RTU: Enable		
Modbus timeout: 1000ms	Modbus keep time: 10sec		
Modbus polling interval: 500ms	Modbus address filtering: 0		
Instruction list			
01,03,00,00,00,02 Add Delete			
1 01,03,00,00,00,0A 2 01,03,00,00,00,02			

MODBUS parameter		
MODBUS TCP to RTU: Open	address filter: 0 0:close,range:1-255	Mosbus instructions
Modbus mode: Storable	MODBUS polling interval: 500 Range:0-65535ms	01 03 00 00 00 01 add clear
Modbus timeout: 1000 Range:0-65535ms	Modbus keep time: 10 Range:0-255s	spare space: 49 01 03 00 00 00 01 X
Instruction format: "XX XX XX XX XX XX"; "XX" is a 2-digit hex number. Must add a space between each hex, up to 50 instructions can be configured		
Advanced		

4.5.5. Automatic upload

In the client mode (TCP client, UDP client, MQTT client, HTTP client), the gateway will automatically poll the instructions in the storage instruction table and upload them to the server. The feedback format (Modbus RTU format or Modbus TCP format) and the instruction polling interval (0-65535ms) can be selected according to the demand.

Refer to "Configurable Gateway - Instruction Storage Description" for instruction pre-storage, and automatically upload the upper computer/web page configuration:

Network parameter	Serial parameter	Advanced	Modbus mode
Basic parameters			
DHCP: Disable	Serial Number: 20241011		
Username: admin	Web server port: 80		
UserPassword: ●●●●●●			
Gateway: 192.168.4.1	DNS: 192.168.4.1		
Local IP: 192.168.163	Local port: 0		
Network mode: TCP client	Mask: 255.255.255.0		
Remote IP: 192.168.3.111	Remote port: 8888		

Network parameter		Serial parameter		Advanced		Modbus mode	
Serial port parameter							
Boud rate	115200	Databits	8				
Parity	NONE	Stopbits	1				
Flow control	NONE						

Network parameter		Serial parameter		Advanced		Modbus mode		
Modbus parameters								
MODBUS Getway	AutoUpdate	Modbus TCP to RTU	Disable					
Modbus timeout	1000ms	Modbus keep time	10sec					
Modbus polling interval	500ms	Modbus address filtering	0					
Instruction list								
01,03,00,00,00,02							Add	Delete
1 01,03,00,00,00,0A								

Network parameter

DHCP	disable	Work mode	TCP client	MAC	54-14-A7-87-19-B0
Local IP	192.168.4.164	Local port	0	Web port	80
subnet mask	255.255.255.0	Getway	192.168.4.1	DNS server	192.168.4.1
Target IP	192.168.3.111	Target port	8888		

Serial parameter

Baud rate	115200	Data bit	8	Parity	NONE
Stop bit	1	Flow	NONE		



MODBUS parameter

MODBUS TCP to RTU	Open	address filter	0	Mosbus instructions	
Modbus mode	Storable	MODBUS polling interval	500		01 03 00 00 00 01
Modbus timeout	1000	MODBUS keep time	10		01 03 00 00 00 01
	Range:0-65535ms		Range:0-255s		


Instruction format: "XX XX XX XX XX XX"; "XX" is a 2-digit hex number.
Must add a space between each hex, up to 50 instructions can be configured

Advanced

TCP client presentation (Modbus RTU format):

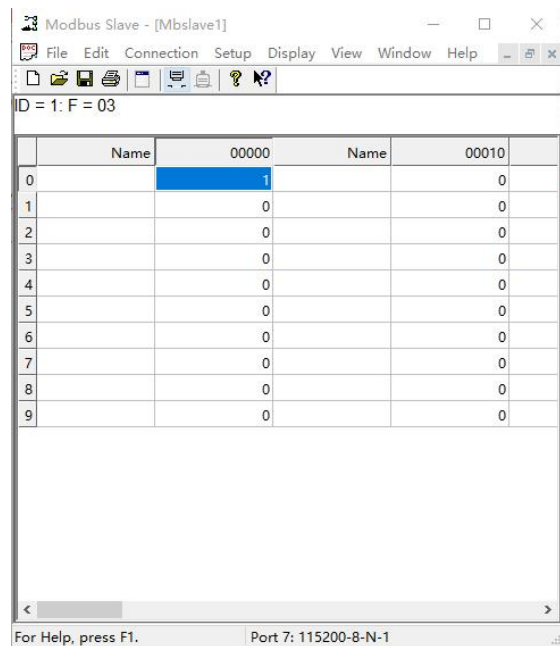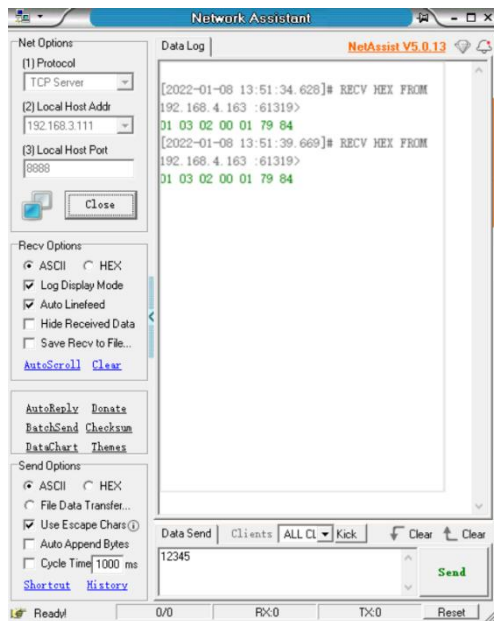

TCP client presentation (Modbus TCP format):

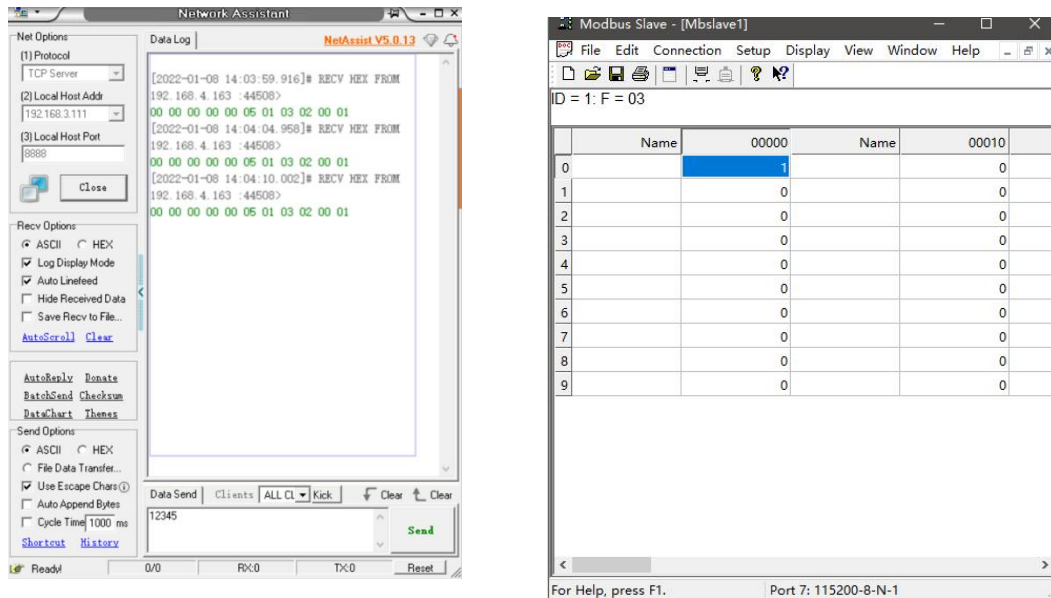

4.6. Introduction to basic functions

4.6.1. Web page configuration

The device has a built-in web server, which is convenient for users to set and query parameters through web pages.

The port of the Web server can be customized (2-65535). The default is 80.

Operation mode (Microsoft Edge version 94.0.992.50 as an example, Google Kernel Browser is recommended, IE Kernel Browser is not supported):

- Open the browser and enter the IP address of the device in the address bar. The default is 192.168.3.7 (the IP address and the computer need to be kept in the same network segment). Forget that the local IP address can be queried through the AT command and configuration software;



- Click Login, the default account is admin, and the default password is admin (entered, you can

click Login directly);

Device info			
Device model	NA111-M	Device SN	20241011
Version	9013-2-17	Username	admin
		Password	*****
语言 English			
Network parameter			
DHCP	disable	Work mode	TCP server
Local IP	192.168.3.7	Local port	8887
subnet mask	255.255.255.0	Getway	192.168.3.1
Target IP	192.168.3.3	MAC	54-14-A7-87-19-B0
		Web port	80
		DNS server	114.114.114.114
		Target port	8888
Serial parameter			
Baud rate	115200	Data bit	8
Stop bit	1	Flow	NONE
		Parity	NONE
MODBUS parameter			
MODBUS TCP to RTU	Close	address filter	0 0:close,range:1-255
Modbus mode	disable	MODBUS polling interval	500 Range:0-65535ms
Modbus timeout	1000 Range:0-65535ms	Modbus keep time	10 Range:0-255s
		Mosbus instructions	
		 spare space 49 01 03 00 00 00 0A X	
Instruction format: "XX XX XX XX XX XX";"XX" is a 2-digit hex number. Must add a space between each hex, up to 50 instructions can be configured			

- The main interface pops up on the web page, where you can query and set relevant parameters;
- Click Submit to save the configuration parameters;
- The progress bar prompts the configuration progress. Do not refresh the web page again after the configuration is completed (refresh the web page and enter the configuration mode again. You can enter the communication mode by restarting the device or submitting again).

Succesed



4.6.2.Restore factory settings

Press and hold the Restore button of the device until all the LED indicators except M1 are on, and then release the button.

4.6.3.AT instruction configuration

The query and modification of the relevant parameters of the equipment can be completed through the AT command configuration. For specific AT instructions, please refer to "NA11x&NB114&NS1&NT1-AT Instruction Set".

4.6.4.Configuration tool software settings

Open the configuration tool software, search for the device, double-click the identified device, and the parameter query configuration interface will pop up. Relevant parameters can be customized and modified as required, and then the configuration can be saved, and the equipment can be restarted to complete the parameter modification.

[Note]:

Do not use multiple upper computers in the same LAN environment. The industrial control computer with multiple network cards should be temporarily disabled without using network cards, otherwise the upper computer will be abnormal (the same device will display multiple times, and the device cannot be found)

The upper computer shields the wireless network card, so the upper computer must be connected to the network cable. The wireless network card can be configured through the web page.

4.6.5.Random native port

TCP client, UDP client, HTTP client and MQTT client can configure the local port to 0 (use random local port). The server mode cannot use random port, otherwise the client cannot establish a connection correctly.

Using random port connection can quickly re-establish the connection when the device accidentally disconnects the server, to prevent the server from refusing the connection due to four incomplete waves. It is recommended to use random port in client mode.


The device will automatically enable random ports when configuring TCP client, HTTP client and MQTT client modes.

4.6.6.Remote upgrade


In order to facilitate later maintenance and upgrade functions and replace different firmware, serial servers (NA11x series, NB114, NS1, NT1, etc.) support online upgrade. Users can upgrade or replace the current firmware through the upper computer through the upgrade firmware provided by our company.

Network upgrade firmware operation steps:


Step 1: download the upper computer and "product firmware" at the corresponding location on the official website;

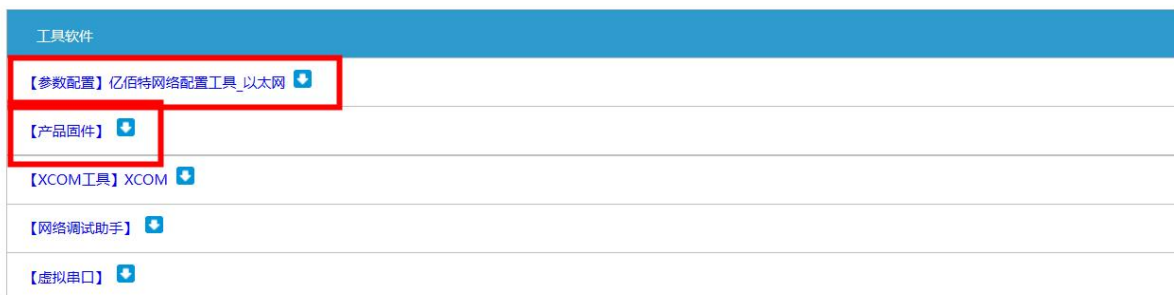


Step 2: Open the upper computer, click "Menu", and select "Device Upgrade Assistant";

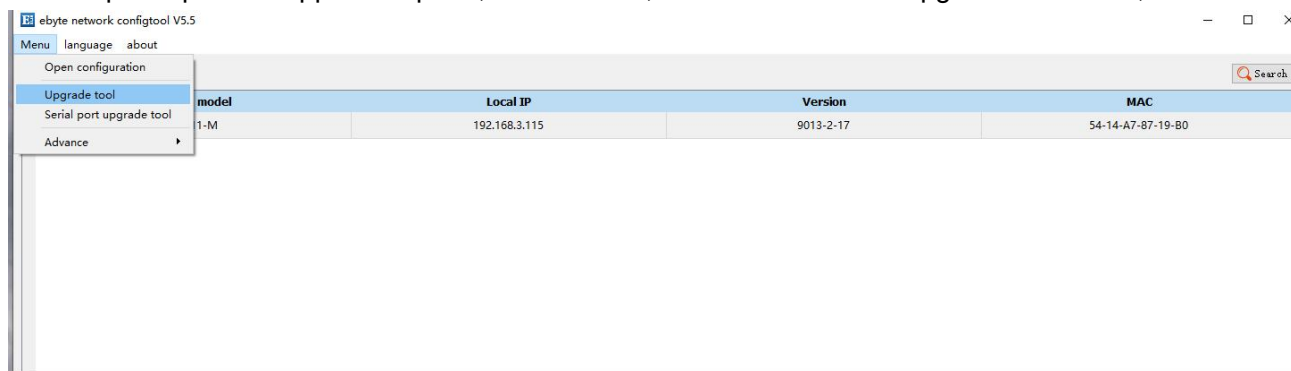


Step 3: In the pop-up "Device Network Upgrade Assistant" dialog box, click "Search Device" (the computer and device should be in the same network segment), and click "Stop Search" after finding the device;

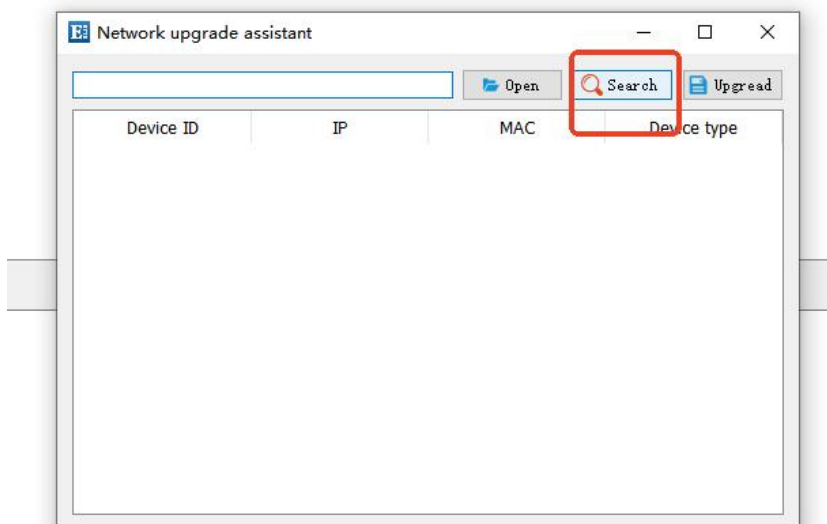


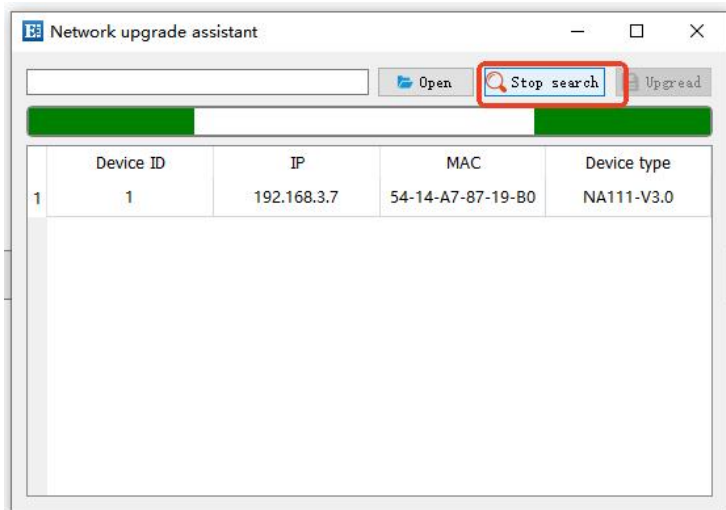

Step 4: Click "Select Firmware", select the corresponding firmware, and then click "Open";

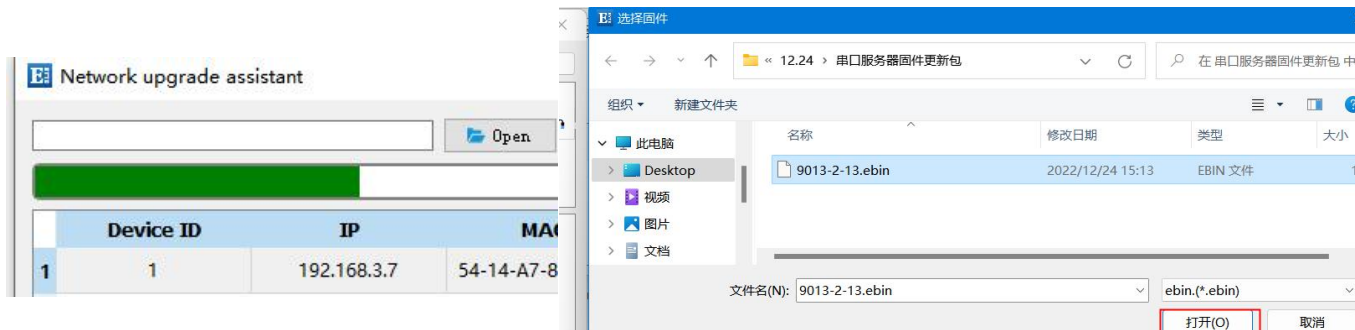


Step 5: Select the equipment to be upgraded, click "Upgrade", the progress bar will start to change, and wait for the upgrade to complete.

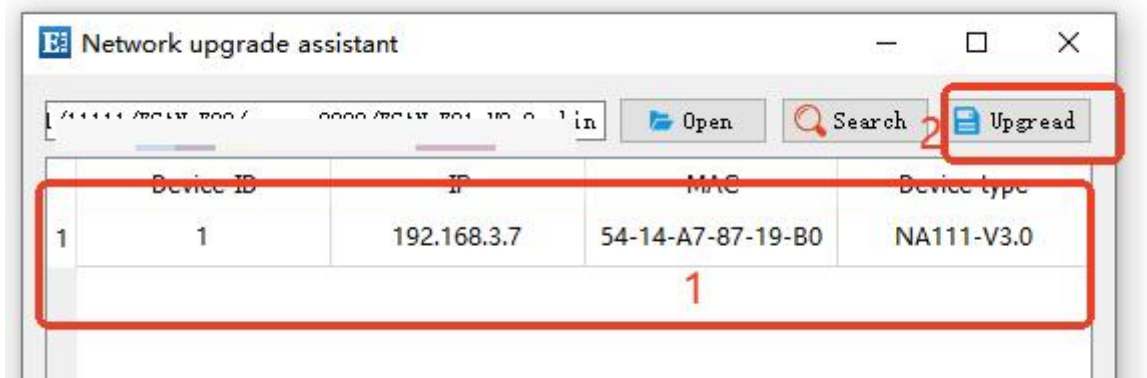



Operating steps for serial port firmware upgrade:


Step 1: download the upper computer and "product firmware" at the corresponding location on the official website;

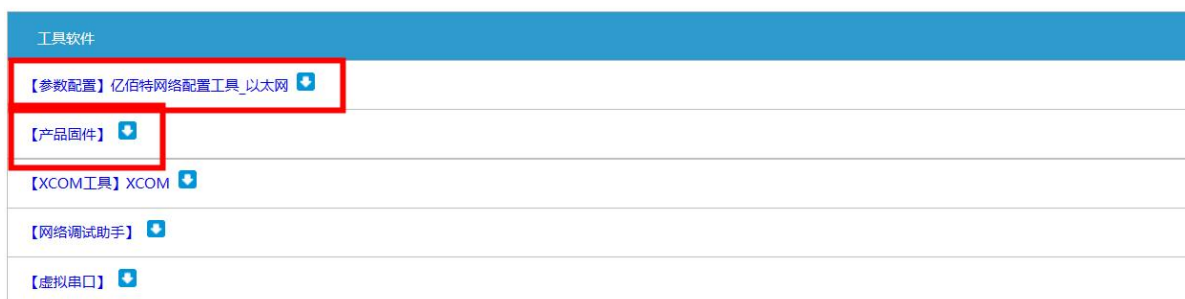


Step 2: Open the upper computer, click "Menu", and select "Serial port upgrade assistant";



Step 3: First connect the USB port of the computer, select the corresponding port number in the pop-up "Serial Port Upgrade Assistant" dialog box, and click "Open Serial Port";

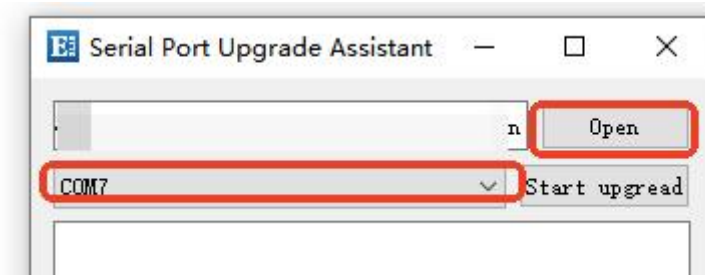


Step 4: Click "Select Firmware", select the corresponding firmware, and then click "Open";

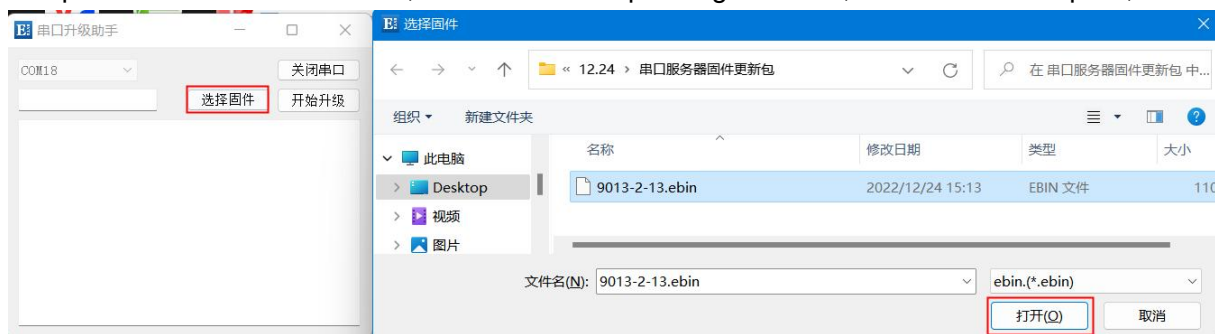

Step 5: Click "Start upgrading", the progress bar will start to change, and wait for the upgrade to complete.

[Note] Power on again to trigger the upgrade.



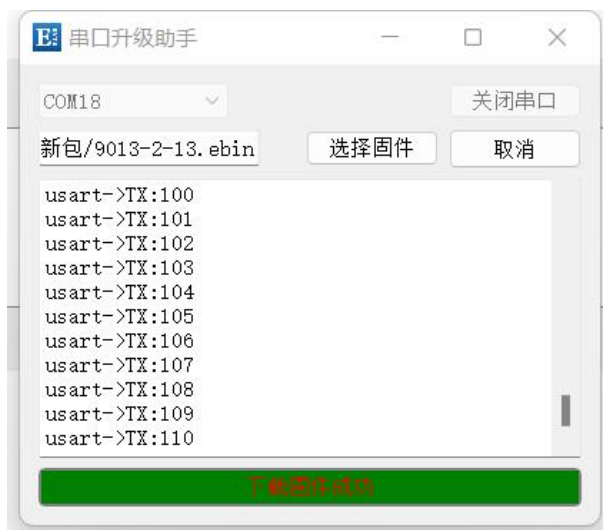

The final interpretation right belongs to Chengdu Ebyte Electronic Technology Co., Ltd.

Revision History

edition	Revision date	Revision description	Maintainer
1.0	2025-5-6	Initial version	LYL

About us



Sales hotline: 4000-330-990

technical service@ebyte.com

support:

Company Building B5, No. 199, Xiqu Avenue, West High-tech Zone,
address: Chengdu, Sichuan

Official website: www.ebyte.com

Chengdu Ebyte Electronic Technology Co., Ltd.