

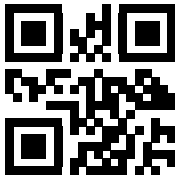
StockMaster RFID Real Table Setup

Fuzetec RFID bridge
Reader API target:
192.168.1.168:8160
Browser bridge URL:
<http://127.0.0.1:8765>

Important

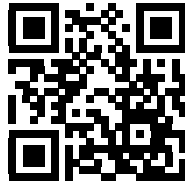
Do not open 192.168.1.168:8160 in a browser. That is the RFID reader API socket, not a website. Open the local bridge/status URLs below in the browser instead.

Real Table Test Steps

1. Power and connect the RFID table Plug in the RFID table power. Connect RJ45/network cable so the receiving PC and table are on the same network. Default reader target is 192.168.1.168:8160.		Reader target (not browser): 192.168.1.168:8160
2. Install the vendor dependency once Run this once on the receiving PC before the first real-table test.		<pre>cd "C:\Users\David's Laptop\Documents\Codex\2026-05-24\ok-are-you-connected-to-my\dohpe-stock\tools\rfid-bridge" .\install-vendor-sdk.cmd</pre>
3. Start the RFID bridge Run this in PowerShell window 1. Keep the window open while scanning tags.		<pre>cd "C:\Users\David's Laptop\Documents\Codex\2026-05-24\ok-are-you-connected-to-my\dohpe-stock\tools\rfid-bridge" .\run-real-table-tcp.cmd</pre>
4. Check bridge status in browser Open this URL. It should return JSON. If it opens, the bridge is running.		http://127.0.0.1:8765/status
5. Start StockMaster Run this in PowerShell window 2.		<pre>cd "C:\Users\David's Laptop\Documents\Codex\2026-05-24\ok-are-you-connected-to-my\dohpe-stock" npm run dev</pre>

6. Open Processing > Receiving

Open the Processing page. In Receiving, leave Bridge URL as `http://127.0.0.1:8765`, choose the batch, then click Start Scan.



```
http://localhost:3000/processing
```

Bridge URL in Receiving:
`http://127.0.0.1:8765`

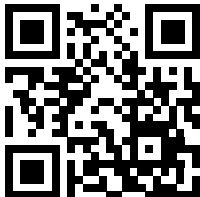
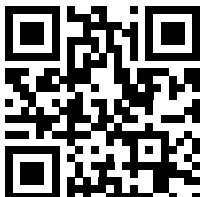
RFID Troubleshooting

Keep with receiving PC

If it does not connect

- Check the RFID table is powered on.
- Check the RJ45/network cable is connected.
- Open `http://127.0.0.1:8765/status` in the browser. If this fails, the bridge is not running.
- If the bridge runs but cannot connect to the table, the table IP may not be 192.168.1.168.
- If the table uses another IP, edit `READER_HOST` in `tools/rfid-bridge/run-real-table-tcp.cmd`.
- The Reader target 192.168.1.168:8160 is not a browser page. It is used by the bridge script.
- No EXE is needed for hardware testing. Build a polished EXE/tray app only after the hardware test works.

Quick URLs

Bridge status		<code>http://127.0.0.1:8765/status</code>
Processing page		<code>http://localhost:3000/processing</code>
Bridge URL		<code>http://127.0.0.1:8765</code>

QR codes contain plain text commands/URLs. If scanning from a phone, copy the scanned text to the receiving PC before running it.