



Bluetooth to RS485 Converter

DX-CP24 Instruction Manual

Whatsapp: +86 15798463070

Email: Manager@szdx-smart.com

Youtube url: www.youtube.com/@DX-SMART

Official website: en.szdx-smart.com

Foreword

Dear user. The following is the product information and instructions for use.

1. Packing List

• CP24 Mobile Phone(T1)

- ✧ DX-CP24 *1
- ✧ Rod Rubber Antenna *1
- ✧ Instruction Manual *1
- ✧ Product Description *1
- ✧ RJ45 plug to 4P 5.0mm terminal block *1

• CP24 Computer(T2)

- ✧ DX-CP24 *1
- ✧ Rod Rubber Antenna *1
- ✧ CP11 Adapter *1
- ✧ Instruction Manual *1
- ✧ Product Description *1
- ✧ RJ45 plug to 4P 5.0mm terminal block *1

• CP24 Device Model(T3)

- ✧ DX-CP24 *2
- ✧ Rod Rubber Antenna *2
- ✧ Instruction Manual *1
- ✧ Product Description *1
- ✧ RJ45 plug to 4P 5.0mm terminal block *2

• Accessory Dimensions

- ✧ CP24: 60*27.8*16.4mm
- ✧ CP11: 67*25*10mm
- ✧ Antenna: 108mm

2. Product Specifications


Bluetooth Name	RS232/RS485
BLE UUID	SERVICE UUID: FFE0 NOTIFY/RITE UUID: FFE1 WRITE UUID: FFE2
Serial Port Default Parameters	9600bps/8/n/1 Baud rate/Data bits/No parity/Stop bits
Power Supply Method	DC5-36V
Interface Type	RJ45 Interface

01

3. Interface and Function Specifications

CP24 Product Diagram

- ① A+ (485 interface)
- ② B- (485 interface)
- ③ VCC (Power supply interface)
- ④ GND (Ground interface)
- ⑤ WORK (BLE status indicator)
- ⑥ RX (Data reception indicator)
- ⑦ TX (Data transmission indicator)
- ⑧ KEY (Disconnect/baud rate switch)
- ⑨ ANT (External antenna interface)

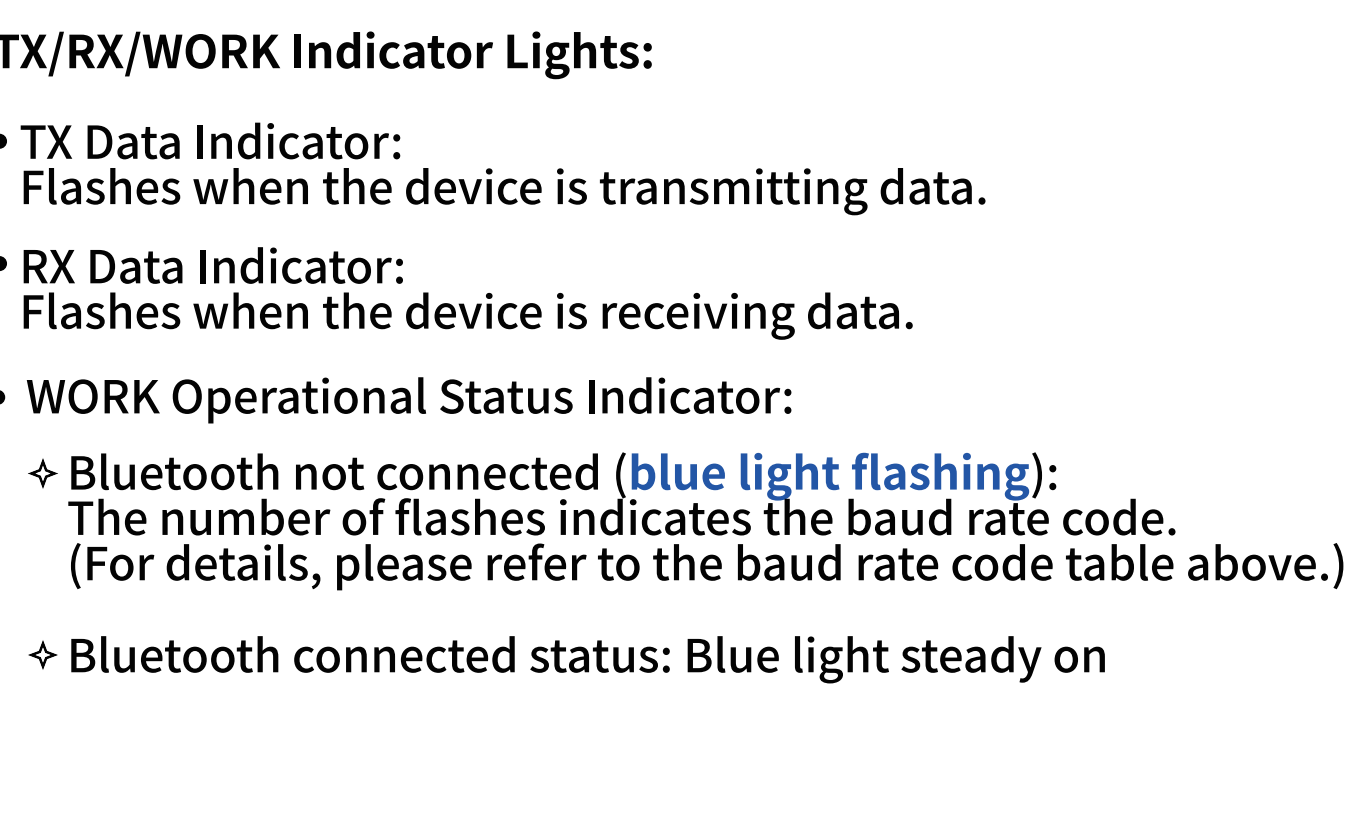

02

CP24 KEY Button

① KEY Functionality:

When Bluetooth is connected: Press once briefly to disconnect Bluetooth.

When Bluetooth is disconnected: Press twice briefly in succession to toggle the baud rate.

② Baud Rate Switching Function:

Press the KEY pin twice in quick succession to toggle the baud rate once. The number of **blue LED** flashes indicates the baud rate code.

Baud Rate Numbering Table:

Flash Count	1	2	3	4	5	6	7
Baud rate	2400	4800	9600	19200	38400	57600	115200

*Factory default baud rate: 9600, blue LED flashes three times.


TX/RX/WORK Indicator Lights:

- TX Data Indicator:
Flashes when the device is transmitting data.
- RX Data Indicator:
Flashes when the device is receiving data.
- WORK Operational Status Indicator:
 - ✧ Bluetooth not connected (**blue light flashing**):
The number of flashes indicates the baud rate code.
(For details, please refer to the baud rate code table above.)
 - ✧ Bluetooth connected status: Blue light steady on

03

Schematic Diagram of CP11 Adapter:

- ① USB port
- ② KEY: Disconnect/Switch baud rate
- ③ WORK: Operational status indicator
- ④ TX: Data transmission indicator
- ⑤ RX: Data reception indicator

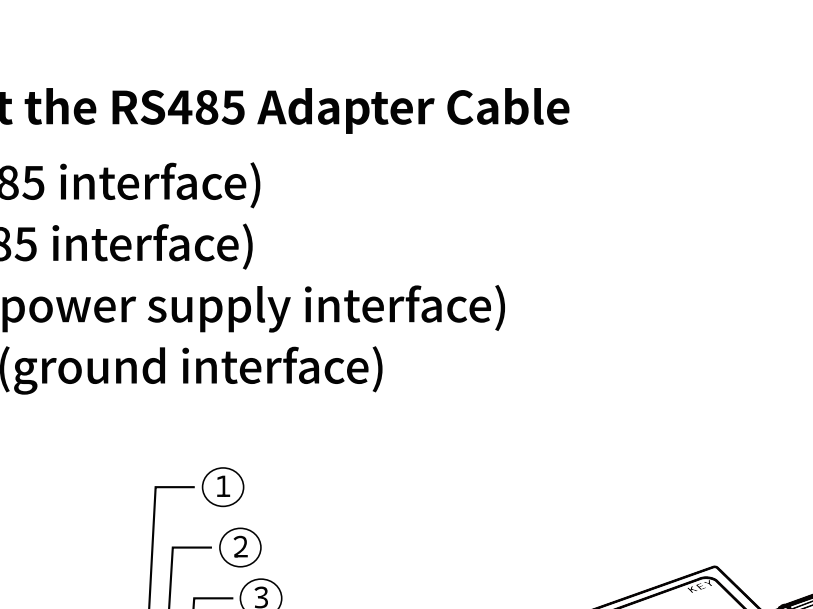

CP11 Adapter KEY Button

① KEY Functionality:

When Bluetooth is connected: Press once briefly to disconnect Bluetooth.

When Bluetooth is disconnected: Press twice briefly in succession to toggle the baud rate.

② Baud Rate Switching Function:

Press the KEY pin twice in quick succession to toggle the baud rate once. The number of **red LED** flashes indicates the baud rate code.

Baud Rate Numbering Table:

Flash Count	1	2	3	4	5	6	7
Baud rate	2400	4800	9600	19200	38400	57600	115200

04


TX/RX/WORK Indicator Lights:

- TX Data Indicator:
Green light flashes when the device transmits data.
- RX Data Indicator:
Blue light flashes when the device receives data.
- WORK Operational Status Indicator:
 - ✧ Bluetooth not connected (**red light flashing**):
The number of flashes indicates the baud rate code.
(For details, please refer to the baud rate code table above.)
 - ✧ Bluetooth connected status: Red light steady on

Note: When using the CP11 adapter, the computer must download and install the CH341SER driver software. Using the UartAssist serial communication software.

4. Installation and Connection

a. Install External Antenna

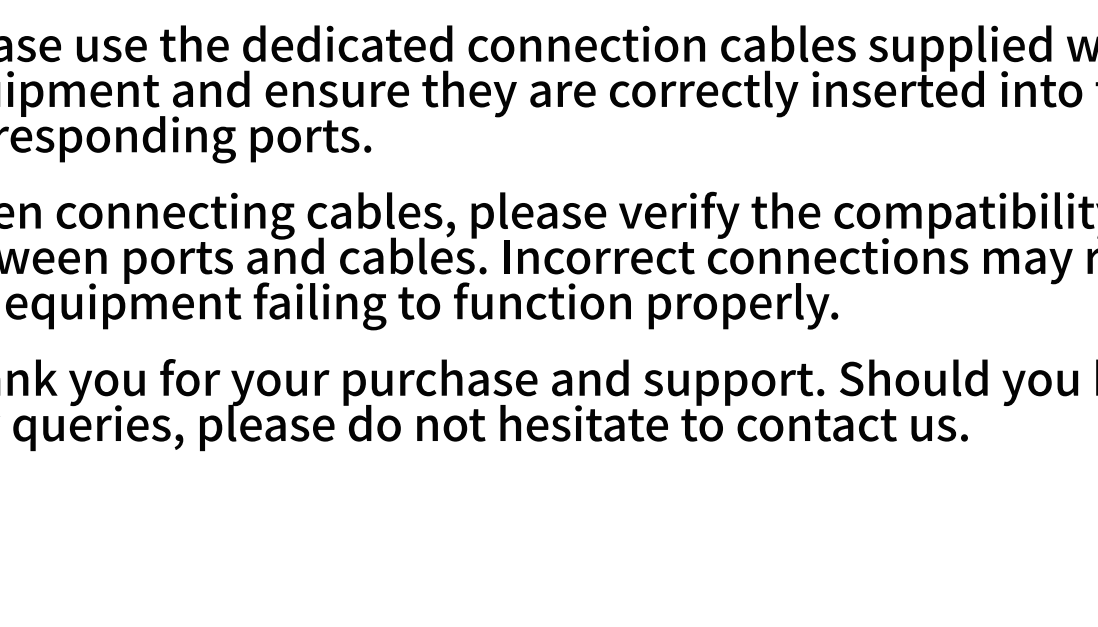

05

b. Connect the RS485 Adapter Cable

- ① A+ (485 interface)
- ② B- (485 interface)
- ③ VCC (power supply interface)
- ④ GND (ground interface)



c. Download and install the software

- Mobile version:
Search for 'DX-SMART' in your mobile app store, then download and install the software.
- Desktop/bridge version:
Download the hardware package (serial port software + driver software) from the official website or Google Drive.

Official Website: en.szdx-smart.com

The product information pack contains:

- Read Me
- CH341SER driver
- UartAssist

06

d. Three Modes of Transmission

T1: Mobile Phone & CP24 Slave(Transparent Transmission)

T2: CP11 and CP24 Slave(Computer Model)

T3: CP24 Master & CP24 Slave(Device Model)

07

5. Important Notes

- Please strictly adhere to the equipment manufacturer's recommendations during use.
- Please refer to the accompanying installation guide to ensure correct operation and prevent any impact on normal usage.
- Please use the dedicated connection cables supplied with the equipment and ensure they are correctly inserted into the corresponding ports.
- When connecting cables, please verify the compatibility between ports and cables. Incorrect connections may result in the equipment failing to function properly.
- Thank you for your purchase and support. Should you have any queries, please do not hesitate to contact us.

08