INSPECTION REPORT TOOLS

User Guide & Technical Reference

Bear Engineering | AppleScript Automation Suite
Keynote Tools v2.2 | Kurt's Version v2.2 | Re-Inspection Tools v1.2

Three scripts. One guide.

Automates the formatting of Keynote-based foundation and drainage inspection reports at Bear Engineering. It positions photos on a standard grid, creates Item Image labels, places directional arrows, sizes body text, moves overflow onto continuation slides, and condenses partially filled slides.

This guide covers all three scripts. **Keynote Tools** is the standard tool for new reports. **Kurt's Version** is a variant that preserves manually arranged photo order. **Re-Inspection Tools** handles re-inspection reports, where original photos are carried forward and new photos are added.

Contents

1. Overview 4

The Three Scripts 4

Typical Workflows 4

2. Setup 5

Script Files 5

The Arrows Folder 5

Installation for a New Inspector 5

Running a Program 6

3. Layout Reference (All Scripts) 7

Photo Size Reference 7

Grid Positions 7

Item Image Label Positions 7

Floor Elevation Map 8

Body Text Box Sizing 9

Slide Title Detection 9

Overflow Handling 9

Condense Slides 10

4. Keynote Tools (Standard) v2.2 11

Program 1: Organize All Slides (with arrows) 11

Program 2: Fix One Slide (reset photo order, with arrows) 11

Program 3: Fix One Slide (keep photo order, no arrows) 12

Program 4: Condense Slides 12

5. Kurt's Version v2.2 13

How It Differs from the Standard Version 13

Programs 13

When to Use Which Version 13

6. Re-Inspection Tools v1.2 14

Program 1: Expand Slides 14

Programs 2 and 3: Organize Report / Organize Current Slide 14

Program 4: Snap Photos to Grid 15

Program 5: Condense Slides 15

7. Known Limitations 16

8. Distributing to Other Inspectors 16

9. Version History 17

Keynote Tools 17

Kurt's Version 17

Re-Inspection Tools 17

1. Overview

The tools are AppleScripts run from Script Editor. Each script shows a menu of programs when it starts. They are built for inspectors with no programming knowledge: run the script, pick a program, confirm the file, and let it run.

The Three Scripts

Script	Use it for	Programs
Keynote Tools v2.2	New inspection reports. Photos can be dropped anywhere and the script handles all positioning.	1 Organize All Slides (with arrows) 2 Fix One Slide (reset photo order, with arrows) 3 Fix One Slide (keep photo order, no arrows) 4 Condense Slides
Kurt's Version v2.2	New reports where the inspector has already arranged photos in a deliberate order and wants that order kept.	1 Organize All Slides (with arrows) 2 Fix One Slide (keep photo order, no arrows) 3 Condense Slides
Re-Inspection Tools v1.2	Re-inspection reports. Keeps original photos in place and adds arrows and red labels only to new re-inspection photos.	1 Expand Slides 2 Organize Entire Report 3 Organize Current Slide 4 Snap Photos to Grid 5 Condense Slides

Typical Workflows

New report (Keynote Tools or Kurt's Version)

1. Drop all photos and body text onto their slides.
2. Run **Organize All Slides** once over the whole report.
3. Review. To tidy a single slide after hand edits, run **Fix One Slide (keep photo order, no arrows)**.
4. Run **Condense Slides** last to merge partially filled slides.

Re-inspection report (Re-Inspection Tools)

1. Run **Expand Slides** to split the original report's condensed slides back to one section per page and add the Re-Inspection Date and Report Date fields to page 2.
2. Add the new re-inspection photos to their slides.
3. Run **Organize Entire Report**, or **Organize Current Slide** for one slide at a time.
4. Use **Snap Photos to Grid** after any manual photo adjustments.
5. Run **Condense Slides** last. It also places the Re-Inspection badge on each slide.

2. Setup

Script Files

Keep each script on the Desktop. Open it in Script Editor and click Run each time you want to use it.

File	Menu prompt
`Keynote Tools.applescript`	“Which program would you like to run?”
`Kurts_Version.applescript`	“Select Program - Kurt’s Version”
`Re-Inspection Tools.applescript`	“Which program would you like to run?” (Expand Slides is the default choice)

The Arrows Folder

Arrow images and the Re-Inspection badge are loaded from a subfolder called **Arrows** inside the same folder as the Keynote report being processed.

```
Your Job Folder/
  Foundation & Drainage Inspection Report_123 Main St.key
  Arrows/
    red_arrow_horiz.png
    red_arrow_vert.png
    blue_arrow_horiz.png
    Re-Inspection_Label.png      (Re-Inspection Tools only)
```

> *The folder must be named exactly “Arrows” (capital A) and must sit directly inside the folder containing the Keynote file. If a report is moved, move the Arrows folder with it.*

File	Used by	Description
`red_arrow_horiz.png`	All arrow programs	Default arrow on most slides. Points horizontally toward the area of concern.
`red_arrow_vert.png`	All arrow programs	Used on concrete cracking and rebar rusting slides. Points downward.
`blue_arrow_horiz.png`	All arrow programs	Used on drainage and exterior grade/slope slides. Points horizontally, in blue.
`Re-Inspection_Label.png`	Re-Inspection Tools, Program 5	Badge placed in the upper right of every visible slide in the report range (x=680, y=7, width 80).

Installation for a New Inspector

1. Copy the script file(s) to the Desktop.
2. Open each one in Script Editor (search for Script Editor in Spotlight). You should see the full script text.
3. Copy the Arrows folder into each job folder alongside the Keynote report. Keep a master copy and duplicate it into new job folders as needed.
4. The first time a program sends keystrokes to Keynote, macOS asks for Accessibility permission. Go to System Settings → Privacy & Security → Accessibility and enable Script Editor. This only needs to be

done once.

5. To run a tool, open it in Script Editor and click the Run button. A menu appears asking which program to run.

> *The scripts do not need to be compiled or exported as an app. Running them directly from Script Editor is the intended method.*

Running a Program

Open file detection

If a Keynote file is already open, the script asks whether to use it. Click “Use This File” to proceed, or “Choose Different File” to browse for another one.

Slide range detection

Whole-report programs find the first and last content slides by looking for the 200×267 property overview photo. Single-slide programs work on whichever slide is currently visible in Keynote. Hidden slides are ignored for detection. Programs run immediately with the detected values; there is no confirmation dialog.

Script	Whole report (auto-detected range)	Current slide only
Keynote Tools	Program 1, Program 4	Program 2, Program 3
Kurt’s Version	Program 1, Program 3	Program 2
Re-Inspection Tools	Program 1, Program 2, Program 5	Program 3, Program 4

> *Label creation, continuation slides, and Condense all copy and paste with keyboard shortcuts (Cmd+A, Cmd+C, Cmd+V). Keep Keynote as the frontmost app until the program finishes. If Keynote asks about unsaved changes mid-run, click “Don’t Save” and let the script continue.*

3. Layout Reference (All Scripts)

All three scripts share the same grid, label positions, photo size rules, and body text logic. Coordinates are Keynote points measured from the top-left of the slide.

Photo Size Reference

Photo types are identified by their size in Keynote, so these sizes must match for the layout logic to work.

Size	Type	How it's used
200 × 267	Property overview photo	Marks the first and last content slides for slide range detection.
333 × 250	Landscape site photo	Switches the whole slide to the two-column landscape grid.
434 × 267	Wide site photo	Placed after standard photos. Spans two columns, never starting in column 3. Body text goes full width below it.
668 × 411	**Floor elevation map**	**New in v2.2 / v1.2.** Always placed last. Spans the full grid width and two rows, starting at slot 1 or slot 4. Has its own label position. Body text goes full width below it. See Floor Elevation Map below.
≥200 both sides	Standard site photo	Placed in the portrait grid.

Grid Positions

Photo top-left corners snap to these positions. The landscape grid is used when any 333×250 photo is on the slide.

Portrait	Col 1	Col 2	Col 3
Row 1	1: (50, 57)	2: (284, 57)	3: (518, 57)
Row 2	4: (50, 357)	5: (284, 357)	6: (518, 357)
Row 3	7: (50, 657)	8: (284, 657)	9: (518, 657)

Landscape	Col 1	Col 2
Row 1	1: (41, 73)	2: (394, 73)
Row 2	3: (41, 373)	4: (394, 373)
Row 3	5: (41, 673)	6: (394, 673)

Item Image Label Positions


Labels sit at fixed positions below each slot, regardless of exactly where the photo is. The floor elevation map is the one exception.

Slot	Label position (x, y)
Portrait 1, 2, 3	(50, 330), (284, 330), (518, 330)
Portrait 4, 5, 6	(50, 630), (284, 630), (518, 630)
Portrait 7, 8, 9	(50, 930), (284, 930), (518, 930)
Landscape 1, 2 / 3, 4 / 5, 6	(50, 330), (400, 330) / (50, 630), (400, 630) / (50, 930), (400, 930)
Floor elevation map	**x = 50, y = map top + 417**. That is (50, 474) at slot 1 and (50, 774) at slot 4.


Labels are numbered in placement order: standard photos, then wide photos, then the floor elevation map. On continuation slides, numbering continues from the previous slide.

Floor Elevation Map


The floor elevation map on the “Observed Condition - Floor elevation results & signs of foundation movement” slides is now sized **668×411** (previously 434×267). It is too large for the standard grid, so all programs handle it as a special case. It is detected by size alone, so it works on the first floor elevation page as well as the cont’d pages.

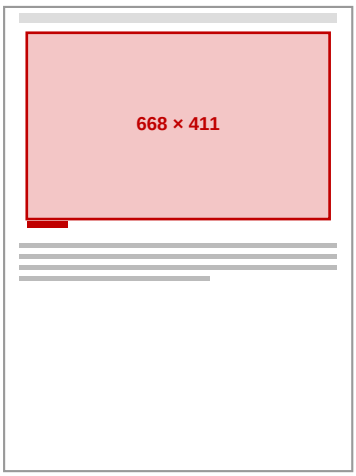

Map only
Map at slot 1, label at y=474, body text at y=521

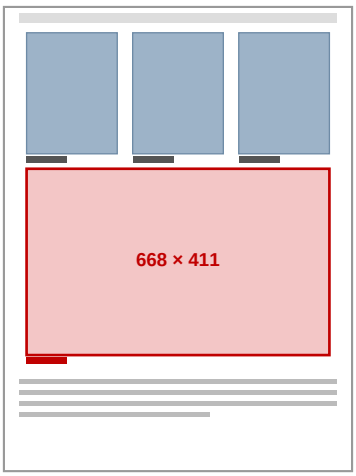

1 to 3 photos first
Map at slot 4, label at y=774, body text at y=821

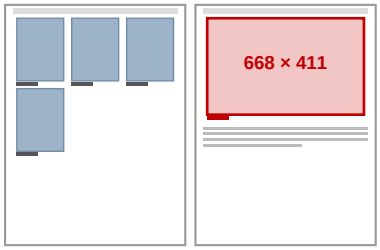

4 or more photos first
Map moves to the cont’d slide at slot 1

Placement rules

- The map is always placed after every other photo on the slide.
- It can only start at the first slot of a row: **slot 1** (covering rows 1 and 2) or **slot 4** (covering rows 2 and 3). On a landscape grid the equivalents are slots 1 and 3.
- If nothing comes before it, it goes to slot 1. If the photos before it fit in row 1 (up to three standard photos, or one wide photo), it goes to slot 4.
- If the photos before it reach row 2, the map moves to the continuation slide, where it goes to slot 1.
- Its label goes at x=50, y=map top + 417 and is numbered after the other photos.
- Body text goes full width below the label, at y = map top + 464 (521 with the map at slot 1, 821 at slot 4). With the map at slot 4 the text usually does not fit, so it moves to a text-only cont’d slide.
- Programs that place arrows put an arrow on the map, the same as any other photo.

How each program treats the map

Program	Behavior
Keynote Tools 1 and 2	Placed last, at slot 1 or slot 4 per the rules above.
Kurt's Version 1	Placed last, at whichever of slot 1 or slot 4 is closer to where it was put, provided all six slots it covers are still free. Otherwise it moves to the cont'd slide.
Keynote Tools 3, Kurt's Version 2, Re-Inspection 4 (keep photo order)	Snaps to the nearer of slot 1 or slot 4 and is numbered last.
Re-Inspection 2 and 3	An original map already at slot 1 or 4 stays put and its six slots are treated as occupied. A newly added map is placed only where all six slots it needs are free.

Body Text Box Sizing

The body text box is the text box with more than 100 characters. Its position and width are set from the photos on the slide, checked in this order: floor elevation map, then wide photo, then photo count. If the text would extend below y=1020, it moves to a text-only continuation slide.

Situation	Width (normal)	Width (rebar)	Position
Floor elevation map present	700	535	**x=34, y = map top + 464**
Wide photo present (any count)	700	700	x=34, y = next row + 20
0, 3, 6, or 9 photos	700	535	x=34, y = next row start
1, 4, or 7 (short text)	465	465	x=269, y = bottom row start
1, 4, or 7 (long text, over 2000 chars)	700	535	x=34, y = next row start
2, 5, or 8 (short text)	232	232	x=502, y = bottom row start
2, 5, or 8 (long text, over 650 chars)	700	535	x=34, y = next row start

Slide Title Detection

The title is the text box whose top edge is less than 50 points from the top of the slide. Matching uses "contains", so surrounding text does not matter as long as the key phrase is present.

Title contains…	Effect
"Observed Condition - Drainage Improvements - Exterior grade/slope"	Blue horizontal arrow instead of red.
"Observed Condition - Concrete cracking/spalling from steel rebar rusting"	Red vertical arrow, and body text narrowed to 535. Also skipped by Re-Inspection Expand Slides.
"Foundation plan showing observed conditions"	Slide is skipped by every organize program and by Expand Slides.

Overflow Handling

When a slide has more photos than grid slots, or the body text will not fit under the photos, continuation slides are created automatically:

- The slide is copied onto a new slide inserted right after it.
- Photos already placed on the original are removed from the copy, along with its labels and arrows.
- Overflow photos are placed on the copy starting at slot 1, with labels continuing the numbering and arrows where the program places arrows.
- This repeats until every photo is placed.
- The body text appears only on the last slide of the group; on earlier slides it is moved off the page.
- Continuation titles get “ (cont’d)” added automatically.

Condense Slides

Condense works the same way in all three scripts. Starting from the second content slide, it measures each slide’s content and the bottom edge of the previous slide’s content. If the content fits, it is shifted down to sit below the previous section, pasted onto the previous slide, and the emptied slide is deleted. Page numbers (x > 700, y > 950) are left out of the move, and any duplicate page numbers from the paste are deleted.

Section spacing (new in v2.2 / v1.2). Each section now starts at the previous section’s bottom edge plus `section_offset`, which is set to 0. Previously sections overlapped by 10 points to cancel out text box padding, so this adds 10 points of visible space between sections, roughly doubling the gap. For more space, raise `section_offset` in the Condense section of the script.

4. Keynote Tools (Standard) v2.2

The standard tool for new reports. Programs 1 and 2 reassign photos to grid slots in order and place arrows. Program 3 keeps your photo order and places no arrows. Program 4 condenses.

Program 1: Organize All Slides (with arrows)

Run this on a fresh report. It processes every slide in the detected range, skipping Foundation plan slides.

Pass 1: Photo layout

Photos are collected and placed into the grid in order: standard photos first, then wide photos, then the floor elevation map. Photos that do not fit are set aside for a continuation slide.

Photos	Layout
1 to 3	Top row.
4 to 6	Top two rows.
7 to 9	All three rows.
Landscape (333×250)	Two-column landscape grid for the whole slide.
Wide (434×267)	Placed after standard photos; never starts in column 3.
Floor elevation map (668×411)	Placed last, at slot 1 or slot 4.
More than 9 (portrait) or 6 (landscape)	Overflow goes to a continuation slide.

Pass 2: Text box cleanup

Stray text boxes below y=880 are deleted (page numbers and Item Image labels are kept). Item Image labels with no photo directly above them are deleted.

Pass 3: Item Image labels

A label is created for every placed photo that does not already have one, numbered from Item Image 1 in placement order. New labels are copies of an existing label, so the slide needs at least one Item Image label to copy from.

Pass 4: Arrows

An arrow is placed on every photo on the slide. Arrow type comes from the slide title (see Slide Title Detection).

Pass 5: Overflow and body text

Continuation slides are created as needed, then the body text is sized and placed on the last slide of the group.

Program 2: Fix One Slide (reset photo order, with arrows)

Runs the same passes as Program 1 on the current slide only, including overflow handling. Photos are reassigned to grid slots in order.

> *Program 2 adds arrows to every photo. If the slide already has arrows, delete them first to avoid duplicates.*

Program 3: Fix One Slide (keep photo order, no arrows)

Tidies the current slide without reordering or adding arrows. Each photo snaps to its nearest grid position (the floor elevation map snaps to the nearer of slot 1 or 4). Stray text boxes are cleaned up, labels are added for any photo missing one (the map is numbered last), and the body text is repositioned. If the body text no longer fits, a text-only cont'd slide is created.

> *Use Program 3 after hand-adjusting photo positions on a slide that already has arrows.*

Program 4: Condense Slides

Merges partially filled slides onto the previous slide. See Condense Slides in Section 3.

5. Kurt's Version v2.2

A separate script for inspectors who arrange photos by hand before running the cleanup. It has three programs instead of four, and the menu prompt reads "Select Program - Kurt's Version" so it is easy to tell apart. It uses the same Arrows folder.

How It Differs from the Standard Version

In the standard version, Program 1 assigns photos to slots in Keynote's internal object order. In Kurt's Version, Program 1 reads where each photo currently sits, sorts photos top to bottom and then left to right (photos within 80 points vertically count as the same row), and snaps each one to its nearest free slot. A photo Kurt placed in the upper left stays in the upper left.

- Wide photos are still placed after standard photos, at their nearest valid slot pair.
- The floor elevation map is placed last, at whichever of slot 1 or slot 4 is closer to where it was put, as long as all six slots it covers are free. Otherwise it moves to the cont'd slide.
- If two photos are closest to the same slot, the one that sorts first (higher on the slide) gets it and the other takes its next-nearest free slot.

Programs

Program	Description
1 Organize All Slides (with arrows)	Full pass over every slide. Keeps manual photo order, places arrows, handles overflow, and sizes body text.
2 Fix One Slide (keep photo order, no arrows)	Same as Program 3 in the standard version.
3 Condense Slides	Same as Program 4 in the standard version.

Program 2 from the standard version (reset photo order) is not included, since resetting order goes against this workflow.

When to Use Which Version

- Use the **standard Keynote Tools** when photos can be dropped anywhere and the script should handle all positioning.
- Use **Kurt's Version** when photos are already in a deliberate order and the script should tidy the grid and add arrows without changing that order.

6. Re-Inspection Tools v1.2

Re-inspection reports use the same Keynote template as standard reports, but the workflow is different. Condensed slides from the original report are split back apart, original photos are carried forward, and new photos are added and marked. After editing, the report is condensed again.

Program 1: Expand Slides

Run this first, before adding re-inspection photos. For each slide in the detected range, it looks for more than one section, meaning title-style text boxes (5 to 200 characters, not an Item Image label or page number) more than 100 points apart vertically. When it finds a second section, it splits the slide:

- All content is copied onto a new slide inserted right after it.
- The second section is removed from the original slide.
- The first section is removed from the new slide, and the second section is shifted up to y=26.
- The new slide is checked again, so slides with three or more sections are fully split.

Slides titled “Foundation plan showing observed conditions” or “Observed Condition - Concrete cracking/spalling from steel rebar rusting” are never split.

When the split is finished, two red 12 pt Helvetica text boxes are added to page 2: “Re-Inspection Date:” and “Report Date:” at (195, 137), with “tbd” placeholders beside them at (314, 137). Fill these in by hand.

Programs 2 and 3: Organize Report / Organize Current Slide

Program 2 runs the re-inspection organizer on every slide in the detected range. Program 3 runs it on the current slide only. Foundation plan slides are skipped. Each slide goes through these passes:

Pass 1: Slide type detection

Condition	Meaning	Response
Title text is red	Fresh slide from the master template, not yet edited.	All photos treated as new. Existing labels cleared except the one under slot 1.
Short non-label text box at y > 880	Fresh slide with the template’s bottom label still on it.	Same as above, and the bottom label is deleted.
Neither	Slide carried forward from the original report.	Photos already at grid positions are originals; anything else is new.

Pass 2: Photo classification and layout

A photo within 10 points of a grid position is an **original**. Originals snap to their nearest slot (the floor elevation map only to slot 1 or 4) and their slots are marked occupied: one for a standard photo, two for a wide photo, six for the map. **New** photos then fill the free slots in order: standard, wide, then the map. Anything that does not fit goes to a continuation slide.

Pass 3: Item Image labels

Labels with no photo above them are deleted. New photos get labels numbered after the highest existing label on the slide, in **red** so re-inspection additions stand out. On a fresh slide the kept label becomes Item Image 1 and moves under the first photo, and the rest continue from 2. Continuation slides carry the numbering on.

Pass 4: Arrows

Arrows are placed on new photos only. Originals already at grid positions do not get arrows.

Pass 5: Overflow and body text

Same as the other scripts. See Overflow Handling and Body Text Box Sizing in Section 3.

Program 4: Snap Photos to Grid

Snaps every photo on the current slide to its nearest grid position (the map to the nearer of slot 1 or 4), with no reordering and no arrows. It also cleans up stray text boxes, adds labels for any photo missing one (the map numbered last), and repositions the body text. Unlike the Keynote Tools equivalent, it does not create a text-only continuation slide.

Program 5: Condense Slides

Merges partially filled slides (see Condense Slides in Section 3). It then places the Re-Inspection badge (`Re-Inspection_Label.png`) at x=680, y=7, width 80 on every visible slide from slide 1 through the first visible slide after the last content slide.

> *Run Program 5 once per report. Each run adds another badge to every slide, so if you need to run it again, delete the existing badges first.*

7. Known Limitations

- Programs that create labels, continuation slides, or condense use keyboard shortcuts. Switching away from Keynote mid-run will make them fail or paste into the wrong place.
- Photo sizes must match the Photo Size Reference. The floor elevation map is recognized from 666 to 670 wide and 409 to 413 tall; anything outside that is treated as a standard photo.
- A slide needs at least one existing Item Image label for new labels to be created, because labels are made by copying one.
- Arrow images are placed but not scaled. If the arrow PNGs are resized, placement may shift.
- The rebar rusting title must contain the exact phrase in Slide Title Detection for the narrower text and vertical arrow to apply.
- Hidden slides are ignored when detecting the slide range, but are not skipped once processing starts.
- Keynote Tools Programs 1 and 2 and Kurt's Version Program 1 add arrows to every photo on each run. Delete existing arrows before re-running.
- In Kurt's Version, if two photos are closest to the same slot, the one higher on the slide gets it.
- In Re-Inspection Tools, a photo near a grid position but more than 10 points away is treated as new and gets an arrow.
- Re-Inspection Program 5 adds a new badge to every slide each time it runs.
- With the floor elevation map at slot 4, the body text almost always moves to a text-only cont'd slide.

8. Distributing to Other Inspectors

Share the scripts as plain .applescript files run from Script Editor. Exporting as a compiled app or Automator application causes macOS permission problems on newer systems and is not recommended.

1. Send the script files they need: Keynote Tools.applescript, plus Kurts_Version.applescript and/or Re-Inspection Tools.applescript if applicable.
2. Send the Arrows folder with all four PNG files.
3. Have them save the scripts to the Desktop, open them in Script Editor, and click Run each time.
4. Have them put a copy of the Arrows folder in each job folder alongside the Keynote report.

9. Version History

Keynote Tools

Version	Changes
v2.2	Floor elevation map support (668×411): placed last at slot 1 or slot 4 across two rows, labeled at x=50, y=map top + 417 in the normal numbering sequence, body text placed full width below it. Programs 1, 2, and 3. Condense Slides adds 10 points of space between sections (`section_offset`).
v2.0	Programs 1 and 2: full overflow handling with continuation slides, continued Item Image numbering, and arrows on new photos. Body text moves to the last slide in the group, with a text-only continuation slide if it would overflow. Item Image labels created for all photos. Wide photos always placed last with correct column-3 handling. Foundation plan slides skipped. Program 3: labels created for any photo missing one; text-only continuation slide when body text overflows. All programs: photo size filter raised to ≥200, tighter bounds on stray text box cleanup.
v1.5	Fixed wide photo and text box placement. Wide photos now correctly use two grid slots.
v1.4	Initial release to the BEAR team. Program 2 updated to place arrows. Page and slide dialogs removed. Off-canvas image exclusion fixed. Page range auto-detection added to Program 4.
v1.3	Rebar rusting slide detection. Condense Slides reworked to run top to bottom. Start and end page auto-detection. Hidden slides excluded from detection.
v1.2	Open file detection in all programs. Fixed dialog focus; Keynote brought to the front after dialogs.
v1.1	Added Program 4 (Condense Slides).
v1.0	Initial release with Programs 1, 2, and 3: portrait and landscape grid layout, text box cleanup, and arrow placement.

Kurt’s Version

Version	Changes
v2.2	Same floor elevation map and Condense spacing changes as Keynote Tools v2.2. Program 1 places the map at the nearer of slot 1 or slot 4 when all six slots are free. Fixed continuation slide numbering: it now continues from the number of photos actually placed, instead of assuming every slot on the previous slide was filled.
Initial	Companion to Keynote Tools v2.0. Program 1 sorts photos by on-slide position and snaps each to its nearest free slot, keeping manual arrangement. Reset-order program removed. Programs renumbered: 1 Organize All Slides, 2 Fix One Slide (keep order, no arrows), 3 Condense Slides.

Re-Inspection Tools

Version	Changes
v1.2	Floor elevation map support in Programs 2, 3, and 4, including original maps occupying their full six slots and fresh slides whose first photo is the map. Fixed continuation slide numbering on fresh template slides, which previously repeated the last number from the prior slide. Condense Slides adds 10 points of space between sections (`section_offset`).
v1.0	Initial release. Five programs: Expand Slides, Organize Entire Report, Organize Current Slide, Snap Photos to Grid, and Condense Slides. Original vs. new photo classification with arrows on new photos only. Re-Inspection badge on all visible slides in the report range. Fresh template detection by red title or bottom label. Overflow handling, body text sizing, wide photo and landscape grid support.