

MS101 Makerspace, 2025-26/I Autumn

Installation of Arduino IDE and ESP32 Libraries (for Windows)

(ver Aug 25, 2025)


Step 1: Download & Install Arduino IDE

Download & Install Arduino IDE

Go to <https://www.arduino.cc/en/software>

Download the latest version for your OS and install it.

Note: As of date the latest version of Arduino IDE is 2.3.6

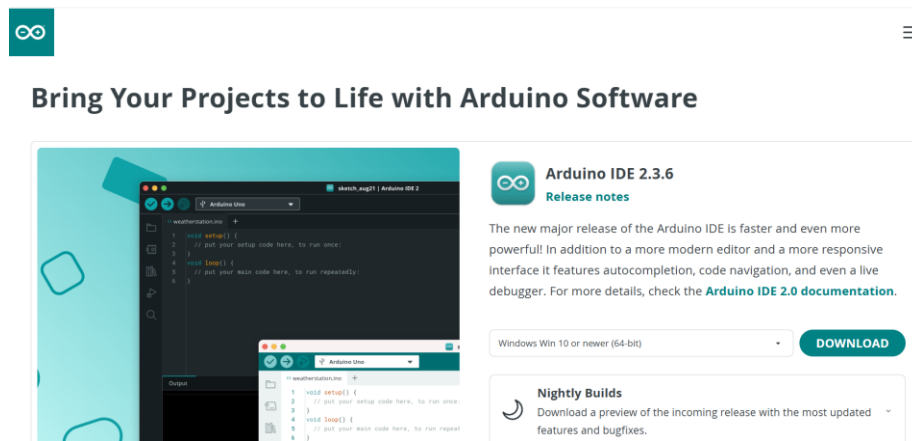

Step 2: Download and Install CP210x

Download the following CP210x USB to UART Bridge VCP Driver for windows.

https://www.silabs.com/documents/public/software/CP210x_Windows_Drivers.zip


Extract the compressed file and install the x64 version on your laptop.

Step 3: Add ESP8266/ESP32 Board URLs

Open Arduino IDE → File → Preferences

In the 'Additional Boards Manager URLs' field, paste:


https://arduino.esp8266.com/stable/package_esp8266com_index.json

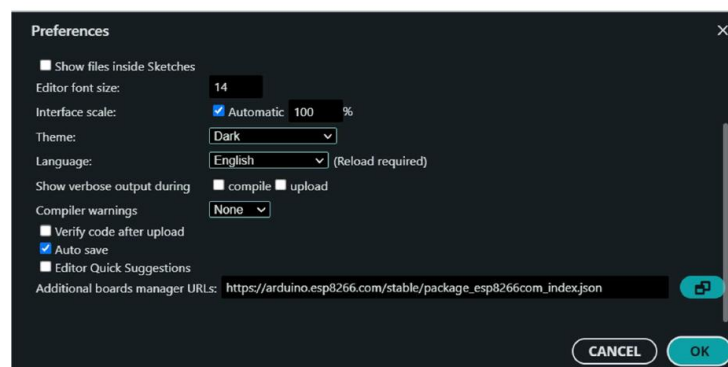

Step 4: Install ESP32 Board

Go to Tools → Board → Boards Manager

Search for 'ESP32 by Espressif Systems' → Install.

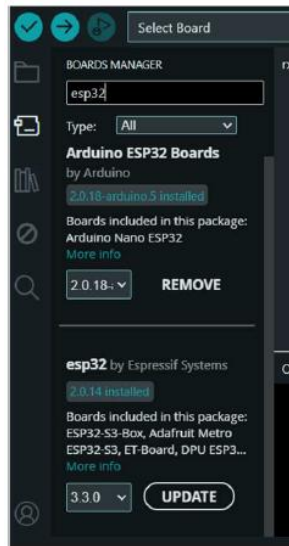


Step 5: Selecting ESP32 Board and Port

Connect your ESP32 board to the computer using the USB cable.

Go to Tools → Board → ESP32 Arduino and select a generic board like

"ESP32-WROOM-DA Module" OR "DOIT ESP32 Devkit V1 Module".

Go to Tools → Port and select the available COM port.

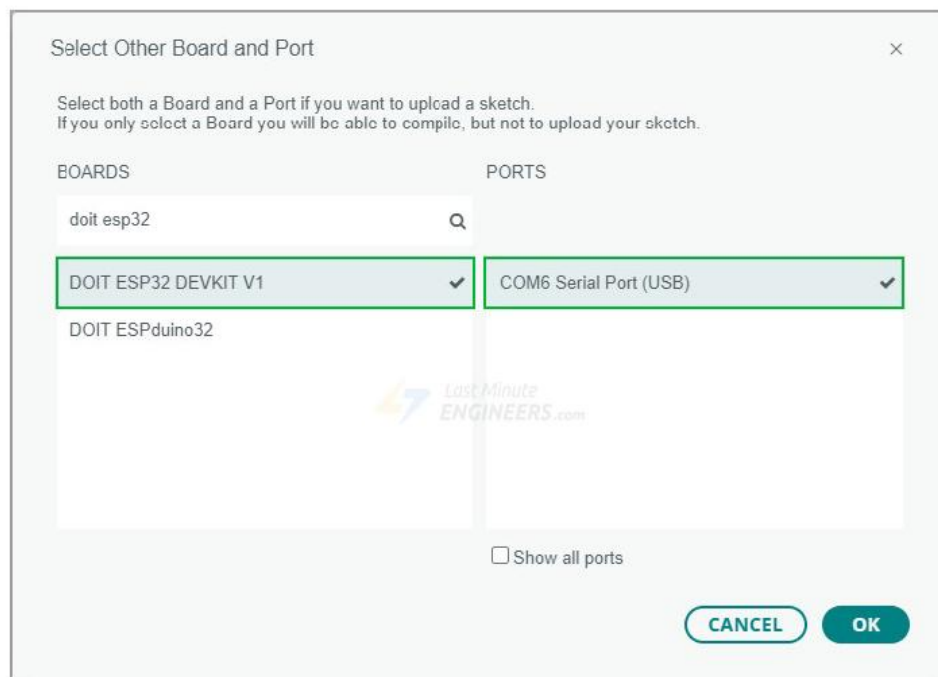

The IDE is now ready for programming the ESP32.