

## **EnOcean Equipment Profiles**

#### **REVISION HISTORY**

Ver.	Editor	Change	Date
2.6.8	NM	Last xml edition of the EEP-Specification	Dec 31, 2017

Copyright © EnOcean Alliance Inc. (2019). All rights reserved.

The information within this document is the property of the EnOcean Alliance and its use and disclosure are restricted. Elements of the EnOcean Alliance specifications may also be subject to third party intellectual property rights, including without limitation, patent, copyright or trademark rights (such a third party may or may not be a member of the EnOcean Alliance.)

The EnOcean Alliance is not responsible and shall not be held responsible in any manner for identifying or failing to identify any or all such third party intellectual property rights. This document and the information contained herein are provided on an "as is" basis and the EnOcean Alliance disclaims all warranties express or implied, including but not limited to

- (1) any warranty that the use of the information herein will not infringe any rights of third parties (including any intellectual property rights, patent, copyright or trademark rights, or
- (2) any implied warranties of merchantability, fitness for a particular purpose, title or non-infringement.

In no event will the EnOcean Alliance be liable for any loss of profits, loss of business, loss of use of data, interruption of business, or for any other direct, indirect, special or exemplary, incidental, punitive or consequential damages of any kind, in contract or in tort, in connection with this document or the information contained herein, even if advised of the possibility of such loss or damage. All Company, brand and product names may be trademarks that are the sole property of their respective owners.

The above notice and this paragraph must be included on all copies of this document that are made.

The EnOcean Alliance "EnOcean Equipment Profiles definitions" are available free of charge to companies, individuals and institutions for all non-commercial purposes (including educational research, technical evaluation and development of non-commercial tools or documentation.)

This specification includes intellectual property ("IPR") of the EnOcean Alliance and joint intellectual properties ("joint IPR") with contributing member companies. No part of this

EnOcean Equipment Profiles Page 1/14

## enocean alliance No Wires. No Batteries. No Limits.

## **System Specification**

specification may be used in development of a product or service for sale without being a participant or promoter member of the EnOcean Alliance and/or joint owner of the appropriate joint IPR.

These errata may not have been subjected to an Intellectual Property review, and as such, may contain undeclared Necessary Claims.

EnOcean Alliance Inc. 2400 Camino Ramon, Suite 375 San Ramon, CA 94583 USA Graham Martin Chairman & CEO EnOcean Alliance

EnOcean Equipment Profiles

# enocean alliance No Wires. No Batteries. No Limits.

## **System Specification**

## D2-30: Floor Heating Controls and Automated Meter Reading

Floor heating controls and automated meter reading gateway may appear combined in one device, but the metering functionality can also be absent.

The floor heating control unit controls a number of valves for separate heating circuits (e.g. for separate heating of single rooms). It measures the common hot water supply temperature as well as the return water temperatures of each single circuit.

The automated meter reading gateway is a device that connects to various counters such as heating, water, gas or electrical energy meters. The meters may be connected to the gateway by one or several of these interface types: M-Bus, D0, S0 (see appendix). The gateway reports the continuous energy or flow volume meter reading of each of the connected metering devices. Typically the measured variables consist of a momentary value and an accumulated value. The transmission of separated consumption import and export values is supported, too.

#### Data exchange

Direction: bidirectional

Addressing: ADT inbound, broadcast outbound Communication trigger: event- & time-triggered

Communication interval: minimum 1-1000 s, maximum 1000 s

Trigger event: heartbeat 1000 s, value change in "Position", "Return Temperature", "Status/Error", "Supply

Temperature", "Meter Reading" while respecting the minimum reporting interval

Tx delay: 500 ms (maximum response time, first telegram)
Rx timeout: 0 ms (minimum time between two received messages)

Teach-in method: Universal teach-in (outbound)

Encryption required: no Security level format: 0

#### EEP Family Table

Туре	0x00	0x01	0x02	0x03	0x04	0x05	0x06
Number of heating channels/valves	4	8	8	8	8	6	12
Channel return temperature	Х	Χ	Χ	X	X	-	-
Global return temperature	Х	Х	X	Х	X	-	-
Global supply temperature	Χ	Χ	Χ	Χ	Χ	-	-
Number of supported MBUS meters	0	0	8	10	10	0	0
Number of supported S0 meters	0	0	0	0	1	0	0
Number of supported D0 meters	0	0	0	0	0	0	0

#### Description of the meter interfaces

#### S0-Interface:

The S0-Interface is a two-wire connection designed for the transmission of monotonously rising measurement data. The standard is defined in EN 62053-31. The meter device transmits a fixed number of pulses per physical meter unit. The number of pulses per unit is defined by the meter manufacturer and depends on the necessary precision of the meter system. The pulses are output as currency variations, where a value lower than 3 mA corresponds to a logical 0. The sender output is mostly realized by a transistor or an opto-coupler, which needs to be supplied by a voltage of 27-30 V. Polarity must be respected.

#### D0-Interface:

The D0-interface is an optical metering interface defined in EN62056-61. It allows the unidirectional readout of metering data at a rate of 9600 Baud, using telegrams with start bit, 7 data bits, parity and a stop bit. One of the

EnOcean Equipment Profiles Page 3/14



Page 4/14


## **System Specification**

protocols SML (Smart Message Language) or DLMS (Device Language Message Specification, EN62056-21) can be used for coding the data. A D0-Meter can deliver consumption data as well as various system data. The source and type of a data point is indicated by the standardized OBIS-codes.

#### **MBUS-Interface:**

The M-Bus (Meter-Bus) is a bidirectional field bus for the communication with consumption meters. It is described in standard EN13757. Typically there can be connected up to 250 devices in one M-Bus network. There is a common master in the network, who periodically collects the meter data from its slaves. The network may be implemented either as two-wire cable network allowing remote powering of the slaves or as wireless network. The protocol operates at 300 to 9600 Baud and codes the data bytes with start bit, 8 data bits, parity and a stop bit. The data records sent by a metering slave deliver in their header field the coding information of the following data field (value size, measurement medium, unit, multiplier). The master can address a single slave by its primary address (1...250), which must be assigned during network configuration, or by its secondary address, which is a unique device identification number assigned by the device manufacturer.

#### Application example for floor heating controls

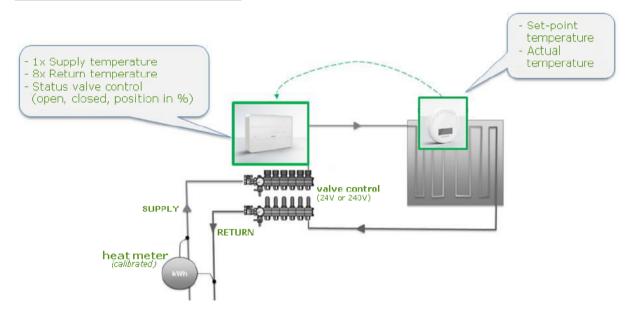

#### References:

M-Bus documentation: www.m-bus.com

SML specification: www.vde.com/de/fnn/arbeitsgebiete/messwesen/Sym2/Seiten/default.aspx

DLMS User Association: www.dlms.com

EnOcean Equipment Profiles



RORG	D2	VLD Telegram
FUNC	30	Floor Heating Controls and Automated Meter Reading
TYPE	06	Type 0x06 (description: see table)

Submitter: MSR-Solutions

#### CMD 0x1 - Set heating controls output

This message is sent to a floor heating actuator. It controls the valve position of one channel or of all channels of the floor heating controls.

Sender: controller; send type: broadcast or addressed; expected response: CMD 0x3

Offset	Size	Data	ShortCut	Description	Valid Range	Scale Unit
0	4	Valve control period / PWM	PERIOD	Total on-off time for two-position	Enum:	
		signal interval		valve controller (T valve open + T valve closed)	0: Local	default / no ge
					1: 1 s	
					2: 2 s	
					3: 5 s	
					4: 10 s	
					5: 20 s	
					6: 50 s	
					7: 100 9	3
					8: 200 9	5
					9: 500 9	5
					10: 1000	S
					Rese	rved
4	4	Command ID	CMD	Command identifier	Enum:	
					0x01: ID 01	_
8	2	Not Used (= 0)				
10	1	Valve type	VTYP	Type of connected valve	Enum:	
					0: Valve no (N.C.)	ormally closed
					1: Valve no (N.O.)	ormally open
11	5	Heating channel	нсн	The heating channel that should	Enum:	
				be set	015: A val	
					Rese 1630:	rved
					31: All va	alid channels
16	1	Run init sequence	RIN	Measure and store the valve zero	Enum:	
				point	0: No actio	n
					†	sequence
17	7	Valve position set point	POS	Valve set point 0100% (0=closed, 100=open)	0100	0100 %

EnOcean Equipment Profiles Page 5/14



#### CMD 0x2 - Heating controls status query

This message is sent to a floor heating actuator. It requests the status of one channel or the status of the global control unit of an actuator.

Sender: controller; send type: broadcast or addressed; expected response: CMD 0x3

Offset	Size	Data	ShortCut	Description	Valid	d Range	Scale	Unit	
0	4	Not Used (= 0	)						
4	4	Command ID	CMD	Command identifier	Enum: 0x02: II	0 02			
8	3	Not Used (= 0	)						
11	5	Heating channel		The heating channel that should be reported	Enum: 015: A valid channel number				
					Reserved 1628: 29: All valid channels				
					All valid channels and global device status				
					31:	Global device	status only		

EnOcean Equipment Profiles Page 6/14



#### CMD 0x3 - Heating controls status response / CH = 0...15

This message is sent by a floor heating controls if one of the following events occurs:

- Message 'status query' has been received (CMD 0x2).

- Status of one channel or temperature has changed.

Sender: actuator; send type: broadcast; maximum send delay 1 s.

If the response is for single channel data (CH = 0...15):

Offset	Size	Data	ShortCut	Description	Valid Range Scale Unit
0	4	Not Used (= 0)			
4	4	Command ID	CMD	Command identifier	Enum: 0x03: ID 03
8	3	Status / Error	STATUS	Status / Error indication of given channel	Enum:  0: No fault  1: General error  2: Init sequence running  3: Channel not available  4: Temperature sensor error  5: Valve error  6: Temperature sensor and valve error  7: Reserved
11	5	Heating channel  Not Used (= 0)		The heating channel that is reported	Enum:  015: A valid channel number Reserved 1631:
17	7	Valve position	POS	Actual valve position 0100% (0=closed, 100=open)	0100 0100 %
24	8	Return temperature	TEMPRET	The current return temperature of the channel	0180 090 °C

**EnOcean Equipment Profiles** Page 7/14



## CMD 0x3 - Heating controls status response / CH = 31

If the response is for global floor heating controls unit data (CH = 31):

Offset	Size	Data	ShortCut	Description	Valid Range	Scale	Unit
0	4	Not Used (= 0)					
4	4	Command ID	CMD	Command identifier	Enum:		
					0x03: ID 03		
8	3	Status / Error	STATUS	Global unit status	Enum:		
					0: No fault		
					1: General error		
					2: Supply ten error	nperatur	e
					3: Return temperature error		e
					4: Error on b	oth sens	ors
					Reserved		
					57:		
11	5	Heating channel	HCH	The heating channel that is reported	Enum:		
				(=global unit)	31: Unit status		
16	8	Supply temperature	TSUP	The current supply temperature of the unit	0180	090	°C
24	8	Return temperature	TRET	The current common return temperature	0180	090	°C

EnOcean Equipment Profiles Page 8/14



#### CMD 0x6 - Set meter configuration / MBUS (BUS = 1)

This message is sent to a metering device gateway to configure the meter settings for one channel.

Sender: controller; send type: broadcast or addressed.

Offset	Size	Data	ShortCut	Description	Valid Range	Scale Unit	
0	4	Report	RM	Minimum auto reporting	Enum:		
		measurement		interval	0: No auto repo	orting	
					1: Min. 1 s inter		
					2: Min. 3 s interval 3: Min. 10 s interval		
					4: Min. 30 s interval		
					5: Min. 100 s interval		
					6: Min. 300 s in	iterval	
					7: Min. 1000 s	interval	
					815: Reserved		
4	4	Command ID	CMD	Command identifier	Enum:		
					0x06: ID 06		
8	1	Not Used (= 0)					
9	2	Meter bus type	BUS	The meter bus that should be	Enum:		
				configured	0: Reserved		
					1: MBUS		
					2: S0		
					3: D0		
11	5	Meter channel index	MCH	The meter bus that should be configured	030	030 1	
16	2	Not Used (= 0)					
18	3	Meter 1 units	UNIT1	Physical units of first measured	Enum:		
				quantity (imported value)	0: No reading (un	configured)	
					1: Current value V value kWh	V, accumulated	
					2: Current value V value Wh	V, accumulated	
					3: Accumulated va	alue kWh only	
					4: Current value r value m3	m3/h, accumulated	
					5: Current value of value dm3	dm3/h, accumulated	
					6: Accumulated va	alue m3 only	
					7: Digital counter		
21	3	Meter 2 units	UNIT2	Physical units of second	Enum:		
				measured quantity (exported value)	0: No reading (un	configured)	

EnOcean Equipment Profiles Page 9/14



					1:	Current value V value kWh	V, accumulate	ed
					2:	Current value W, accumulated value Wh  Accumulated value kWh only		ed
					3:			′
					4:	Current value m3/h, accumulated value m3		
					5:	Current value dm3/h, accumulated value dm3		ulated
					6:	Accumulated va	alue m3 only	
					7:	7: Digital counter		
24	8	Primary Address	ADDR	The primary MBUS address of the meter	1250 1250 1		1	
32	40	Not Used (= 0)					·	

## CMD 0x6 - Set meter configuration / S0 (BUS = 2)

Offset	Size	Data	ShortCut	Description	Valid Range	Scale	Unit	
0	4	Report	RM	Minimum auto reporting interval	Enum:			
		measurement			0: No auto repo	orting		
					1: Min. 1 s inte	1: Min. 1 s interval 2: Min. 3 s interval		
					2: Min. 3 s inte			
					3: Min. 10 s int	erval	_	
					4: Min. 30 s int	erval	_	
					5: Min. 100 s ir	iterval	_	
					6: Min. 300 s ir	iterval	_	
					7: Min. 1000 s	interval	_	
					815: Reserved			
4	4	Command ID	CMD	Command identifier	Enum:			
					0x06: ID 06			
8	1	Not Used (= 0)						
9	2	Meter bus type	BUS	The meter bus that should be	Enum:			
				configured	0: Reserved			
					1: MBUS			
					2: S0			
					3: D0			
11		Meter channel index	МСН	The meter number of given bus that should be configured	030	030	1	
16	2	Not Used (= 0)						

EnOcean Equipment Profiles Page 10/14



18	3	Meter 1 units	UNIT1	Physical units of first measured	Enum:
				quantity (imported value)	0: No reading (unconfigured)
				(imported value)	1: Current value W, accumulated
					value kWh
					2: Current value W, accumulated value Wh
					3: Accumulated value kWh only
					At Comment uplus m2/h
					4: Current value m3/h, accumulated value m3
					5: Current value dm3/h, accumulated value dm3
					6: Accumulated value m3 only
					7: Digital counter
21	3	Meter 2 units	UNIT2	Physical units of second	Enum:
				measured quantity (exported value)	0: No reading (unconfigured)
					Current value W, accumulated value kWh
					2: Current value W, accumulated
					value Wh
					3: Accumulated value kWh only
					4: Current value m3/h,
					accumulated value m3 5: Current value dm3/h,
					accumulated value dm3
					6: Accumulated value m3 only
					7: Digital counter
24	2	Factor of number of	FACP	The factor for the number of	Enum:
		pulses		pulses per value in UNIT1	0: 1
				per raide in onere	1: 0.1 2: 0.01
					3: 0.001
26	14	Number of pulses	NOP	The number of pulses per value	Enum:
				in UNIT1* FACP	0: Do not change the current setting of NOP
					Number of pulses per unit
					116383: (EEP 2.6.5: 1 16383 ± 65535)
40	32	Preset value	RST	Preset the accumulated value to	Enum:
				this value	New preset value
					04294967294: 0xFFFFFFFF: Do not change the
					current value

EnOcean Equipment Profiles Page 11/14



## CMD 0x6 - Set meter configuration / D0 (BUS = 3)

4	Report	DM				
	measurement	RM	Minimum auto reporting interval	3: Min. 10 s inte		
				5: Min. 100 s int 6: Min. 300 s int	erval erval	
4	Command ID	CMD	Command identifier	Enum: 0x06: ID 06		
1	Not Used (= 0)					
2	Meter bus type	BUS	The meter bus that should be configured	Enum:		
		MCH	The meter number of given bus that should be configured	030	030	1
3	Meter 1 units	UNIT1	Physical units of first measured quantity (imported value)	1: Current value W value kWh 2: Current value Wh 3: Accumulated va 4: Current value m accumulated va 5: Current value d accumulated va	, accumula , accumula lue kWh or n3/h, lue m3 m3/h, lue dm3	ited ited
1 2		Not Used (= 0) Meter bus type  Meter channel index Not Used (= 0)	Not Used (= 0)  Meter bus type  BUS  Meter channel index  Not Used (= 0)	Not Used (= 0)  Meter bus type  BUS  The meter bus that should be configured  Meter channel index  Not Used (= 0)  Meter 1 units  UNIT1  Physical units of first measured quantity	2: Min. 3 s inter	2: Min. 3 s interval   3: Min. 10 s interval   4: Min. 30 s interval   4: Min. 30 s interval   5: Min. 100 s interval   6: Min. 300 s interval   7: Min. 1000 s interval   815: Reserved   815: Res

EnOcean Equipment Profiles Page 12/14



21	3	Meter 2 units	UNIT2	Physical units of second measured quantity (exported value)	Enum:		
					0: No reading (unconfigured)		
					Current value W, accumulated value kWh		
					2: Current value W, accumulated value Wh		
					3: Accumulated value kWh only		
					4: Current value m3/h, accumulated value m3		
					5: Current value dm3/h, accumulated value dm3		
					6: Accumulated value m3 only		
					7: Digital counter		
24	8	D0 Protocol	PROT	The D0 protocol that should be	Enum:		
				used for that meter	0: Auto detect		
					1: SML (Smart Message Language)		
					2: DLMS (Device Language Message Specification)		
					Reserved 3255:		
32	40	Not Used (= 0)					

## CMD 0x7 - Meter Status Query

This message is sent to a metering device gateway to query the status of a meter. Sender: controller; send type: broadcast or addressed; expected response: CMD 0x8.

Offset	Size	Data	ShortCut	Description	Valid Range   Scale   Unit			
0	4	Not Used (= 0)						
4	4	Command ID	CMD	Command identifier	Enum:			
					0x07: ID 07			
8	1	Not Used (= 0)						
9	2	Meter bus type	BUS	The meter bus type that is queried	Enum:			
					0: Reserved			
					1: MBUS			
					2: 50			
					3: D0			
11		Meter channel index		The meter channel of given bus that status is	Enum:			
				queried	Meter channel			
					030:			
					31: All valid			
					channels			

EnOcean Equipment Profiles Page 13/14



#### CMD 0x8 - Meter reading report / status response

This message is sent by a metering device gateway to report the meter values for each configured channel. It is sent if one of the following events occurs:

- Message 'meter status query' has been received (CMD 0x7)
- Status or meter reading of one channel has changed and auto reporting was configured by signal RM.

Sender: sensor; send type: broadcast; maximum send delay 1 s.

Offset	Size	Data	ShortCut	Description	Valid Range	Scale	Unit
0	1	Not Used (= 0)	)			•	•
1	3	Meter status / error		Meter channel status	3: Bus uncc 4: Bus shor 5: Commun 6: Unknown configura	onfigured onnected	
4	4	Command ID	CMD	Command identifier	Enum:		
					0x08: ID 08		
8	1	Not Used (= 0)	)				
9	2	Meter bus type	BUS	The used bus of the meter status response	Enum:  0: Reserved  1: MBUS  2: S0  3: D0	1	
11	5	Meter channel index	МСН	The meter number of given bus that status is reported	030	030	1
16	3	Not Used (= 0)	)			1	1
19	2	Value selection	VSEL	The selection of the reported value	1: Meter 1 / 2: Meter 2	Current value Accumulated va Current value Accumulated va	
21	3	Value unit	VUNIT	The unit of the reported value	Enum:  0: W  1: Wh  2: kWh  3: m3/h  4: dm3/h  5: m3  6: dm3  7: 1 (digital	counter)	
24	32	Meter reading value	VAL	The reported value	04294967295	0429496729	5 According to VUNIT

EnOcean Equipment Profiles Page 14/14