

Esc ~	1 L1	2 L2	3 L3	4 L4	5
Tab	Q	W	E	R	T
Shift	A	S	D	F	G
Ctrl	Z L4 Light	X	C	V	B
		Space L2	Enter L4	L1 Tgl	
			Alt	Back Space	





6	7	8	9	0	-
Y	U	I	O	P	\
H	J	K	L	+ :	'
N	M	,	.	/ L3	Shift
	Delete	Enter L2			
	Back Space				

BOOT	SET_LEFT	SET_RIGHT	#	\$	%
Tab	-	7	8	9	*
Exit	+	4	5	6	/
Ctrl	0	1	2	3	=
		Space Exit	Enter Exit	L1 Tgl	
			Alt	Back Exit	

BOOT	SET_LEFT	SET_RIGHT	(	)	BOOT
rgb +	[	]	{	}	BOOT
rgb -	Left	Up	Down	Right	=
Hue +	Hue -	Sat +	Sat -	Brt +	Brt -
	L2 Tgl	Enter Exit			
	Back Exit				

BOOT	F1	F2	F3	F4	F5
PSCR	[	]	{	}	Exit
Shift	Left	Up	Down	Right	Exit
Exit	Home L3	Page Up	Page Down	End	Exit
		Space Exit	Enter Exit	L1 Tgl	
			Delete	Back Exit	

F6	F7	F8	F9	F10	BOOT
FIRE	[	]	{	}	F11
Shift	Left	Down	Up	Right	F12
RGB Auto	Home	Page Up	Page Down	End	
	L2 Tgl	Enter Exit			
	Back Exit				

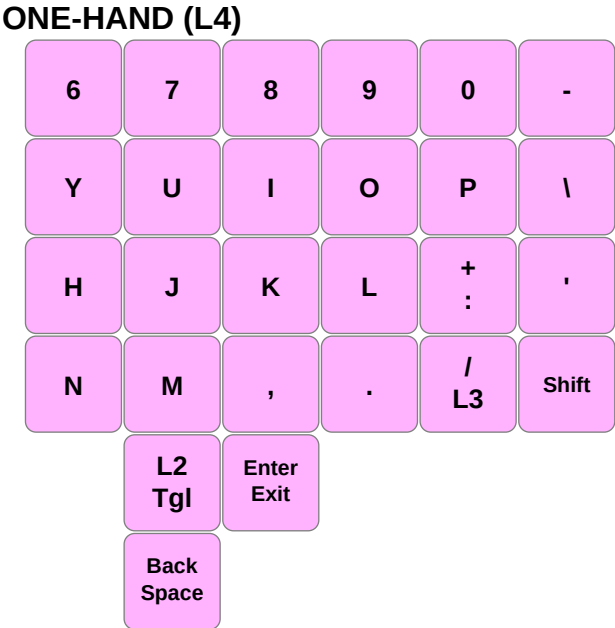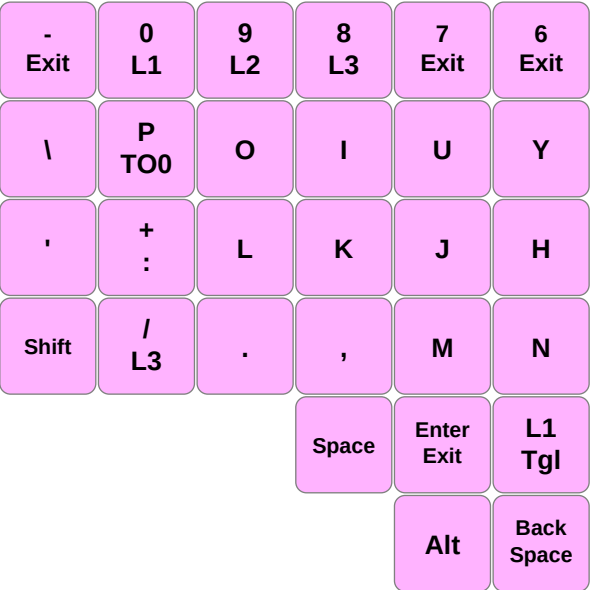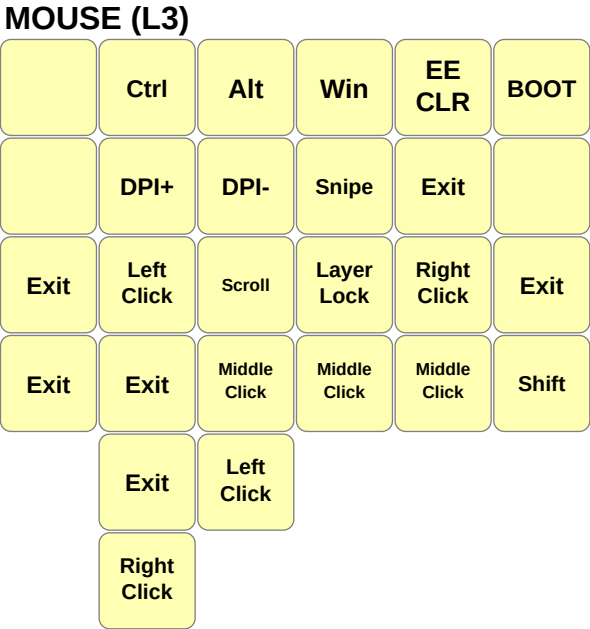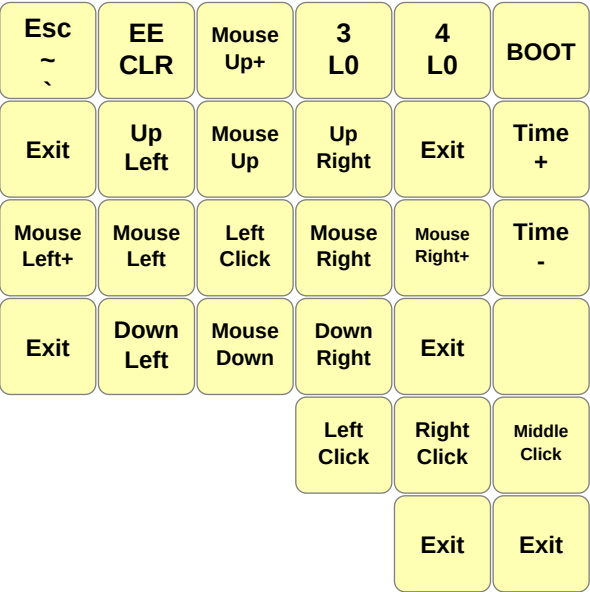

COMBOS & SPECIAL ACTIONS

- A + S

S + D

D + F

F + G

J + K

Z (Tap)

Z (Hold)

Z (Dbl-Tap)

LShift + RShift
- : Left Arrow

: Up Arrow

: Down Arrow

: Right Arrow

: Delete

: Z

: Layer 4

: Flashlight (White)

: Caps Lock