Scanner Programming Tags

NCR
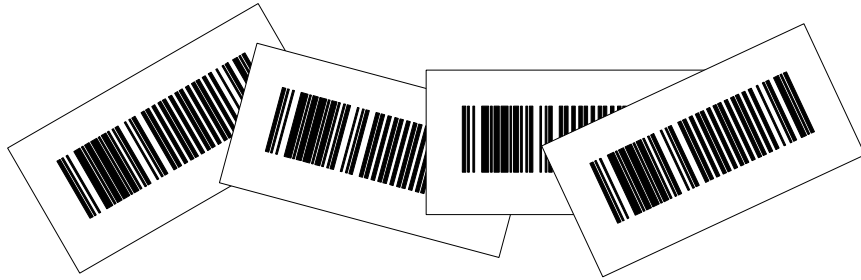
BST0-2121-74   Release O

Volume Adjustment

||| ||| || | ||| | ||| || ||| || ||| | |||

Reset

```
|||| || ||| | ||| |||| |||| ||| |||
```
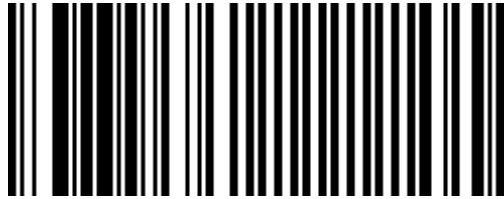
11818

Default

R0046

Programming Mode

R0042

End

Save and Reset

R0044

Abort

R0045

Diagnostic Mode

R0041

Mode 1

Slot Scanner (PACESETTER Plus)

Mode 2

||||| ||| || ||||| ||| ||| |||| |||

Slot Scanner (PACESETTER Plus)

11501

Reset Tallies

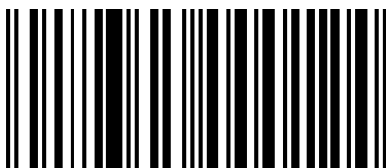Slot Scanner (PACESETTER Plus)

11502

Firmware Flashing

Super ASIC Models

20600

Speak Scanner Serial Number

Available with firmware version 497-0433606 or later.

22786

Speak Barcodes Currently Enabled

||| ||| | ||| |||| ||| ||| |||

Available with firmware version 497-0433606 or later.

22785

Hex 0

Hex 1

Hex 2
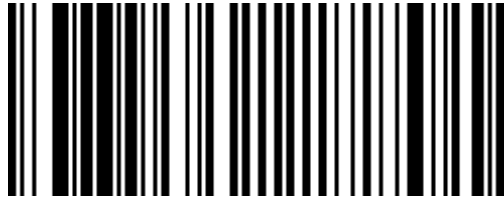

R0050

Hex 3

Hex 4

Hex 5

Hex 6

R0054

Hex 7

Hex 8

R0056

Hex 9

R0057

Hex A

R0058

Hex B

Hex C

Hex D

Hex E

Hex F

ASCII Code Chart

00	NULL	10	DLE	20	SP	30	0	40	@	50	P	60		70	p
01	SOH	11	DC1	21	!	31	1	41	A	51	Q	61	a	71	q
02	STX	12	DC2	22	"	32	2	42	B	52	R	62	b	72	r
03	ETX	13	DC3	23	#	33	3	43	C	53	S	63	c	73	s
04	EOT	14	DC4	24	$	34	4	44	D	54	T	64	d	74	t
05	ENQ	15	NAK	25	%	35	5	45	E	55	U	65	e	75	u
06	ACK	16	SYN	26	&	36	6	46	F	56	V	66	f	76	v
07	BEL	17	ETB	27	'	37	7	47	G	57	W	67	g	77	w
08	BS	18	CAN	28	(	38	8	48	H	58	X	68	h	78	x
09	HT	19	EM	29	)	39	9	49	I	59	Y	69	i	79	y
0A	LF	1A	SUB	2A	*	3A	:	4A	J	5A	Z	6A	j	7A	z
0B	VT	1B	ESC	2B	+	3B	;	4B	K	5B	[	6B	k	7B	{
0C	FF	1C	FS	2C	,	3C	<	4C	L	5C	\	6C	l	7C	|
0D	CR	1D	GS	2D	-	3D	=	4D	M	5D	]	6D	m	7D	}
0E	S0	1E	RS	2E	.	3E	>	4E	N	5E	^	6E	n	7E	~
0F	S1	1F	US	2F	/	3F	?	4F	O	5F	_	6F	o	7F	DEL

R0040