


FRONT DOOR OUTER PANEL (ASSY)

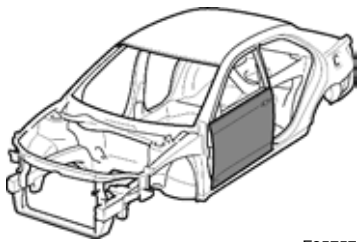



F25757A

Symbol meaning

▲ : Remove Weld Points

F25757B

REMOVAL

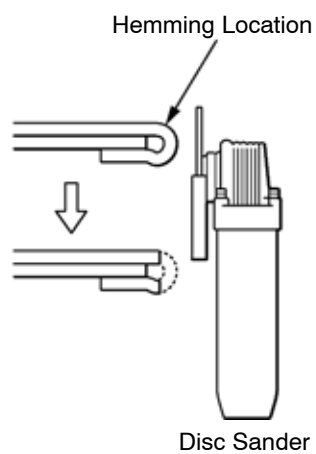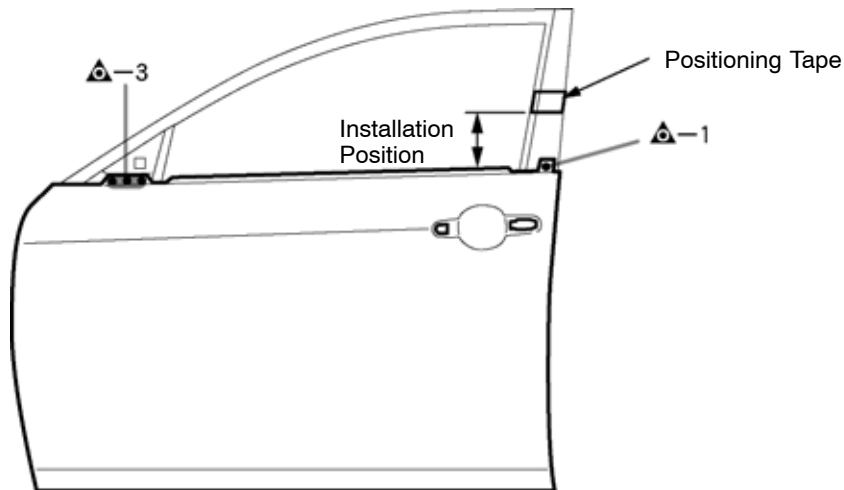

F25757

REMOVAL POINT


- 1 Before removing the outer panel, mark the installation position with tape.
- 2 Before removing the outer panel, establish its exact position in relation to the window frame using a reference marker, etc.
- 3 After grinding off the hemming location, remove the outer panel.

Symbol meaning

◻ : MIG Plug Weld + : Spot MIG Weld ◻ : Body Sealer

F25758B

INSTALLATION

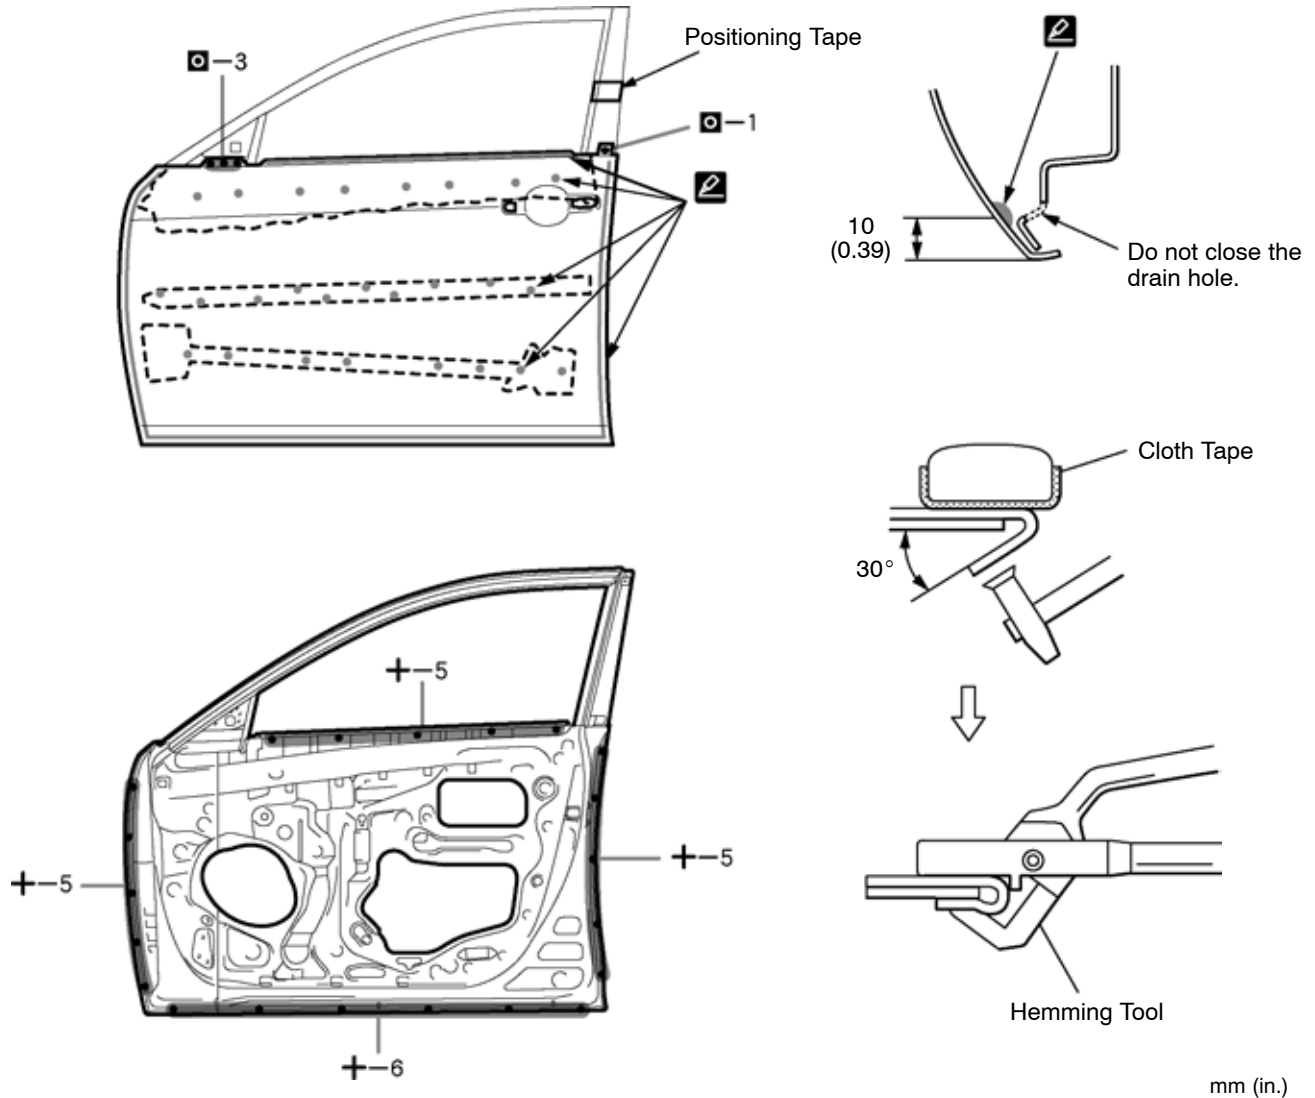

F25758

INSTALLATION POINT

- Before temporarily installing the new parts, apply body sealer to the reinforcement, side impact protection beam and backside of the new parts.
HINT:
1) Apply sealer evenly about 10 mm (0.39 in.) from the flange and 3 mm (0.12 in.) in diameter on the outer panel and apply just enough sealer for the reinforcement and side impact protection beam to make contact.
- Bend the flange hem about 30° with a hammer and dolly. Then, fasten tightly with a hemming tool.
HINT:
1) Perform hemming in three steps, being careful not to warp the panel.
2) If a hemming tool cannot be used, hem with a hammer and dolly.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.