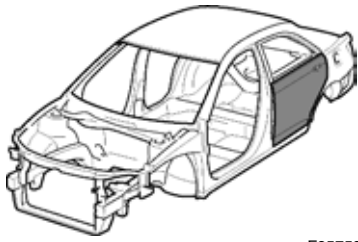


REAR DOOR OUTER PANEL (ASSY)



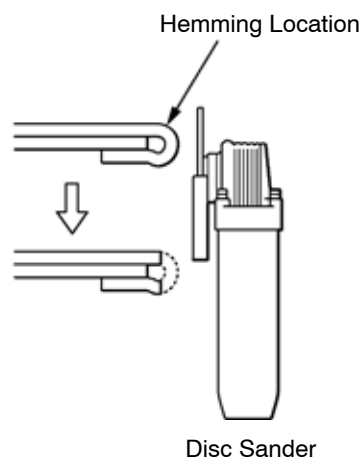
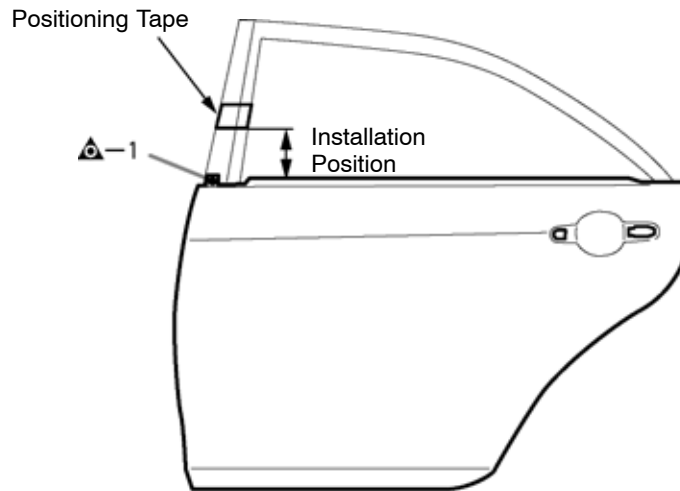
F25759A

Symbol meaning

⚠ : Remove Weld Points

F25759B

REMOVAL



F25759

REMOVAL POINT

- 1 Before removing the outer panel, mark the installation position with tape.
- 2 Before removing the outer panel, establish its exact position in relation to the window frame using a reference marker, etc.
- 3 After grinding off the hemming location, remove the outer panel.

Symbol meaning

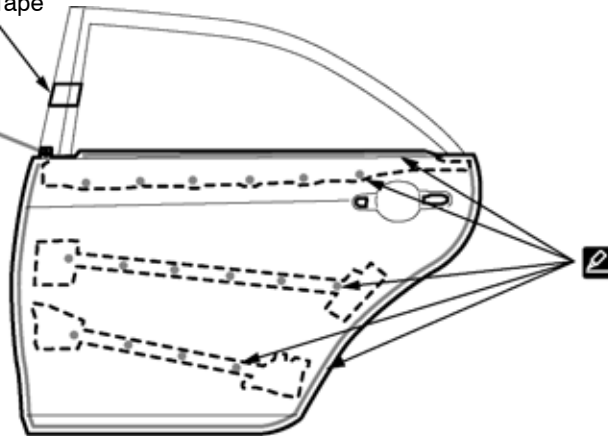
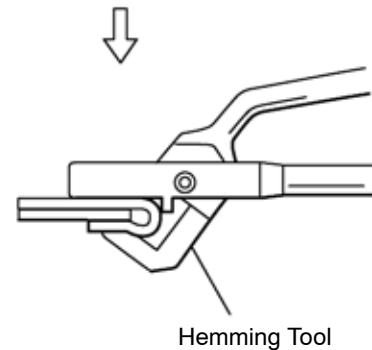
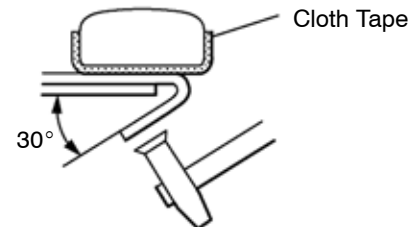
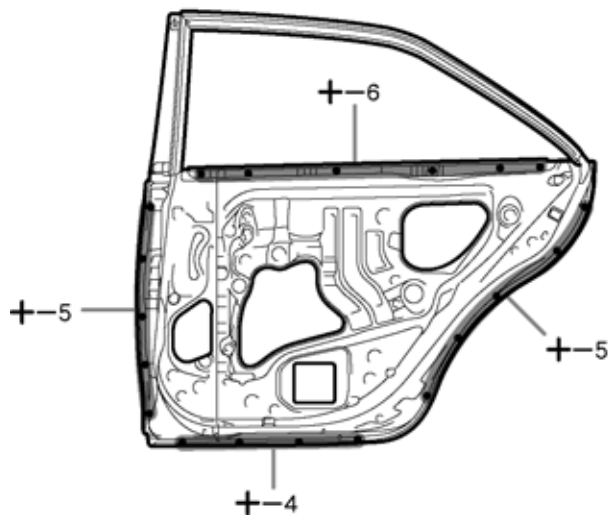
◻ : MIG Plug Weld + : Spot MIG Weld ◻ : Body Sealer

F25760B

INSTALLATION

Positioning Tape

◻-1

10
(0.39)Do not close the
drain hole.

mm (in.)

F25760

INSTALLATION POINT

- 1 Before temporarily installing the new parts, apply body sealer to the reinforcement, side impact protection beam and backside of the new parts.

HINT:

- 1) Apply sealer evenly about 10 mm (0.39 in.) from the flange and 3 mm (0.12 in.) in diameter on the outer panel and apply just enough sealer for the reinforcement and side impact protection beam to make contact.

- 2 Bend the flange hem about 30° with a hammer and dolly. Then, fasten tightly with a hemming tool.

HINT:

- 1) Perform hemming in three steps, being careful not to warp the panel.
- 2) If a hemming tool cannot be used, hem with a hammer and dolly.

- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.