


QUARTER WHEEL HOUSING OUTER PANEL (ASSY): TMC made

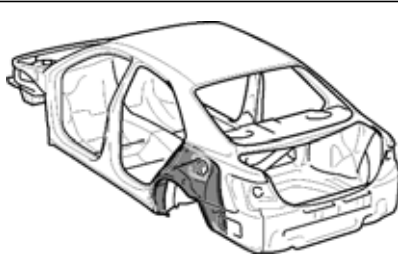

F25739A

With the quarter panel removed.

Symbol meaning

REMOVAL



Remove Weld Points

INSTALLATION



MIG Plug Weld



Cut with disc sander, etc.



Cut and Join Location



Tack Weld





Butt Weld

F25739B

REMOVAL-INSTALLATION

[LH]

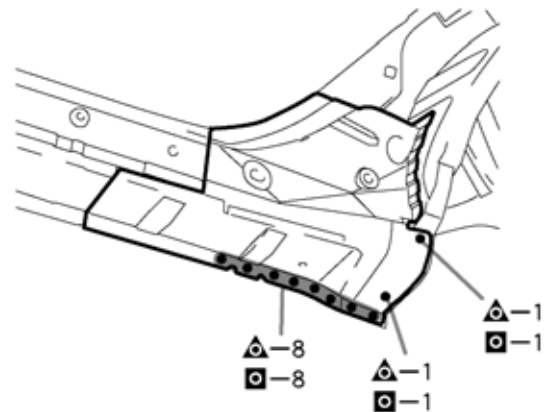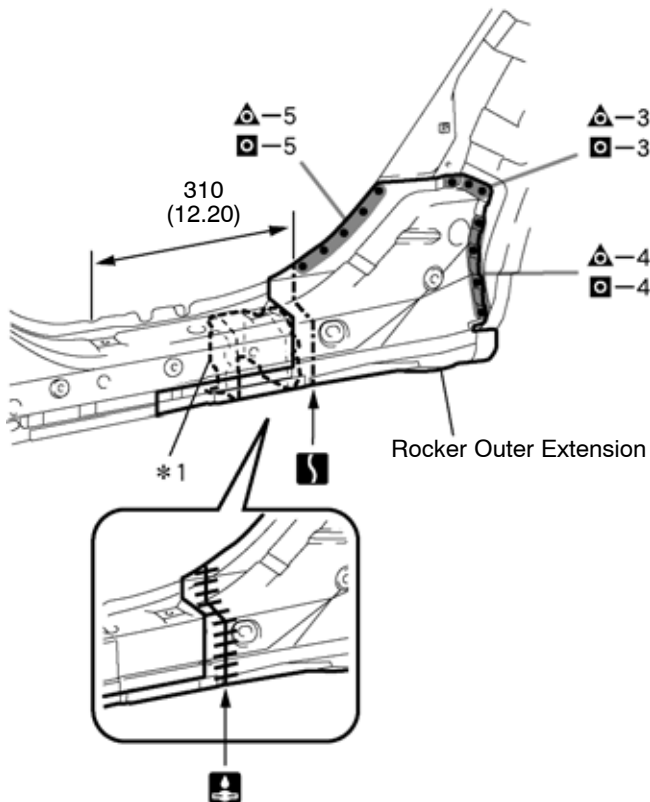

mm (in.)

F25739

REMOVAL POINT

- *1: Take care not to damage the internal reinforcement.
- After removing the rocker outer extension, remove the quarter wheel housing outer panel.

INSTALLATION POINT

- After welding the quarter wheel housing outer panel to the vehicle side, install the rocker outer extension.

Symbol meaning

REMOVAL

△ △ △ : Remove Weld Points

INSTALLATION

○ M I : MIG Plug Weld


⊙ : Cut with disc sander, etc.

⌋ : Cut and Join Location

⌋ : Tack Weld ⌋ : Butt Weld

F25739B

[LH]

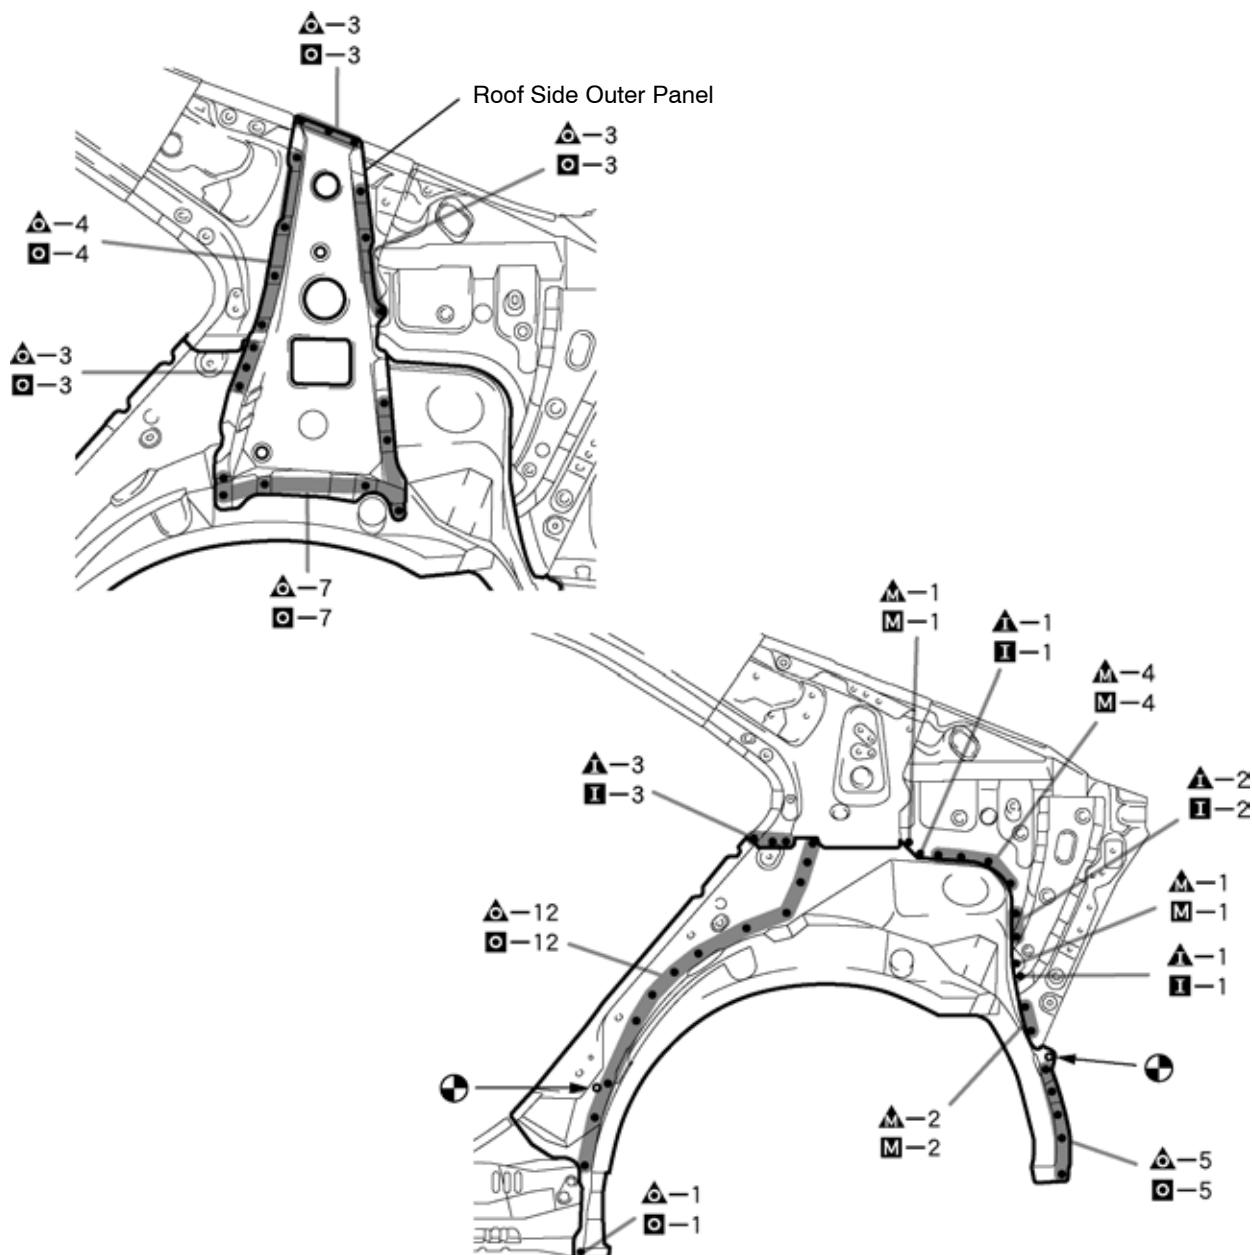

F25740




REMOVAL POINT

- 1 After removing the roof side outer panel, remove the quarter wheel housing outer panel.

INSTALLATION POINT

- 1 After welding the quarter wheel housing outer panel to the vehicle side, install the roof side outer panel.

[LH]

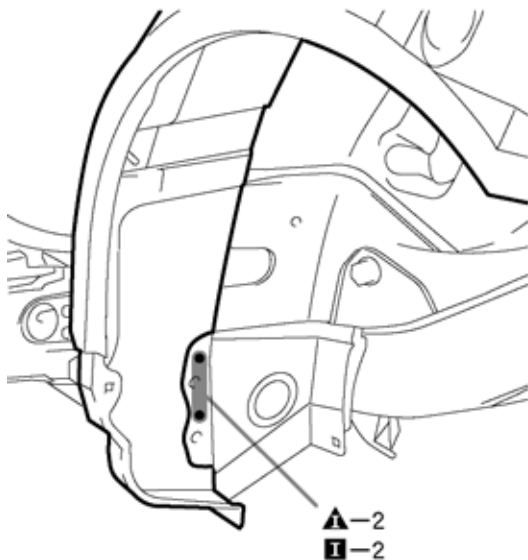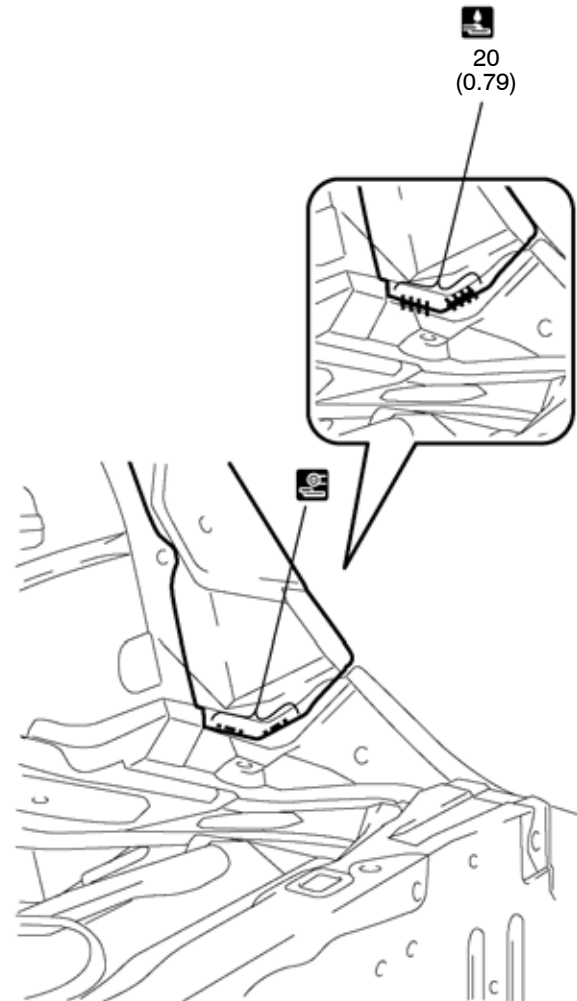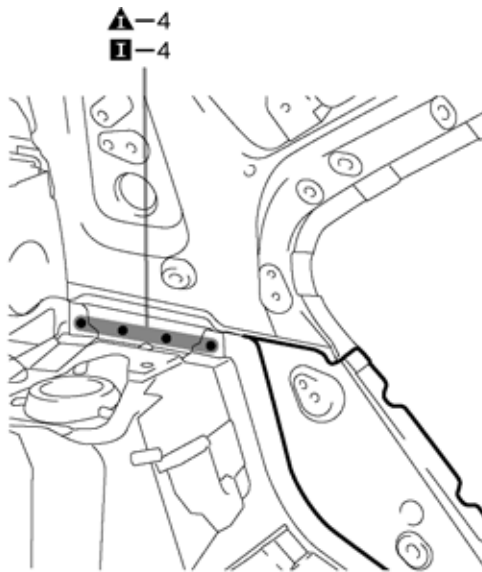

mm (in.)

F25742

INSTALLATION POINT

- 1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

Symbol meaning

REMOVAL

△ △ △ : Remove Weld Points

⊙ : Cut with disc sander, etc.

S : Cut and Join Location

INSTALLATION


⊙ M I : MIG Plug Weld

⊙ : Tack Weld

⊙ : Butt Weld

F25739B

[RH]

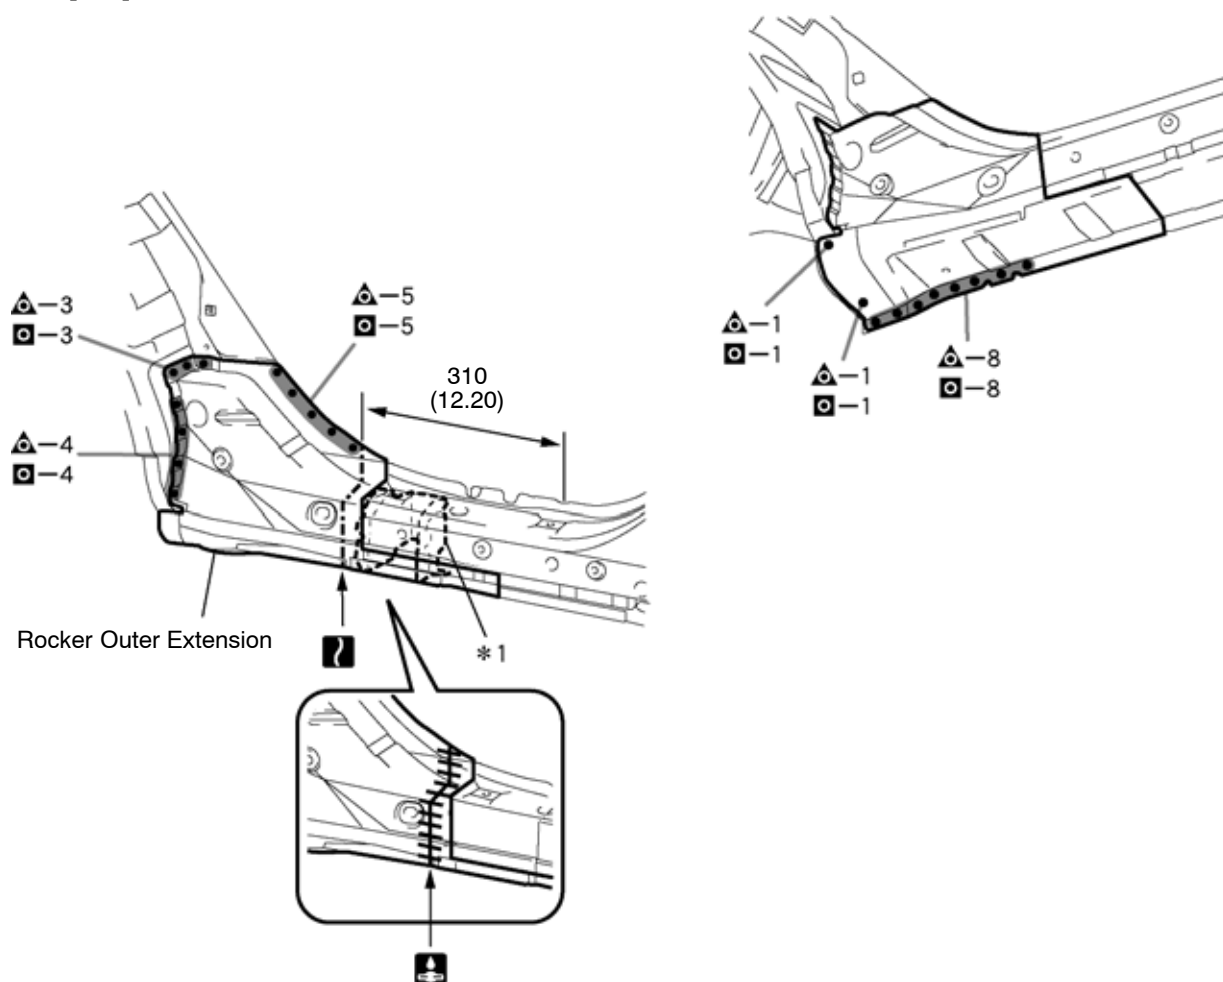

mm (in.)

F25795

REMOVAL POINT

- 1 *1: Take care not to damage the internal reinforcement.
- 2 After removing the rocker outer extension, remove the quarter wheel housing outer panel.

INSTALLATION POINT

- 1 After welding the quarter wheel housing outer panel to the vehicle side, install the rocker outer extension.

Symbol meaning

REMOVAL

△ △ △ : Remove Weld Points

INSTALLATION

○ M T : MIG Plug Weld





⊞ : Cut with disc sander, etc.

⌋ : Cut and Join Location

⊞ : Tack Weld ⊞ : Butt Weld

F25739B

[RH]

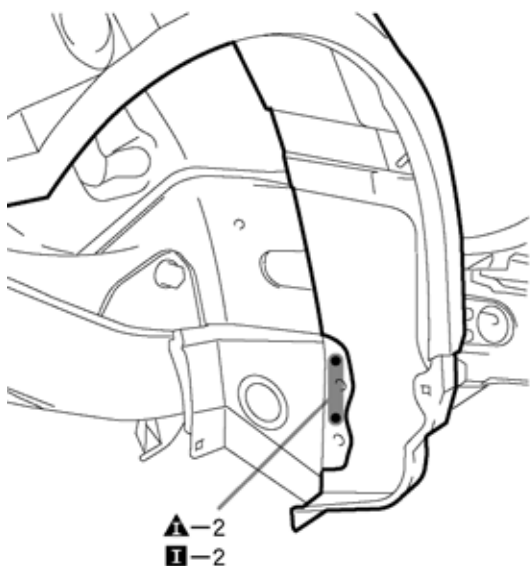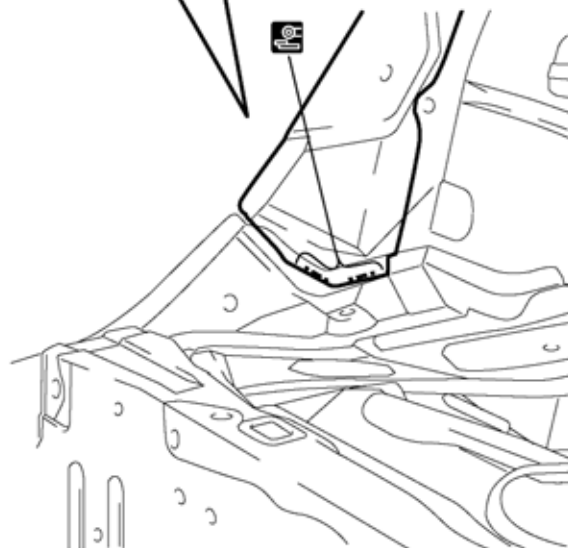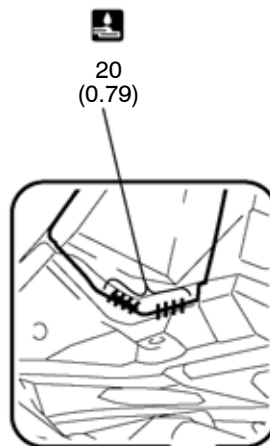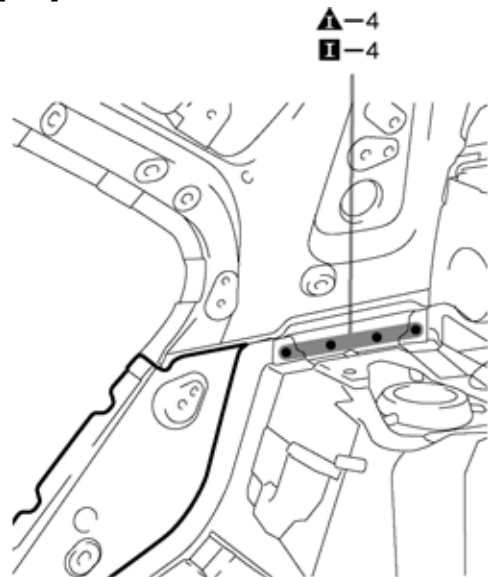

mm (in.)

F25796

INSTALLATION POINT

- 1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.