



NOTICE ABOUT VEHICLE CONDITION WHEN JACKING UP VEHICLE

1. NOTICE FOR USING JACK AND SAFETY STAND

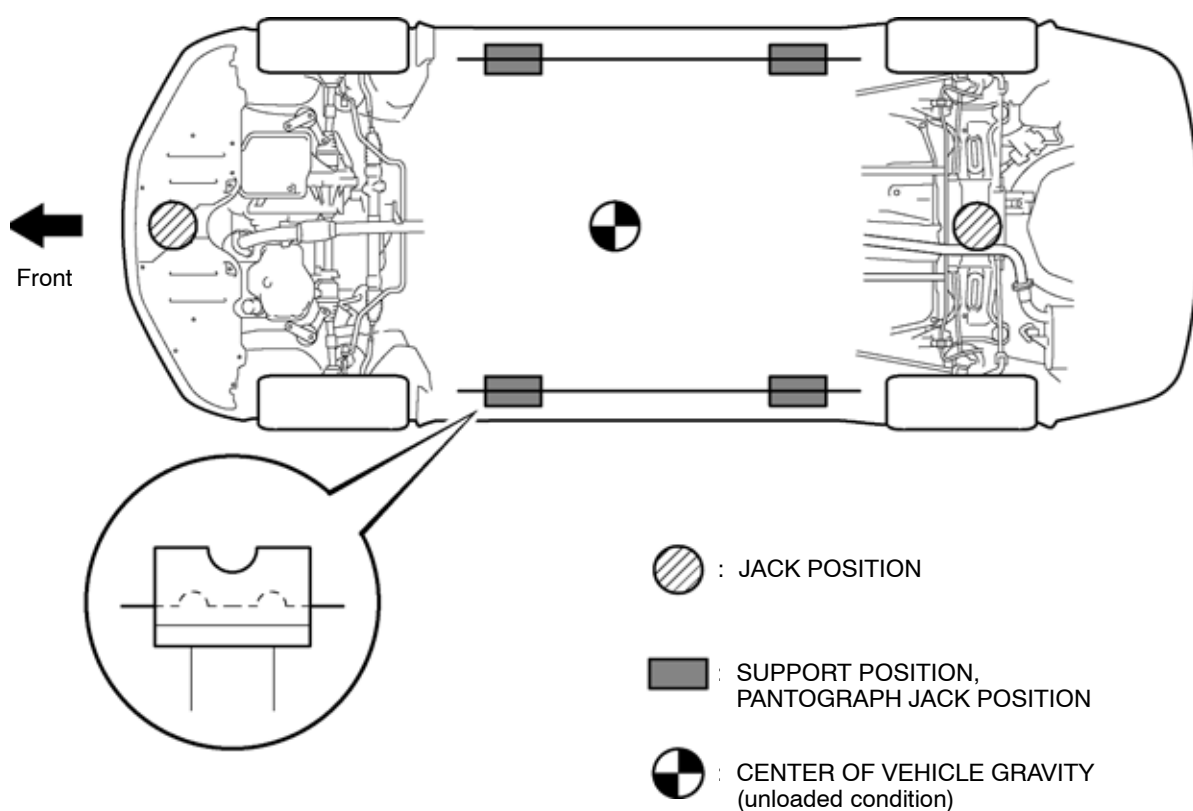


2. NOTICE FOR USING SWING ARM TYPE LIFT

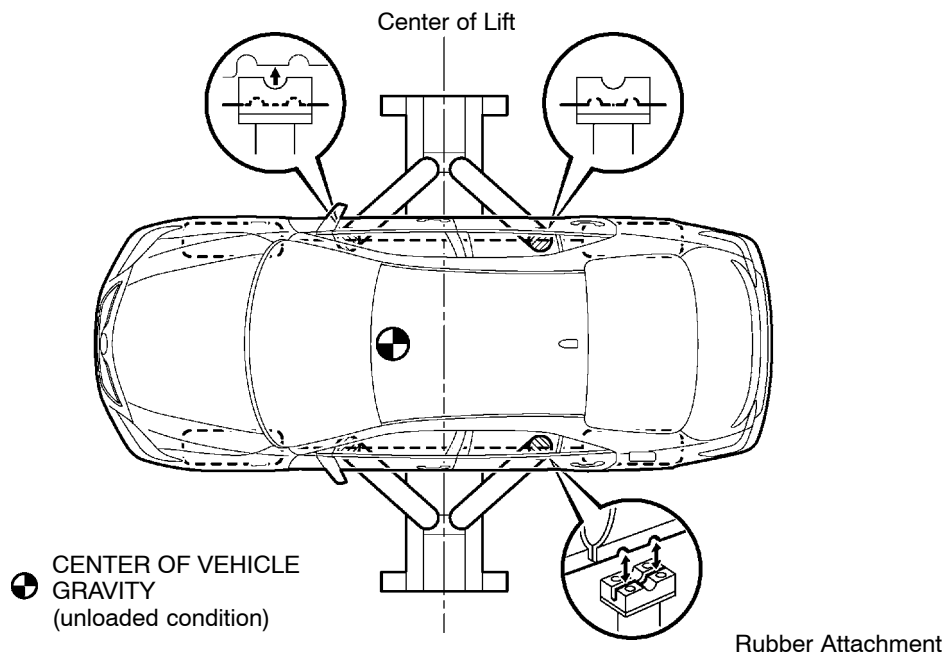

D100367

3. NOTICE FOR USING PLATE TYPE LIFT

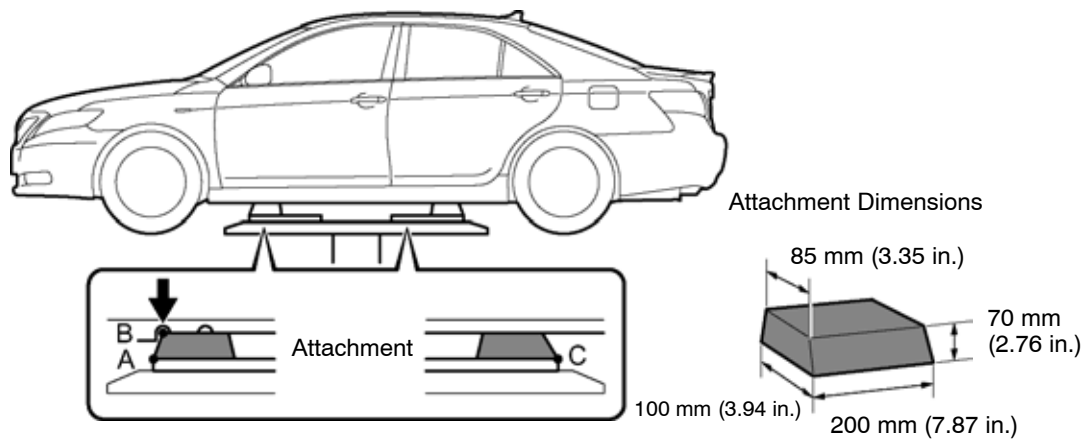
HINT:

Right and left set position
Place the vehicle over the center of the lift.

mm (in.)

HINT:

Front and left set position
Place the attachments at the ends of the rubber plate surface, under the vehicle lift pad (A and C in the illustration).
Raise the plate slightly and reposition the vehicle so the top of the attachment (B in the illustration) is aligned with the front side notch in the vehicle rocker flange.

F30268