


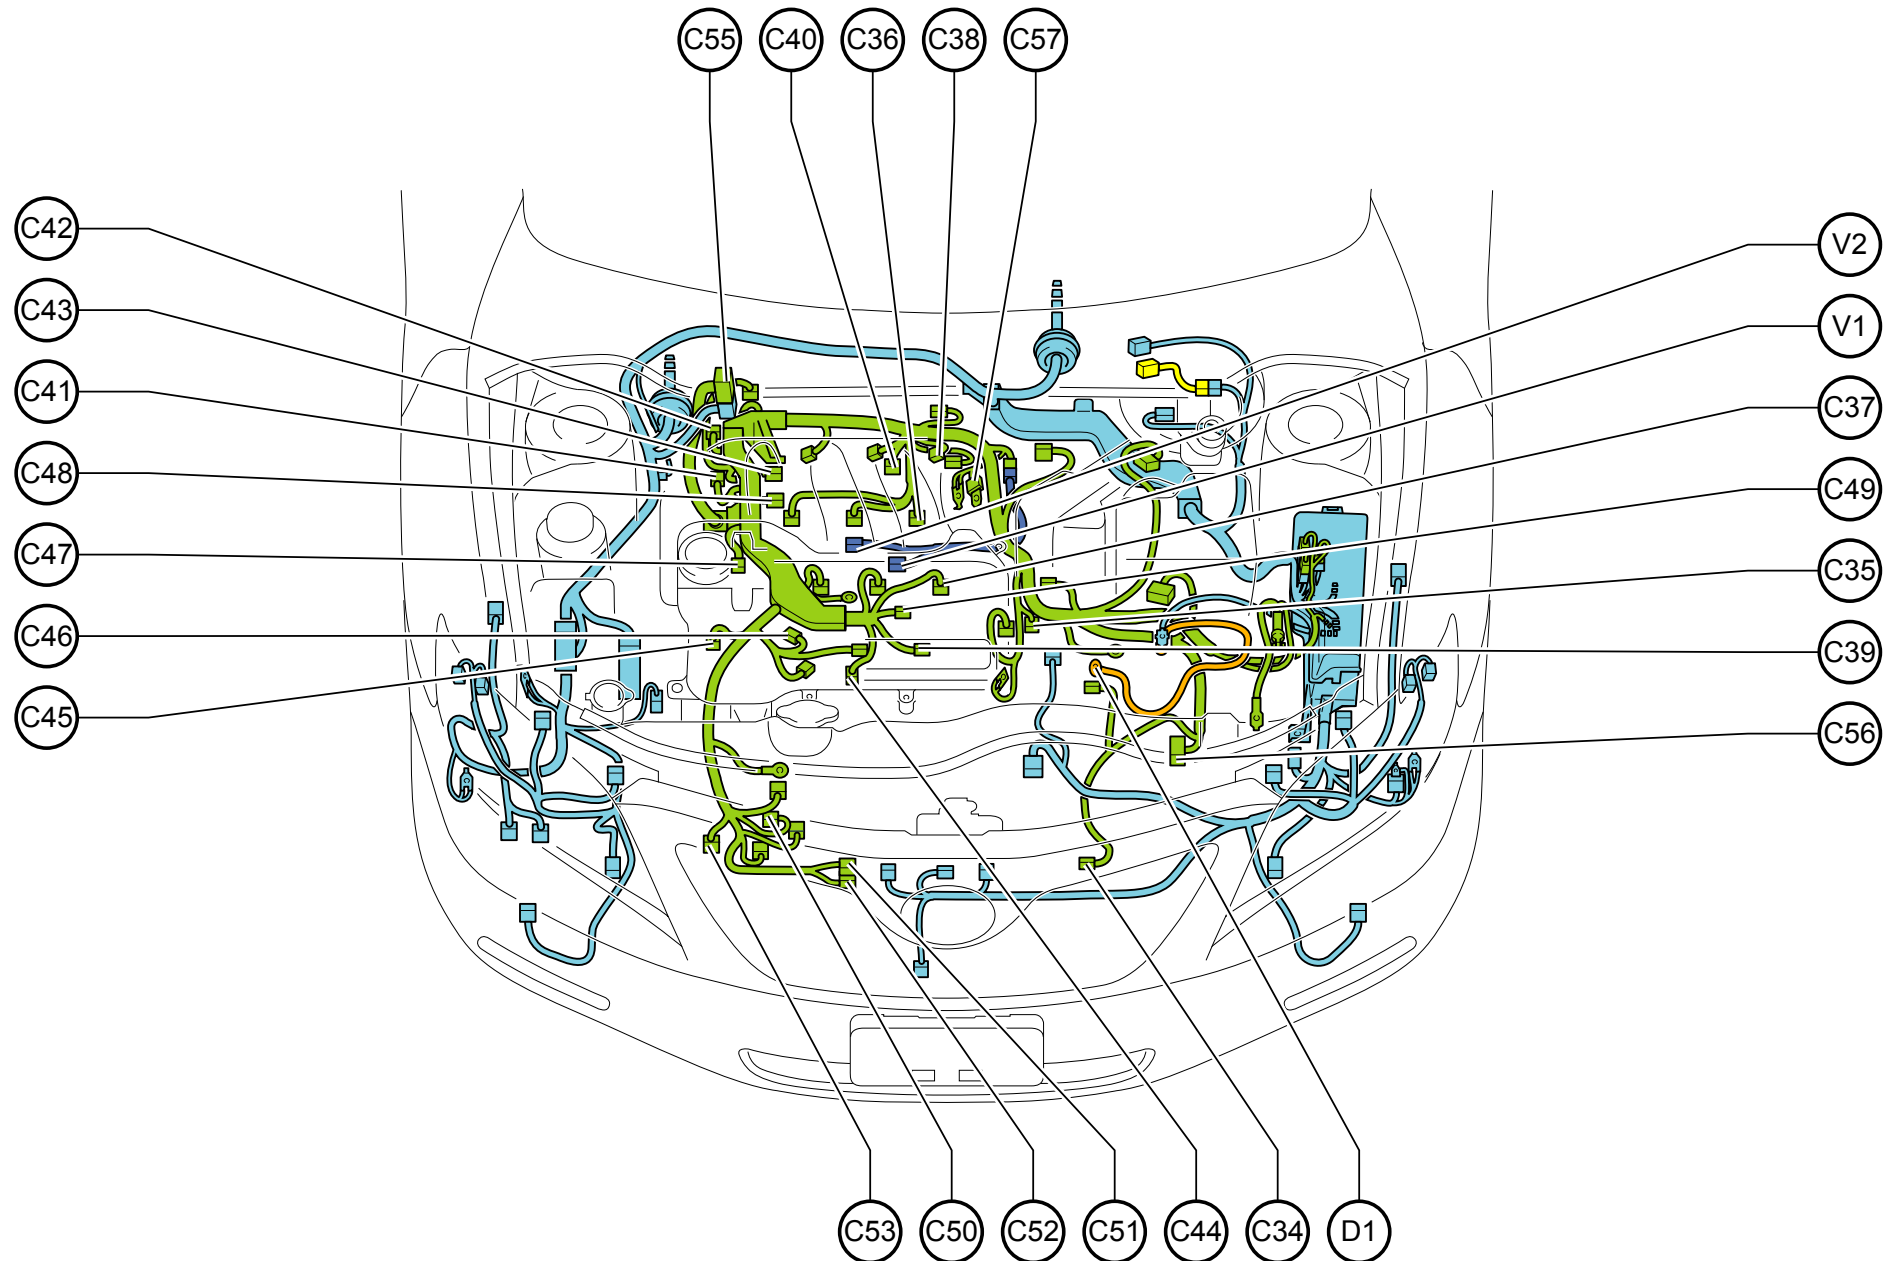

- C 34 VSV (ACM)
- C 35 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 36 Fuel Injector (No.5)
- C 37 Fuel Injector (No.6)
- C 38 Ignition Coil (No.5)
- C 39 Ignition Coil (No.6)
- C 40 VVT Sensor (Bank 1 Exhaust Side)
- C 41 VVT Sensor (Bank 1 Intake Side)
- C 42 Camshaft Timing Oil Control Valve (RH Exhaust Side)
- C 43 Camshaft Timing Oil Control Valve (RH Intake Side)
- C 44 VVT Sensor (Bank 2 Exhaust Side)
- C 45 VVT Sensor (Bank 2 Intake Side)
- C 46 Camshaft Timing Oil Control Valve (LH Exhaust Side)
- C 47 Camshaft Timing Oil Control Valve (LH Intake Side)
- C 48 VSV (ACIS)
- C 49 Noise Filter (Ignition LH)
- C 50 Crankshaft Position Sensor
- C 51 Heated Oxygen Sensor (Bank 2 Sensor 2)
- C 52 Heated Oxygen Sensor (Bank 1 Sensor 2)
- C 53 A/C Compressor
- C 55 Engine Control Module
- C 56 Transmission Control ECU
- C 57 Junction Connector

D 1 Starter

- V 1 Knock Control Sensor (Bank 2)
- V 2 Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment <2GR-FE>

