


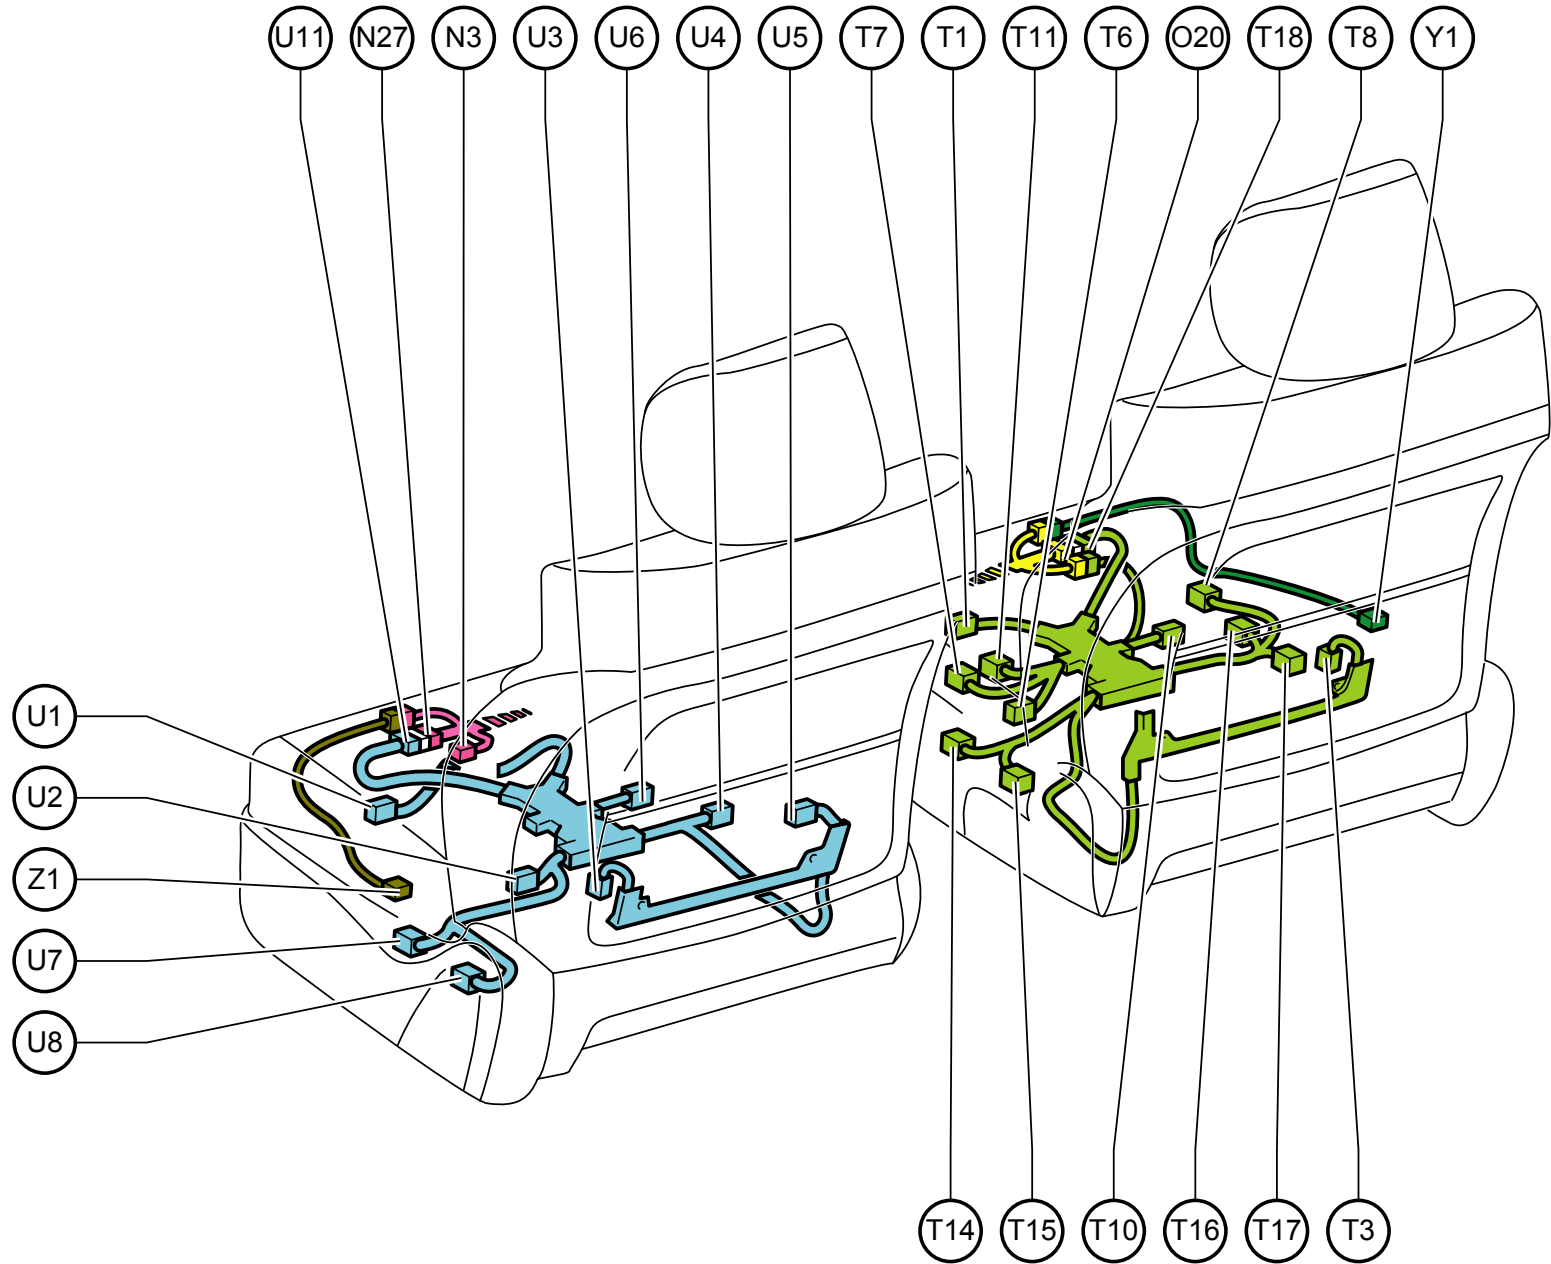

- N 3 Front Seat Inner Belt (Driver's Side)
- N 27 Junction Connector

- O 20 Junction Connector

- T 1 Power Seat Motor (Front Passenger's Seat Slide Control)
- T 3 Power Seat Motor (Front Passenger's Seat Reclining Control)
- T 6 Seat Heater (RH)
- T 7 Front Seat Inner Belt (Front Passenger's Side)
- T 8 Power Seat SW (Front Passenger's Seat)
- T 10 Occupant Classification ECU
- T 11 Occupant Classification ECU
- T 14 Occupant Classification Sensor (Front LH)
- T 15 Occupant Classification Sensor (Rear LH)
- T 16 Occupant Classification Sensor (Front RH)
- T 17 Occupant Classification Sensor (Rear RH)
- T 18 Junction Connector

- U 1 Power Seat Motor (Driver's Seat Slide Control)
- U 2 Power Seat Motor (Driver's Seat Front Vertical Control)
- U 3 Power Seat Motor (Driver's Seat Reclining Control)
- U 4 Power Seat Motor (Driver's Seat Lifter Control)
- U 5 Power Seat Motor (Driver's Seat Lumbar Support Control)
- U 6 Seat Heater (LH)
- U 7 Power Seat SW (Driver's Seat)
- U 8 Power Seat SW (Driver's Seat Lumbar Support Control)
- U 11 Junction Connector

- Y 1 Side Airbag Squib (RH)

- Z 1 Side Airbag Squib (LH)

Position of Parts in Seat <w/ Power Seat>

