

■ ILLUMINATED ENTRY SYSTEM


1. General

- The illuminated entry system of the '07 Camry controls interior light and ignition switch*¹/engine switch illumination*².
- The interior light is operated when the light switch is in the DOOR position.

*¹: Models without smart key system

*²: Models with smart key system

► System Diagram ◀

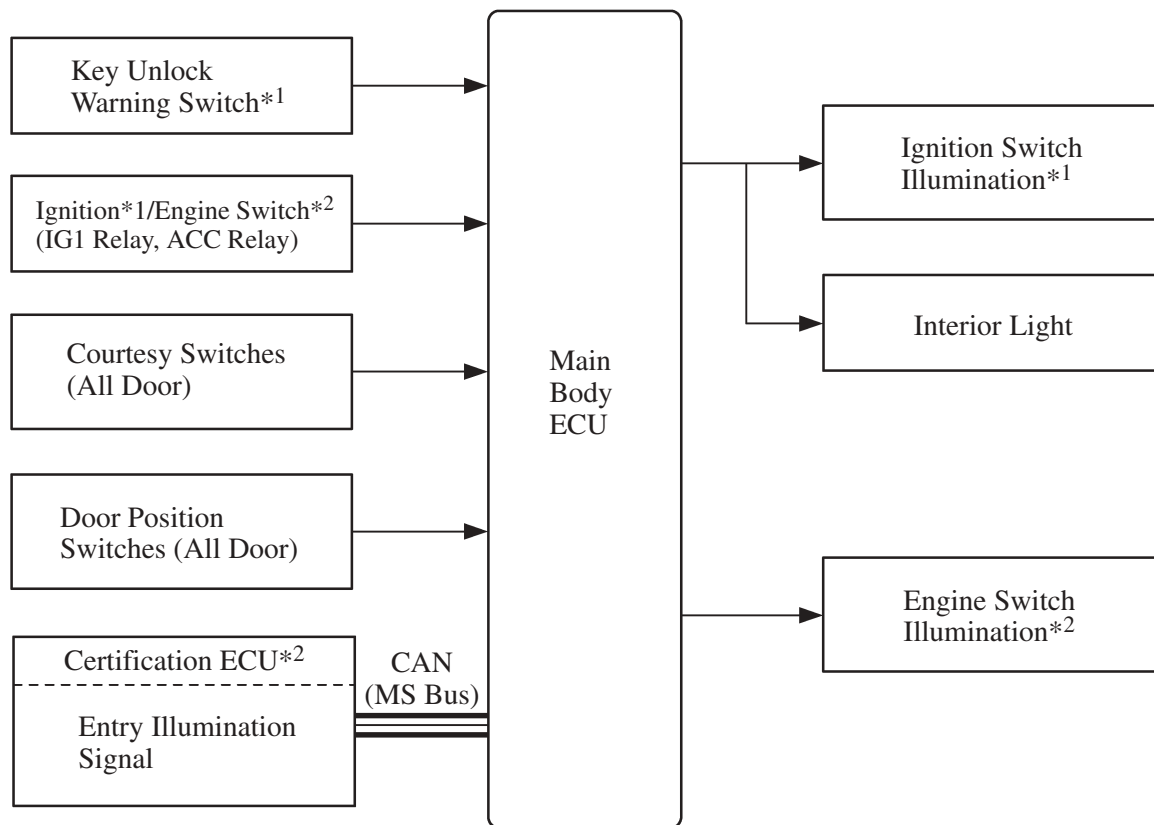


025BE09P

*¹: Models without smart key system

*²: Models with smart key system

2. Layout of Main Components

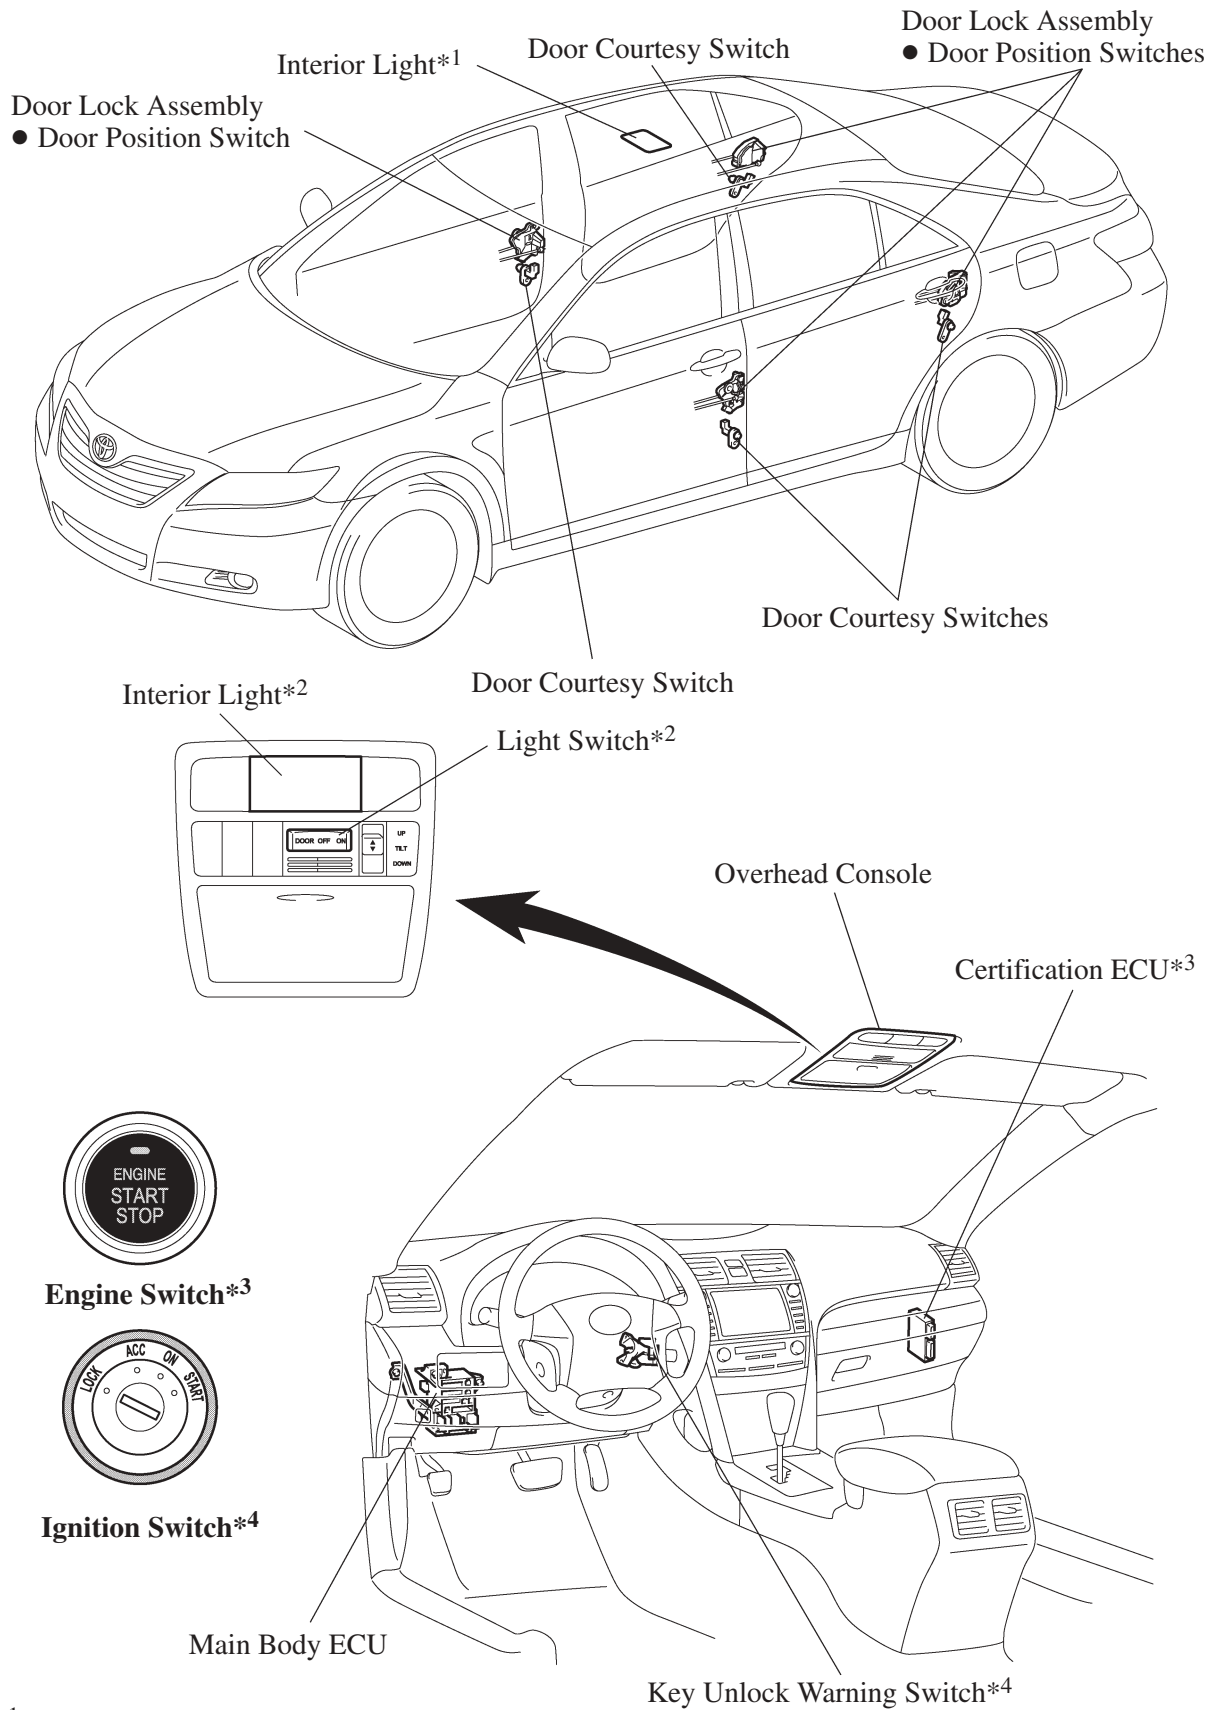

BE


- *1: Only for models without sliding roof system
- *2: Only for models with sliding roof system
- *3: Only for models with smart key system
- *4: Only for models without smart key system

3. Interior Light Control

- The interior light control (interior light and ignition switch illumination*¹/engine switch illumination*²) consists primarily of the fade-in/fade-out function and timer illumination function.
- The interior light control activates as described in the diagram below when one of items is in the respective state.
- This control is controlled by the main body ECU.

*¹: Models without smart key system

*²: Models with smart key system

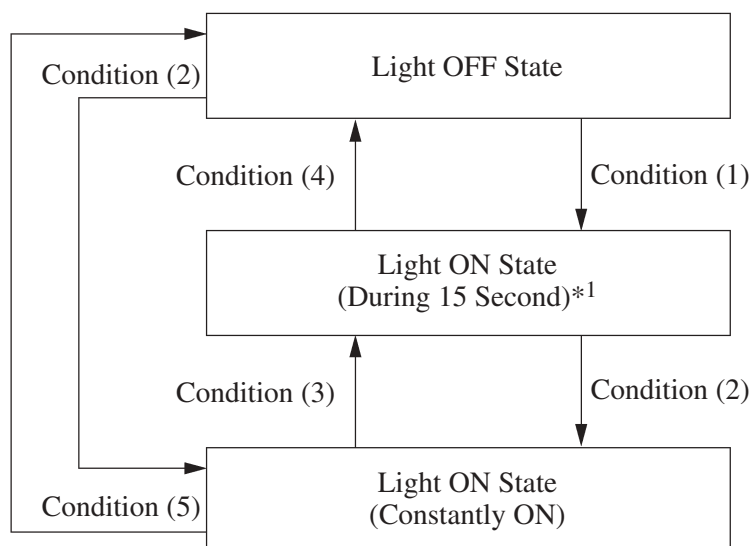

241BE32

Condition	Item
Condition (1)	• With power source*² OFF and all doors closed, any door is unlocked. • With all doors closed, power source*² is changed from ACC to OFF. • With power source OFF and all doors closed, key enters any actuation area around the doors. (Only for models with smart key system)
Condition (2)	• Any door is open.
Condition (3)	• With power source*² OFF, all doors are closed.
Condition (4)	• Power source*² is ACC or ON. • More than 15 seconds have elapsed since the Light ON State (15 second duration)*¹. • With power source*² OFF and all doors closed, all doors are locked.
Condition (5)	• With power source*² ACC or ON, all doors are closed. • With power source*² OFF and all doors closed, all doors are locked.

*¹: The function setting can be changed using the customized body electronics system. For details, refer to Customized Body Electronics System section on [page BE-13](#).

*²: The power source condition can be changed by operating the engine switch on models with the smart key system, and the ignition switch on models without the smart key system.

4. Battery Saving Control

When the following two conditions have been met, battery saving control turns off the lights illuminated by the illuminated entry controls. Battery saving control is controlled by the main body ECU.

- The key is not in the actuation area (models with smart key system), or the ignition key is not in the ignition key cylinder (models without smart key system).
- There is no change in the condition of the doors for 20 minutes.