


■ SYSTEM OPERATION

The states of the theft deterrent system are as follows:

State	Description	Theft detection
Disarmed State	The theft deterrent system is not set by the user.	—
Armed Preparation State	The standby state before the theft deterrent system activates when the system has already set.	—
Armed State	The theft deterrent system is being activated. (Theft can be detected.)	○
Alarm State	Theft has been detected and the warning operation activates.	○

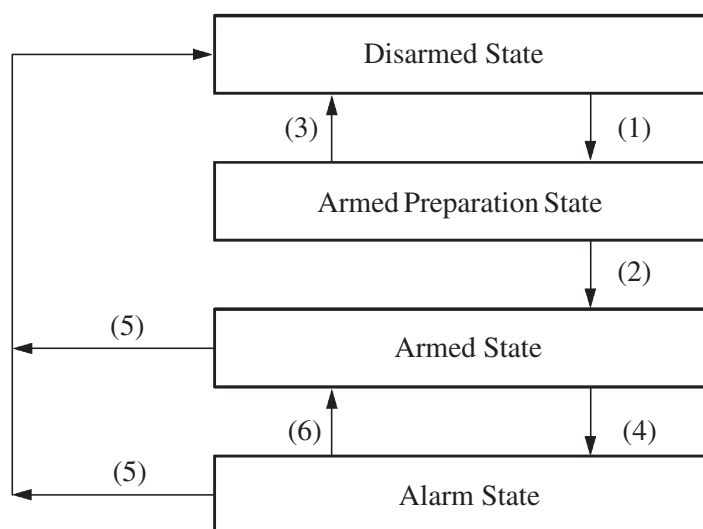

187BE40

The theft deterrent system activates as described in the diagram below when one of items in the chart occurs in order to cause the system to enter the respective state.

Condition	Item
(1)	- There is no ignition key in the ignition key cylinder.*¹ - Key is in the actuation area.*² - All doors, engine hood and trunk lid are closed. - All doors are locked using the transmitter lock button, the smart key system, or mechanical key.
(2)	The system state is switched when the doors, engine hood, and trunk lid are all closed and locked, and 30 seconds have elapsed.
(3)	The system state is switched when one of the following conditions is met. - Any door, engine hood, or trunk lid is opened. - Any door is unlocked. - The ignition key is inserted in the ignition key cylinder.*¹ - The engine switch is pushed.*² - A terminal is disconnected from the battery and reconnected.

*¹: Models without smart key system

*²: Models with smart key system

(Continued)

Condition	Item
(4)	The system state is switched when one of the following conditions is met. ● With all doors closed, any door is opened. ● With all doors locked, any door is unlocked by a method other than the mechanical key or transmitter. ● The trunk lid and engine hood are opened by a method other than the mechanical key or transmitter. ● A terminal is disconnected from the battery and reconnected.
(5)	The system state is switched when one of the following conditions is met. ● Any door is unlocked with the mechanical key or transmitter. ● The trunk lid is opened with the mechanical key or transmitter. ● The power source* is changed to IG-ON.
(6)	After 60 seconds, the alarm stops sounding and the system returns to the armed state.

*: Power source conditions can be changed by pressing the engine switch on models with the smart key system and by operating the ignition switch on models without the smart key system.