


GARAGE DOOR OPENER

DESCRIPTION

The garage door opener system is used on the XLE grade model as standard equipment and on the other grade model as optional equipment.

This system enables the garage door to be opened or closed from inside the vehicle by operating the switch. This system provides the features listed below.

- Up to three types of transmitter codes can be registered in the garage door opener.
- The garage door opener switch is provided in the overhead console where it is easily accessible.
- An indicator light is provided to enable the operator to verify the operation mode of the garage door opener.
- A rolling code function is used, which changes the transmitter code each time the garage door opener switch is pressed.

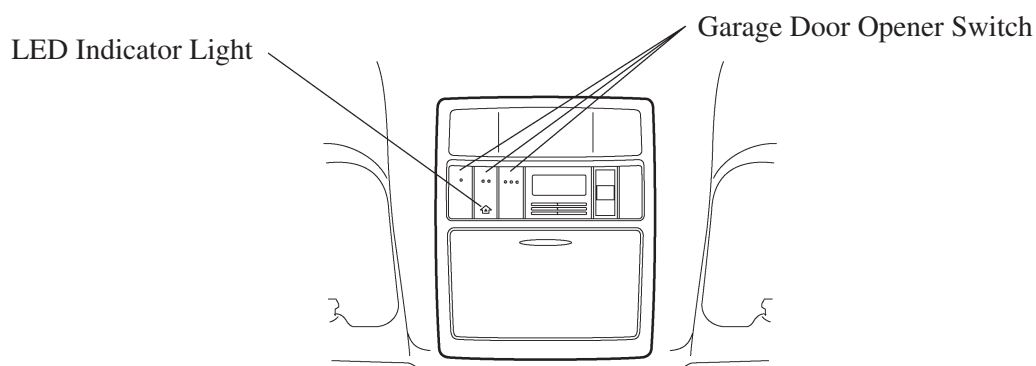

025BE184P

FUNCTION

The following table shows the garage door opener functions and the indicator light operation in each of the modes.

Function	Outline	Indicator Light
Transmission Mode	While the switch is being pressed, the garage door opener transmits the code that was previously registered. Even if the button is pressed continuously, the transmission stops after 20 seconds.	Flash → On (Rolling Code) ON (Except Rolling Code)
Learning Mode	When the button is pressed continuously for 20 seconds, the mode changes to learning mode in which a transmitter code can be registered. Or an existing code can be overwritten. If no codes are registered within 90 seconds of entering learning mode, the mode changes to low power mode.	Slow flashing (during learning mode) Quick flashing (registration completed)
All Delete Mode	When the 2 outside buttons are pressed simultaneously for 20 seconds, all the transmitter codes that are registered in the button are cleared. When the buttons are released within 10 seconds of clearing the codes, the mode changes to learning mode. When the buttons are pressed for longer than 10 seconds after clearing the codes, all the buttons will be registered with a code for operation verification.	Quick flashing (code clearing completed)
Low Power Mode	If the button remains pressed for longer than 100 seconds, such as in the case in which the pressed button gets caught, the mode changes to low power mode to reduce power consumption.	OFF