


■ CLUTCH START SYSTEM

1. General


This system prevents the starter from cranking unless the clutch pedal is depressed. This prevents the engine from being started in gear, and ensures safety by preventing the vehicle from moving unintentionally.

2. Wiring Diagram

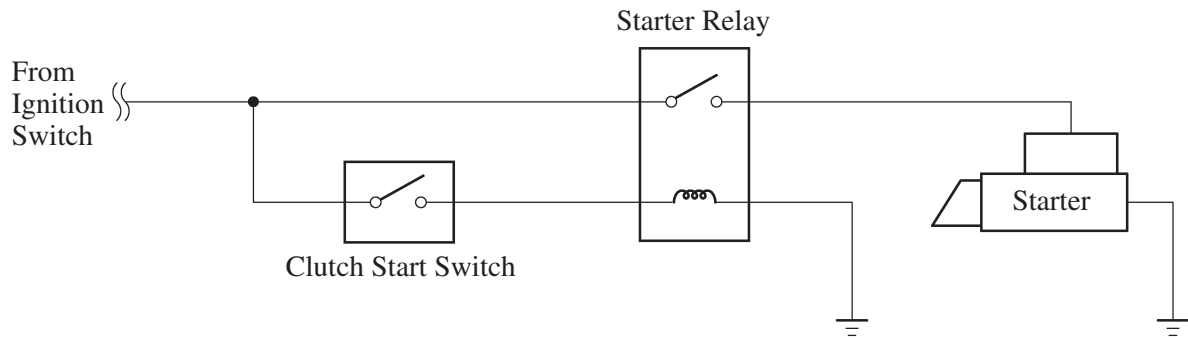

025CH51TE

3. Layout of Main Components

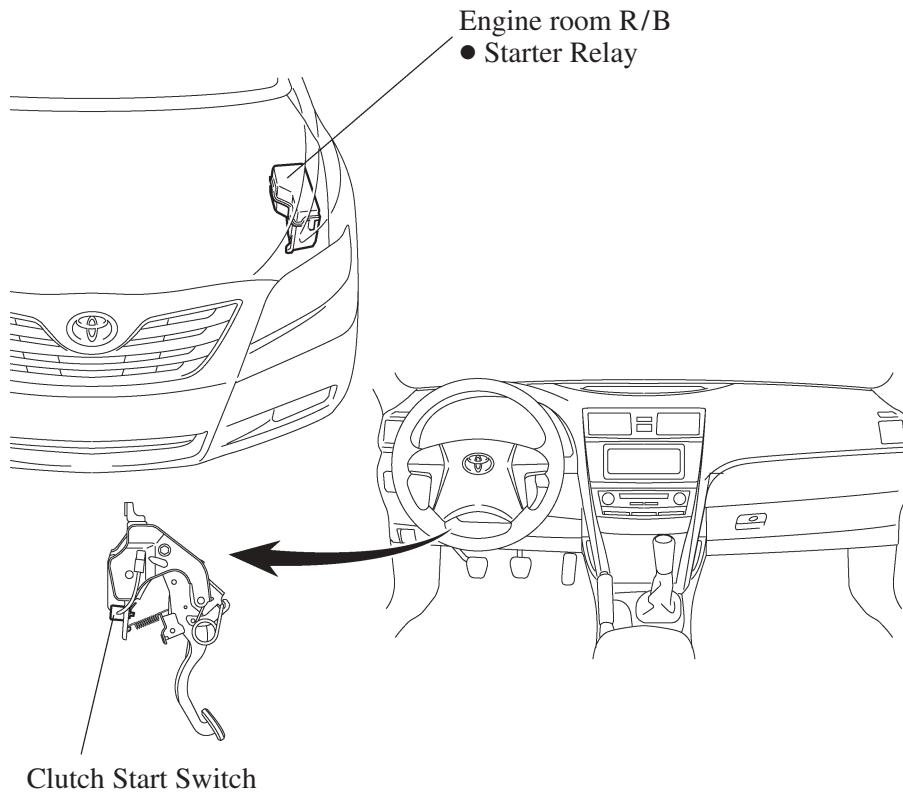

025CH52Y