


TIRE PRESSURE WARNING SYSTEM

■ DESCRIPTION

- A direct-sensing type tire pressure warning system is used on U.S.A. model.
- If the vehicle continues to be driven with 1 or more of the 5 tires (which includes the standard type spare tire*) inflated to a low air pressure that could cause problems during driving, this system will illuminate the tire pressure warning light to inform the driver of the low air pressure.
- Furthermore, this system directly senses the air pressure of each tire through tire pressure warning system valve & transmitter that are attached to each wheel.
- After tire replacement, firstly register tire pressure warning system valve & transmitter IDs into the tire pressure warning system ECU, and then store the appropriate tire pressure in the ECU using the tire pressure warning system reset switch.

*: Optional Equipment

► System Diagram ◀

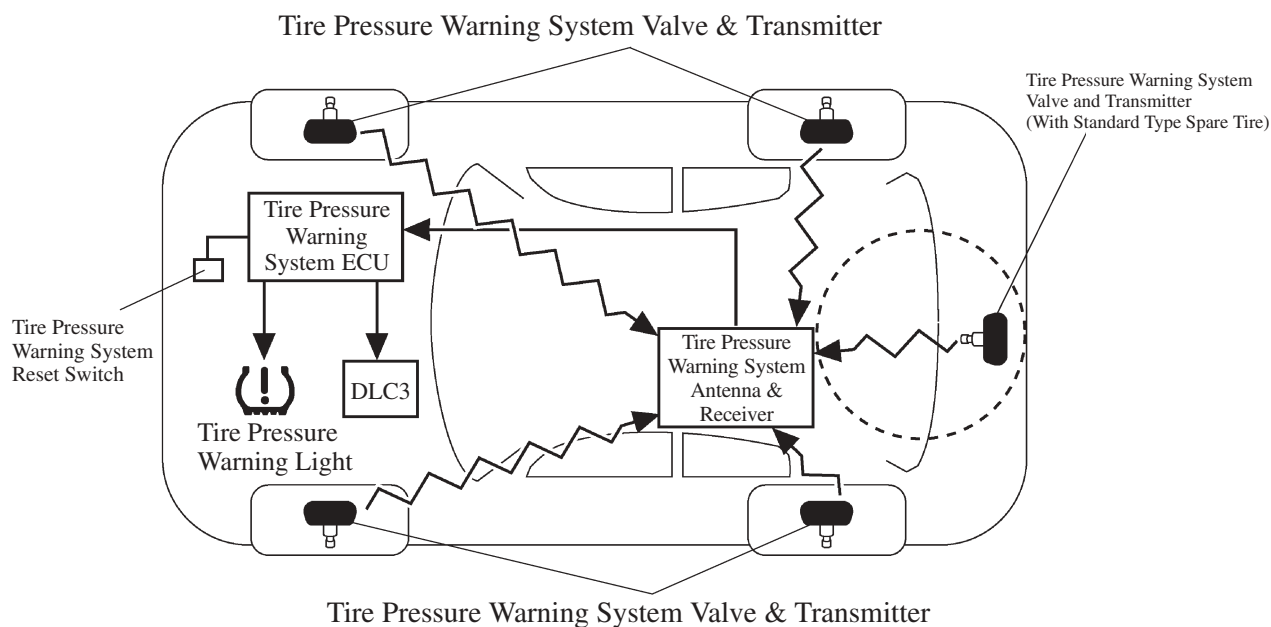

275TU34