


FRONT SIDE MEMBER (CUT-P)

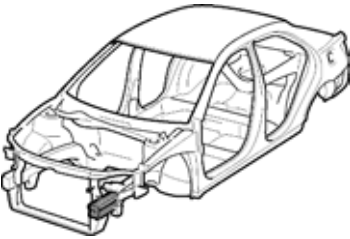

F25712A

With the radiator support removed.


Symbol meaning

  : Remove Weld Points

 : Cut and Join Location

F25712B

REMOVAL

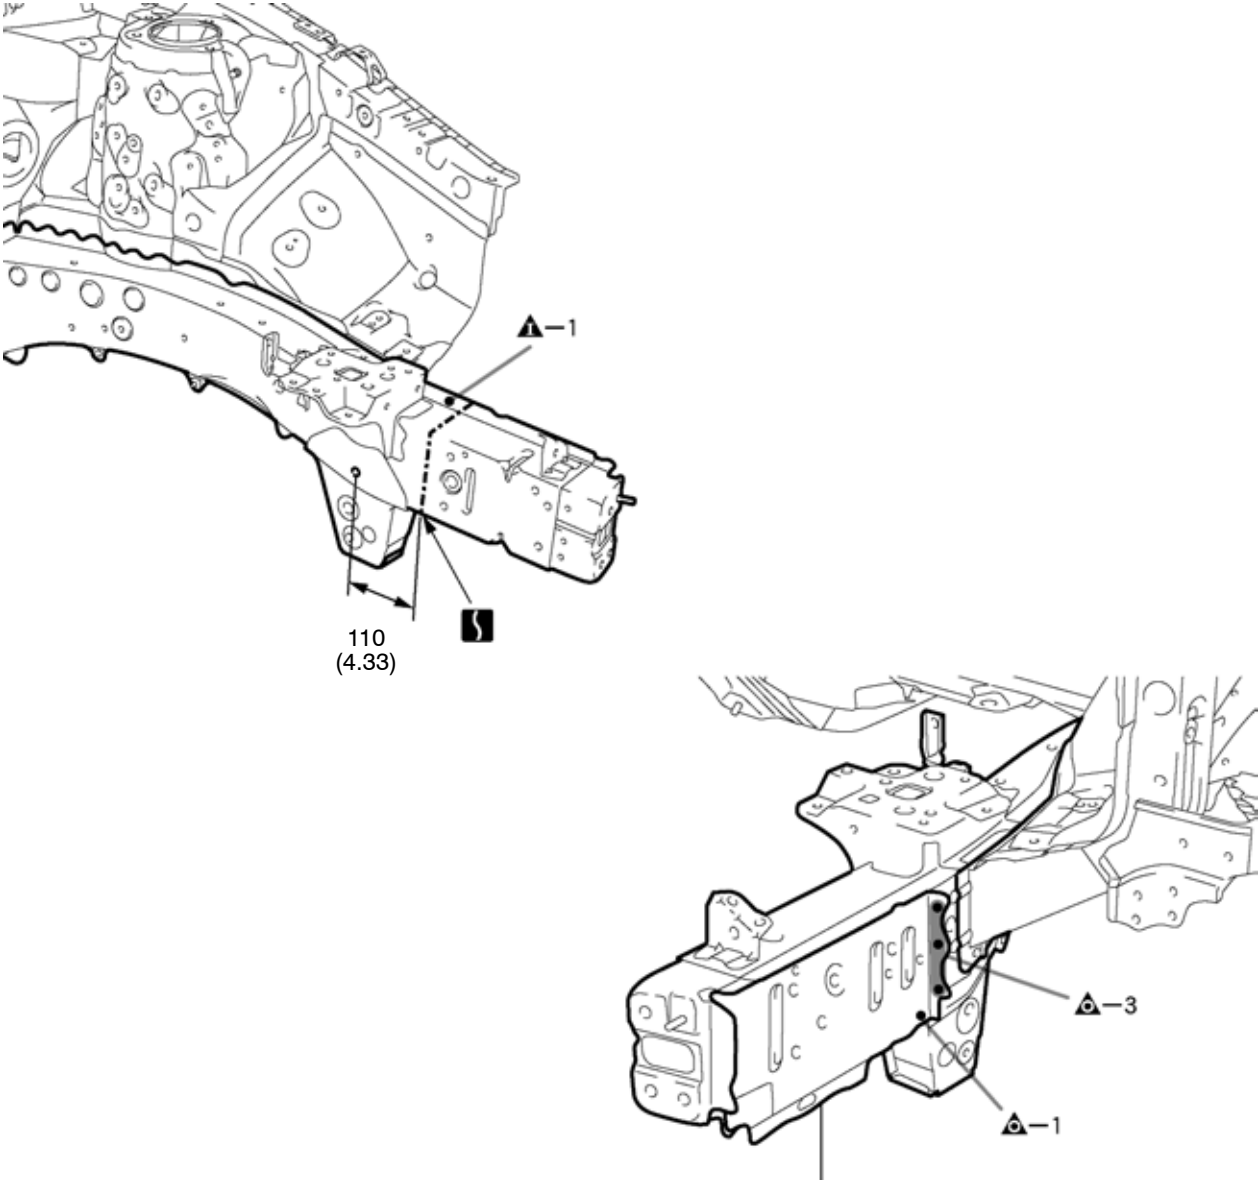

110
(4.33)

Front Side Member Extension

mm (in.)

F25712

REMOVAL POINT

- 1 Remove the front side member extension at the same time.



Symbol meaning

□ I : MIG Plug Weld

□ : Butt Weld

F25713B

INSTALLATION

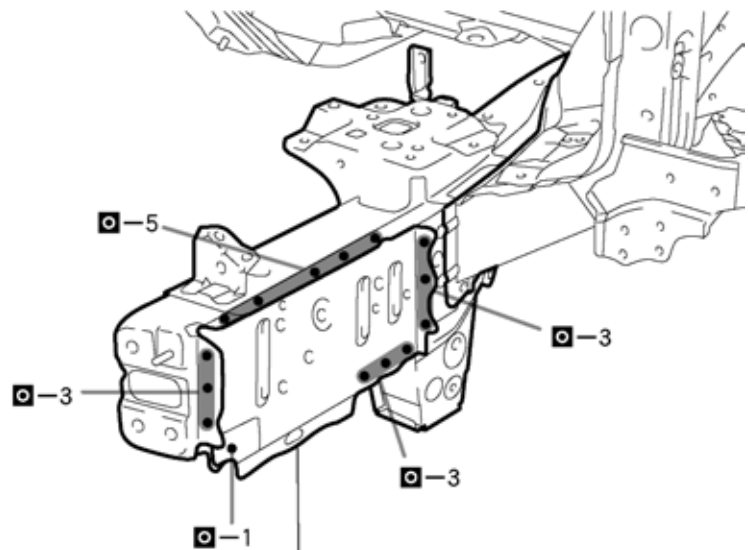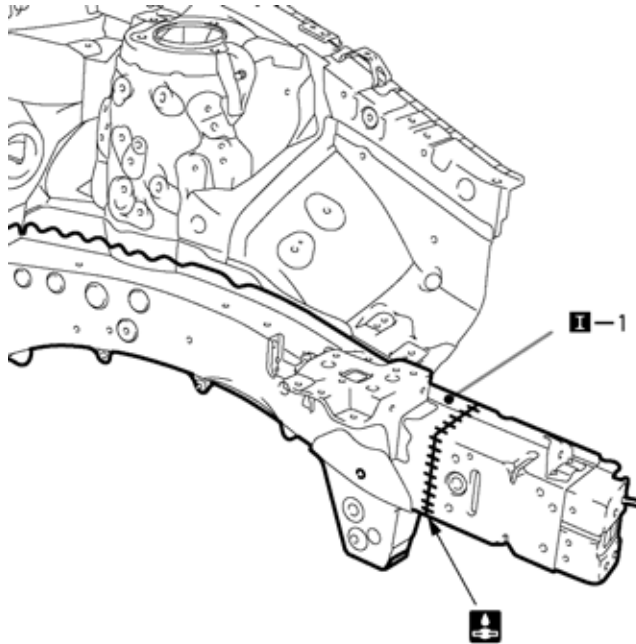

Front Side Member Extension

F25713

INSTALLATION POINT

- 1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 2 After welding, apply undercoating to the corresponding parts. (See the paint-coating)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.