


ROCKER OUTER EXTENSION (ASSY): TMC made

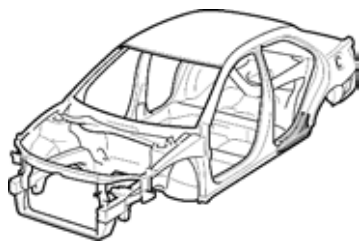


F25731A

Symbol meaning

△ : Remove Weld Points S : Cut and Join Location ⚡ : Cut Location for Supply Parts

F25731B

REMOVAL

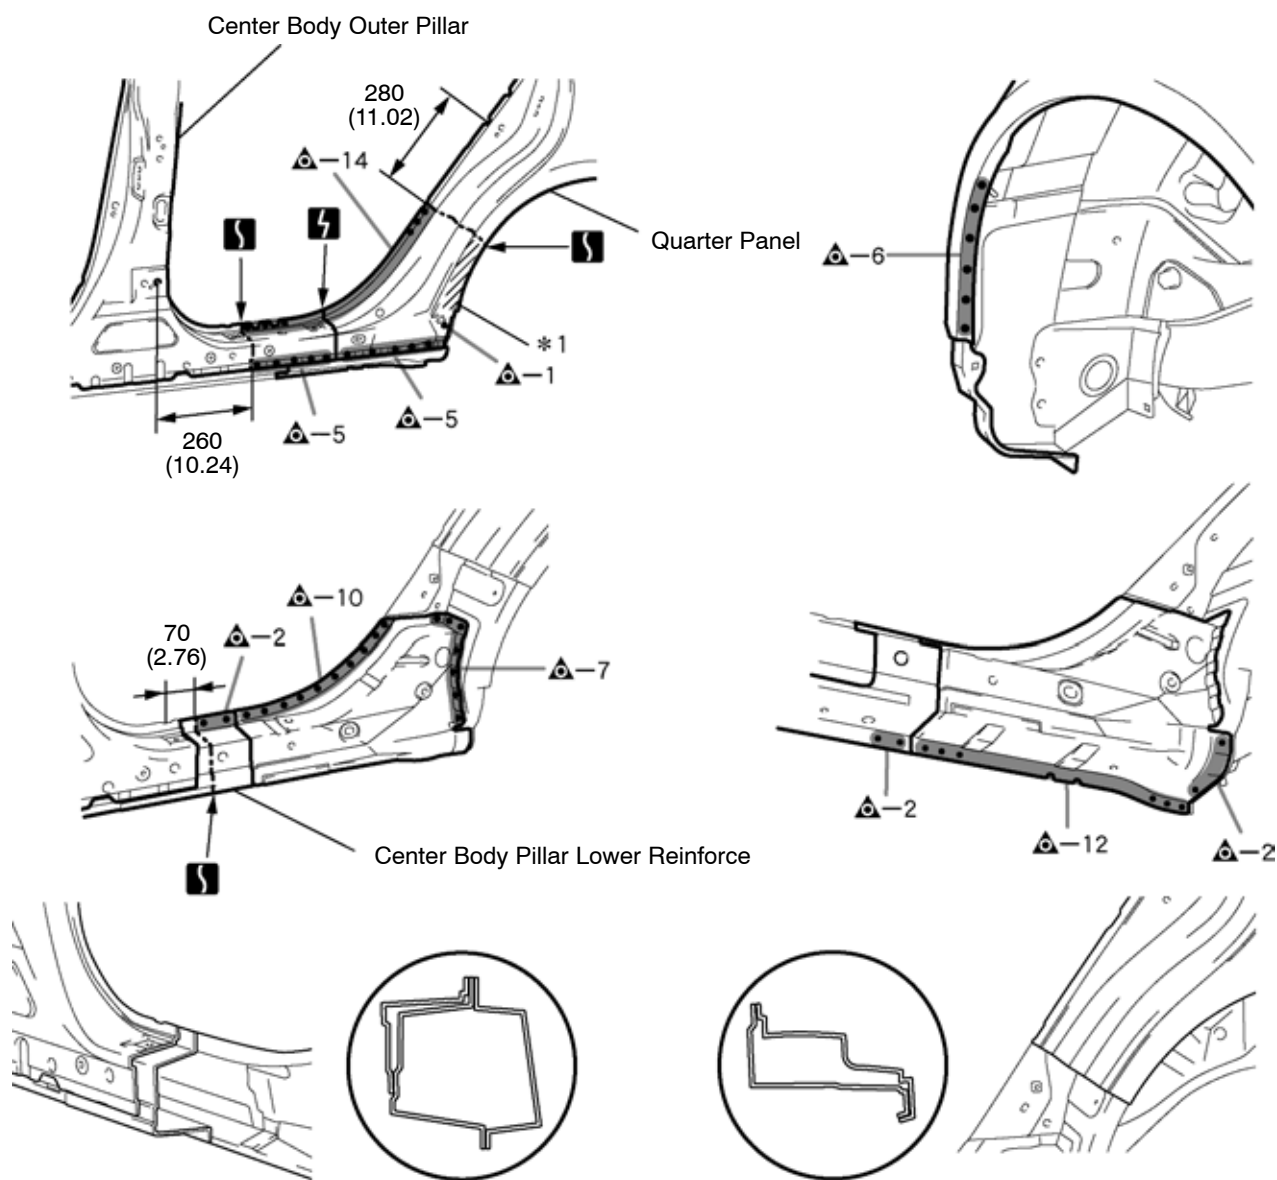

mm (in.)

F25731

REMOVAL POINT


- 1 *1 in illustration above indicates where the adhesive is.
- 2 After removing the center body outer pillar and quarter panel, remove the rocker outer extension and center body pillar lower reinforce.

Symbol meaning

◻ : MIG Plug Weld ◻ : Butt Weld ◻ : Body Sealer

F25732B

INSTALLATION

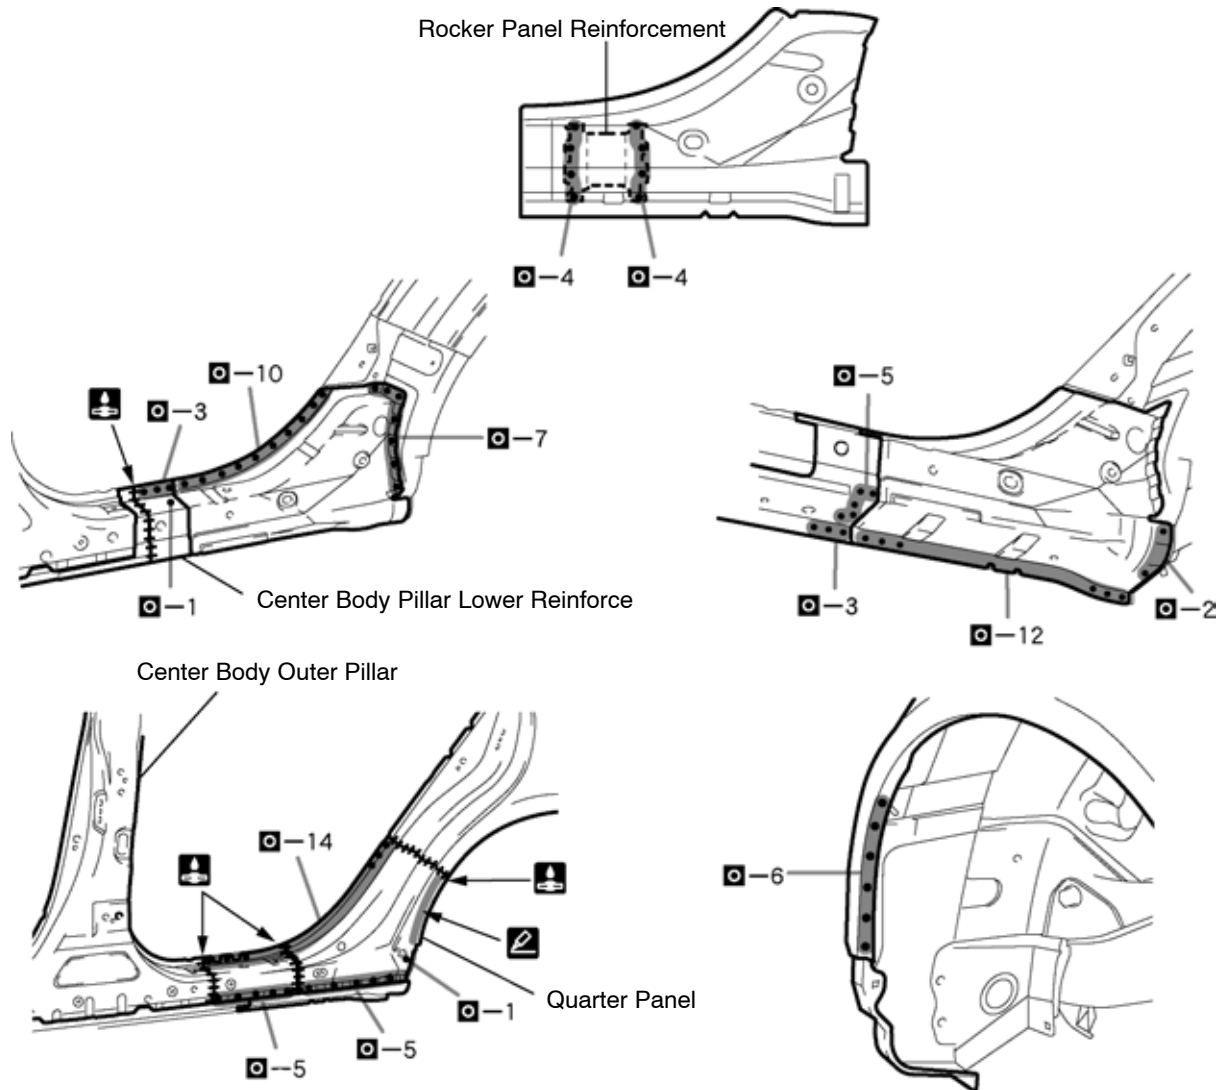

F25732

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 Before temporarily installing the new parts, weld the rocker panel reinforcement and rocker outer extension with the standard number of welding points.
- 4 Before installing a new part, apply body sealer.

HINT:

 - 1) Apply sealer in an even, continuous bead.
- 5 After welding the center body pillar lower reinforce and rocker outer extension to the vehicle side, install the center body outer pillar and quarter panel.
- 6 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 7 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.