


QUARTER WHEEL HOUSING OUTER PANEL (ASSY): TMMK made

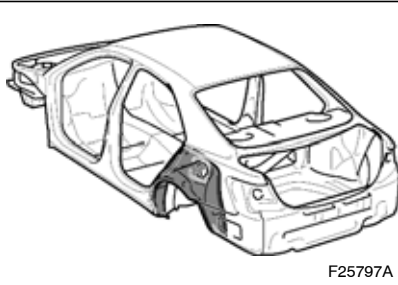

With the quarter panel removed.

Symbol meaning

REMOVAL

△ △ △ : Remove Weld Points

INSTALLATION ○ M I : MIG Plug Weld

⊖ : Cut with disc sander, etc.



⌋ : Cut and Join Location

⌋ : Tack Weld ⌋ : Butt Weld

F25797B

REMOVAL-INSTALLATION

[LH]

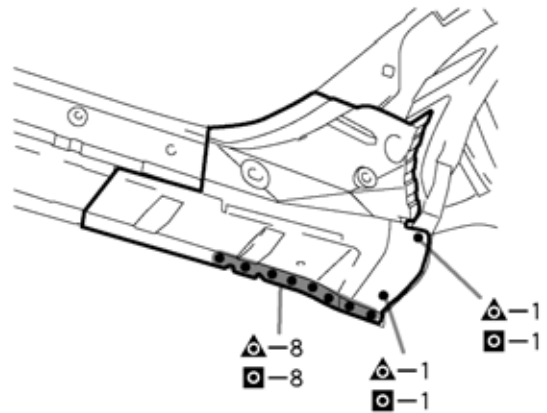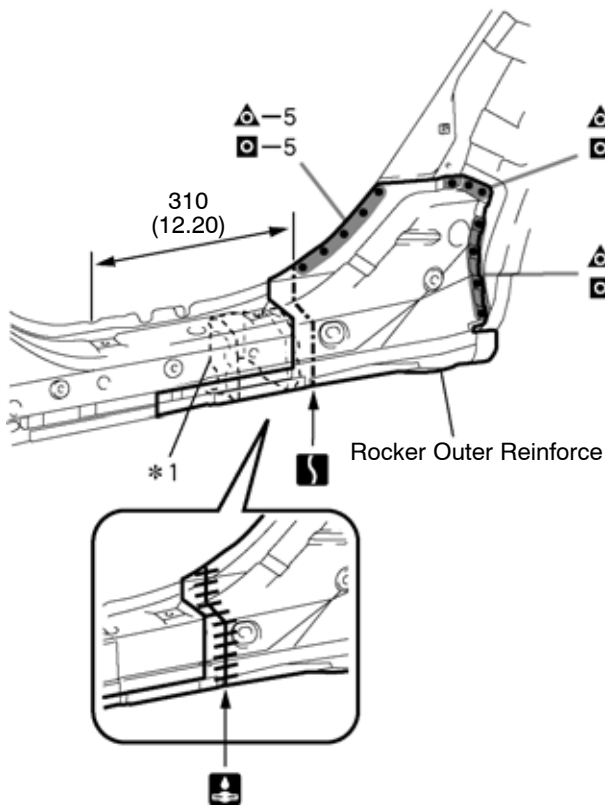

mm (in.)

F25797

REMOVAL POINT

- 1 *1: Take care not to damage the internal reinforcement.
- 2 After removing the rocker outer reinforce, remove the quarter wheel housing outer panel.

INSTALLATION POINT

- 1 After welding the quarter wheel housing outer panel to the vehicle side, install the rocker outer reinforce.

Symbol meaning

REMOVAL

△ △ △ : Remove Weld Points

INSTALLATION

○ M I : MIG Plug Weld


⊙ : Cut with disc sander, etc.

⌋ : Cut and Join Location

⌋ : Tack Weld ⌋ : Butt Weld

F25797B

[LH]

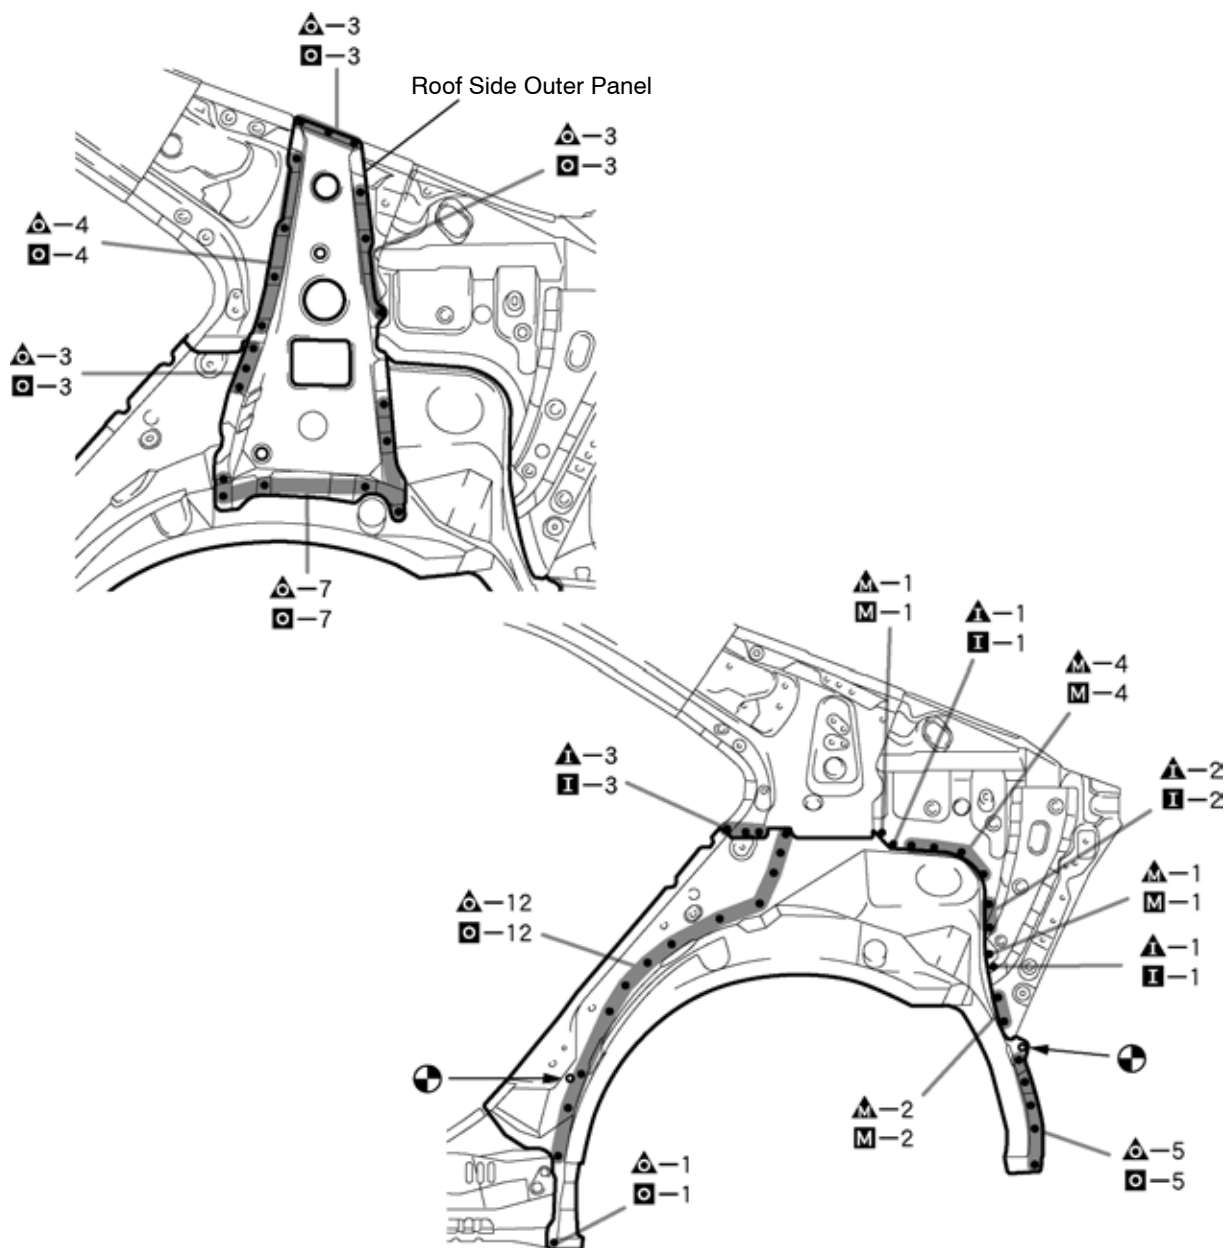




F25798

REMOVAL POINT

- 1 After removing the roof side outer panel, remove the quarter wheel housing outer panel.

INSTALLATION POINT

- 1 After welding the quarter wheel housing outer panel to the vehicle side, install the roof side outer panel.

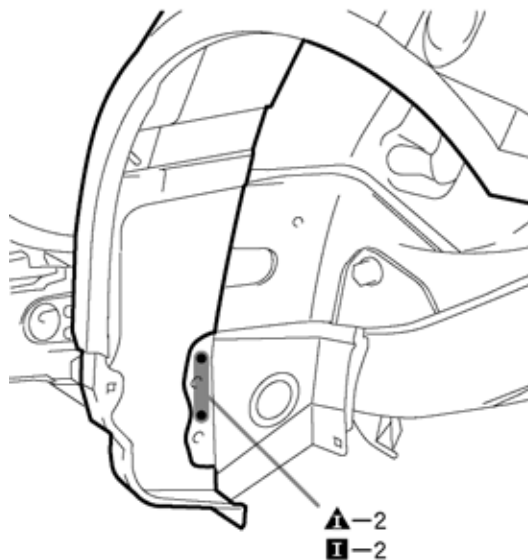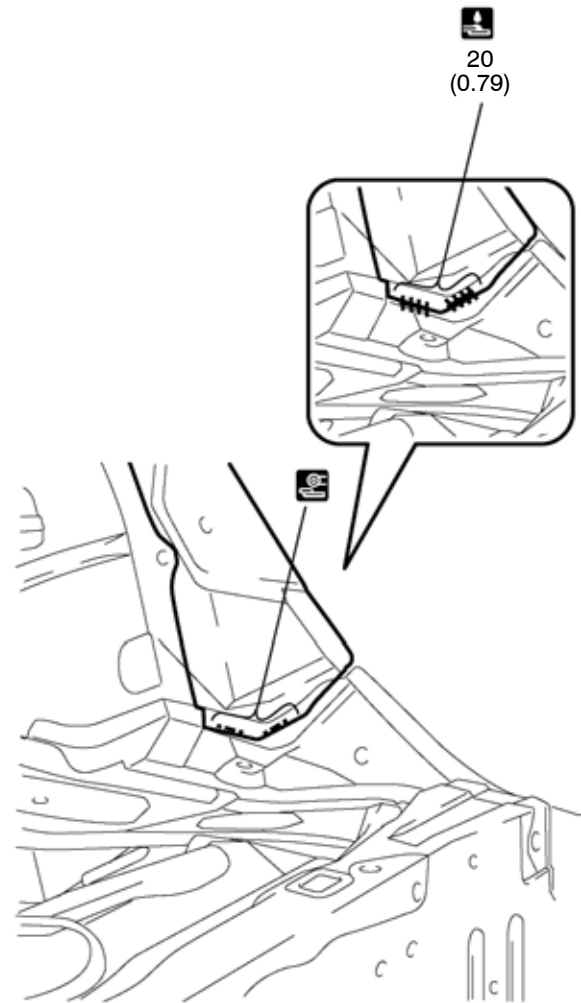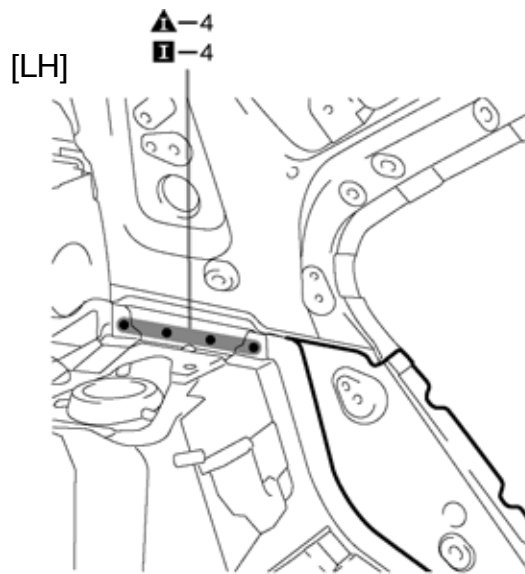

mm (in.)

F25799

INSTALLATION POINT

- 1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

Symbol meaning

REMOVAL

△ △ △ : Remove Weld Points

INSTALLATION

○ M I : MIG Plug Weld

⊖ : Cut with disc sander, etc.


⌋ : Cut and Join Location

⌚ : Tack Weld

⌚ : Butt Weld

F25797B

[RH]

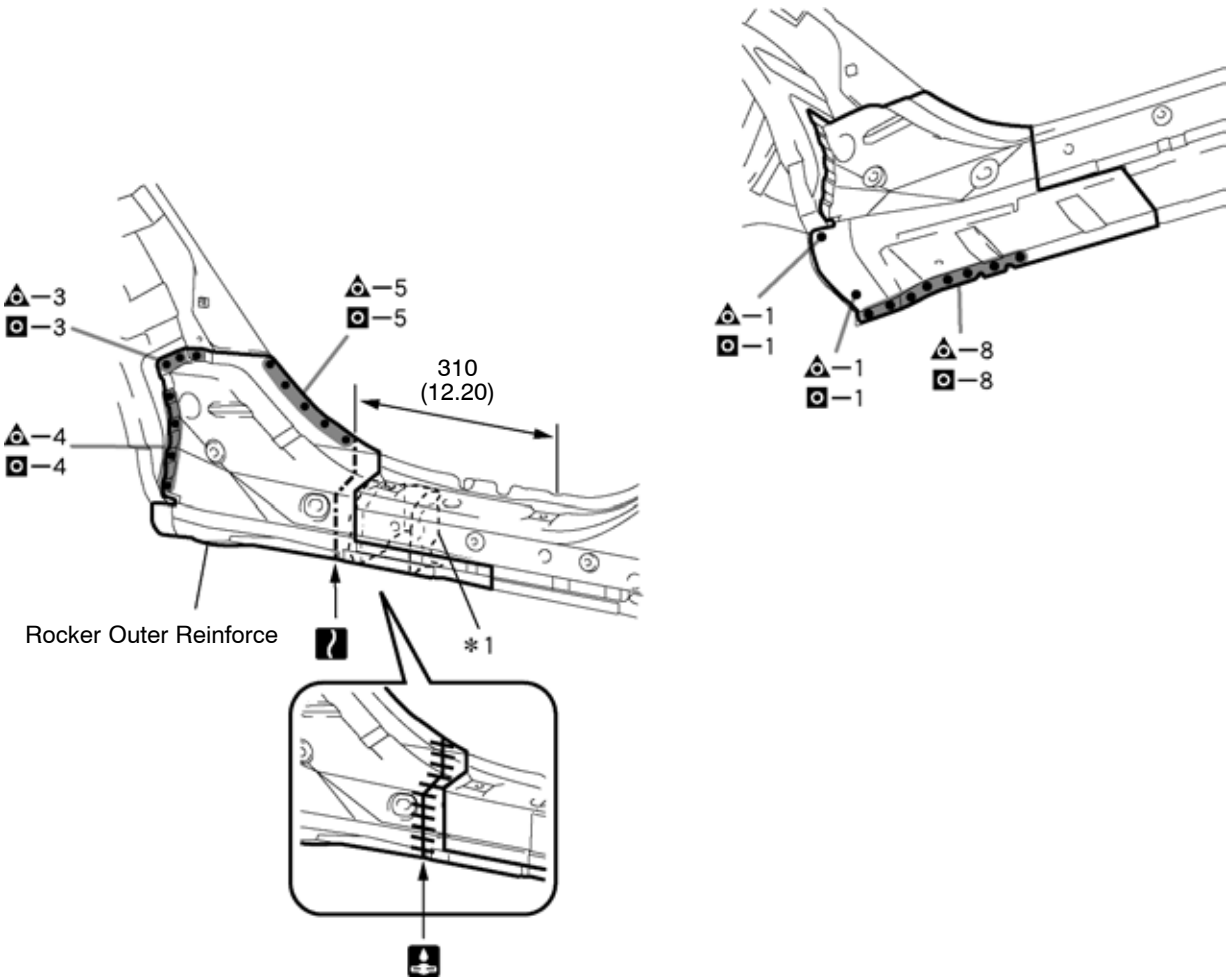

mm (in.)

F25800


REMOVAL POINT

- *1: Take care not to damage the internal reinforcement.
- After removing the rocker outer reinforce, remove the quarter wheel housing outer panel.

INSTALLATION POINT

- After welding the quarter wheel housing outer panel to the vehicle side, install the rocker outer reinforce.

[RH]

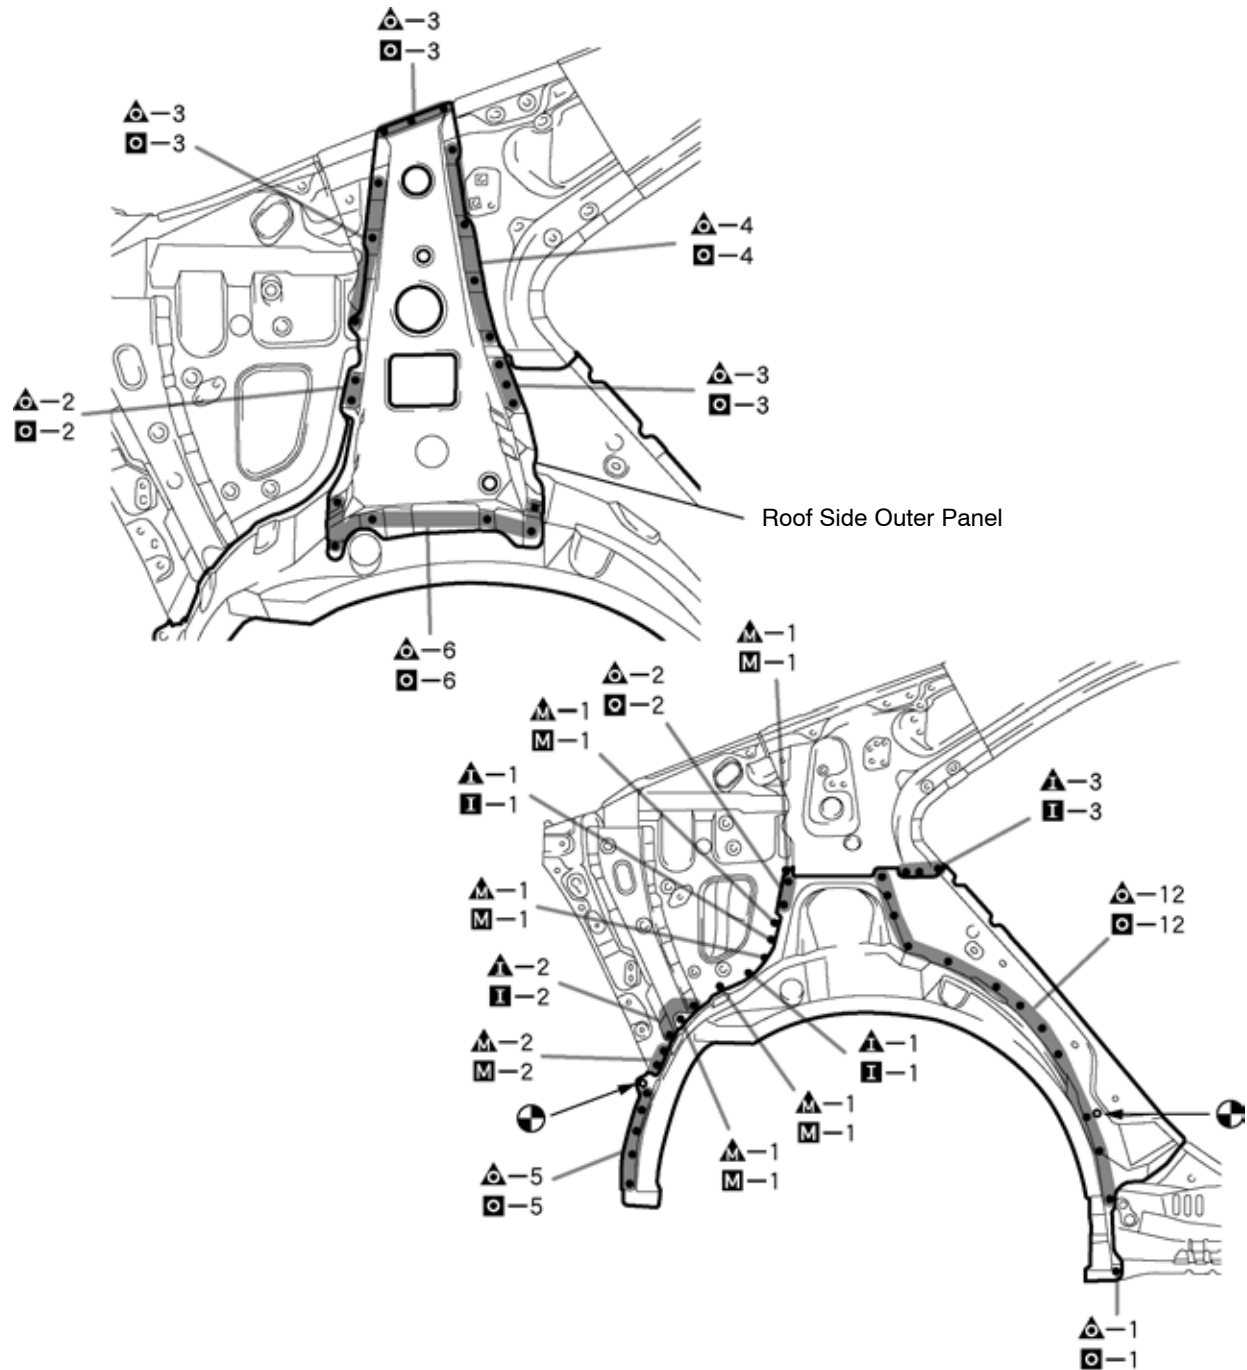

F25801

REMOVAL POINT

- 1 After removing the roof side outer panel, remove the quarter wheel housing outer panel.

INSTALLATION POINT

- 1 After welding the quarter wheel housing outer panel to the vehicle side, install the roof side outer panel.

Symbol meaning

REMOVAL

▲ ▲ ▲ : Remove Weld Points

INSTALLATION

○ M I : MIG Plug Weld





⊙ : Cut with disc sander, etc.

⌋ : Cut and Join Location

⌋ : Tack Weld ⌋ : Butt Weld

F25797B

[RH]

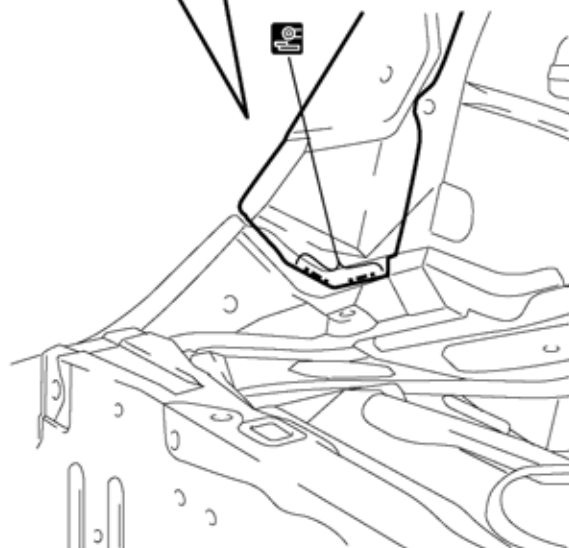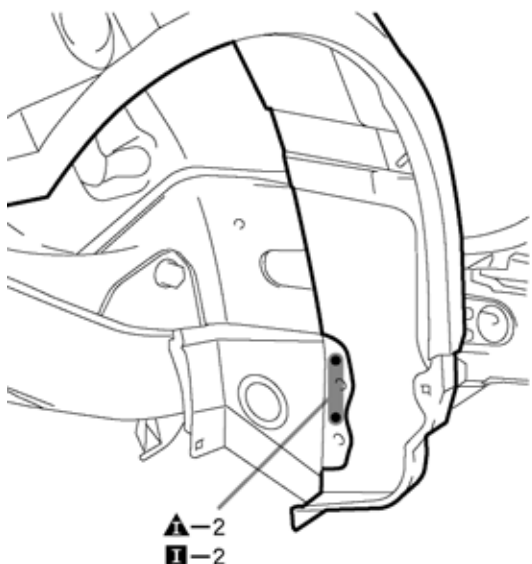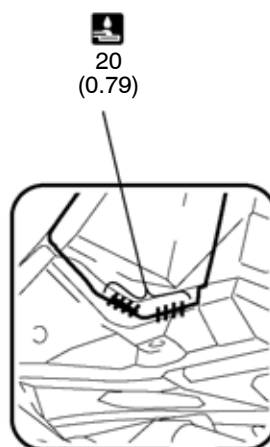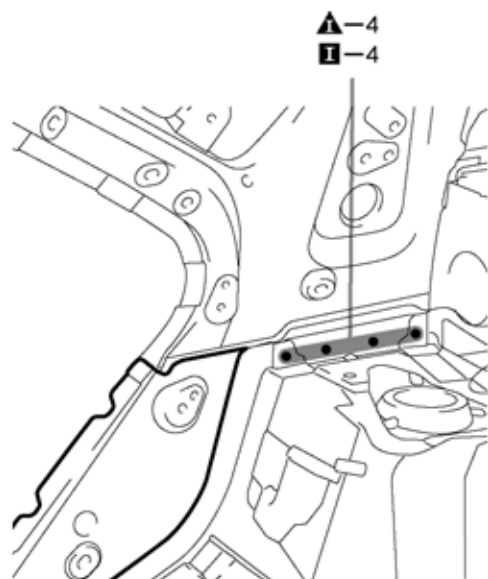

mm (in.)

F25802

INSTALLATION POINT

- 1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.