


REAR FLOOR PAN (ASSY)

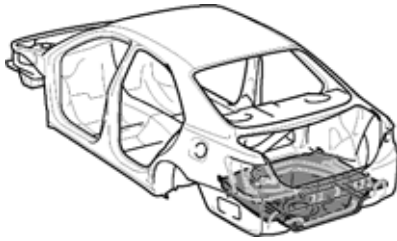

F25747A


With the rear floor no.3 crossmember removed.

Symbol meaning

△ △ △ : Remove Weld Points

F25747B

REMOVAL

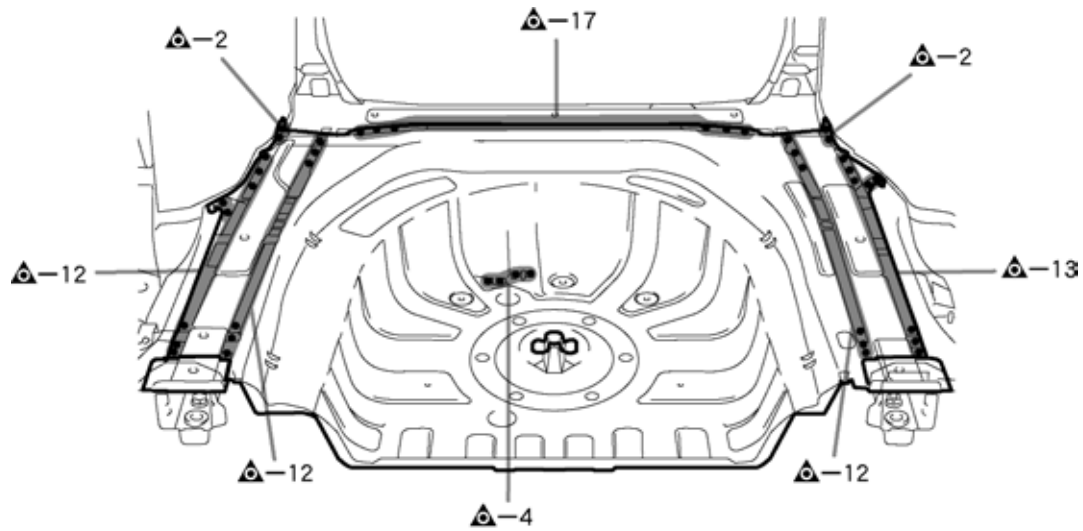

Rear Floor Pan Reinforcement



F25747

REMOVAL POINT


- 1 Remove the rear floor pan reinforcement at the same time.

Symbol meaning


▲ ▲ ▲ : Remove Weld Points

F25747B

[LH]

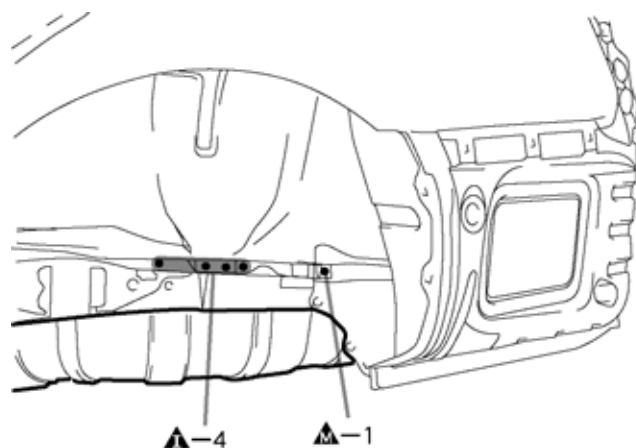

[RH]

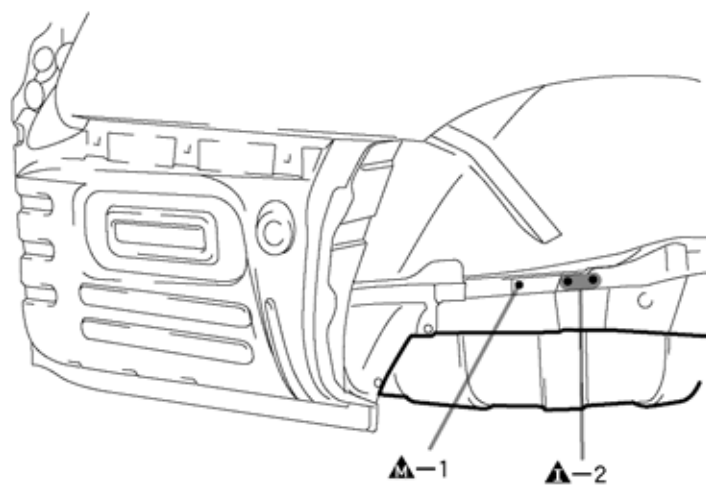


F285748

Symbol meaning

 **M** **T** : MIG Plug Weld
  : Tack Weld

F25749B

INSTALLATION

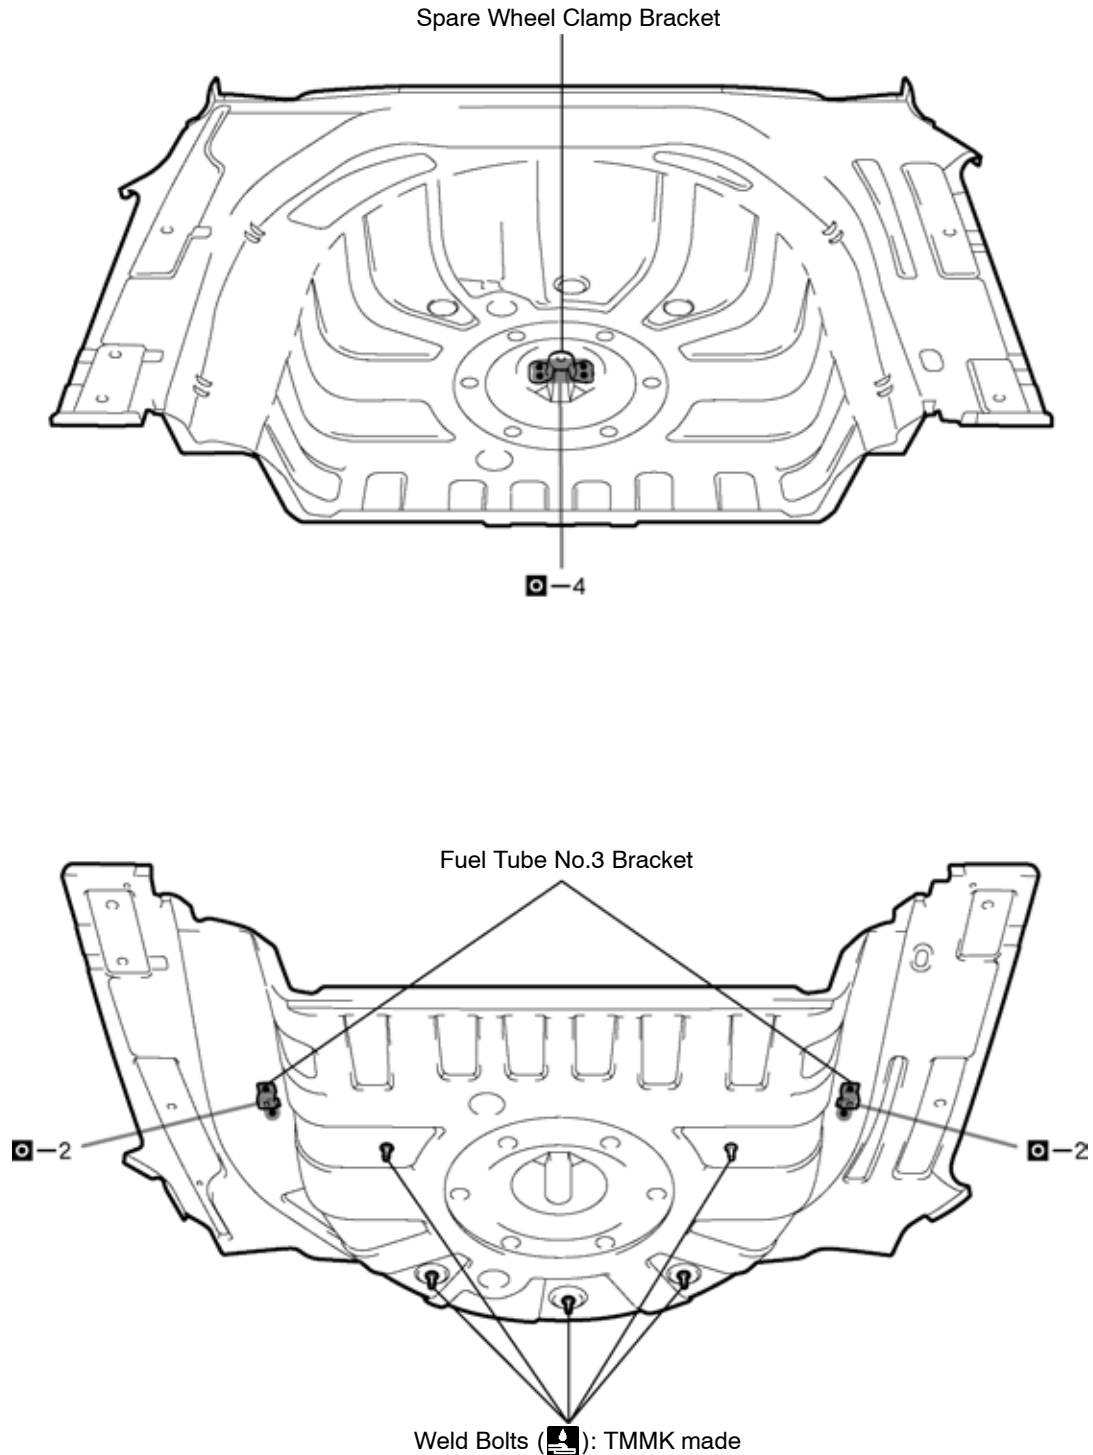

F25749

INSTALLATION POINT


- 1 Before temporarily installing the new parts, weld the spare wheel clamp bracket and fuel tube No.3 bracket with the standard number of welding points.

Symbol meaning


M **I** : MIG Plug Weld  : Tack Weld

F25749B



[LH]

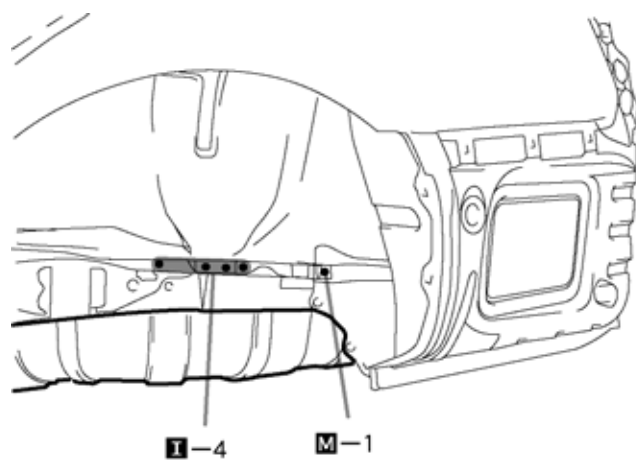

[RH]

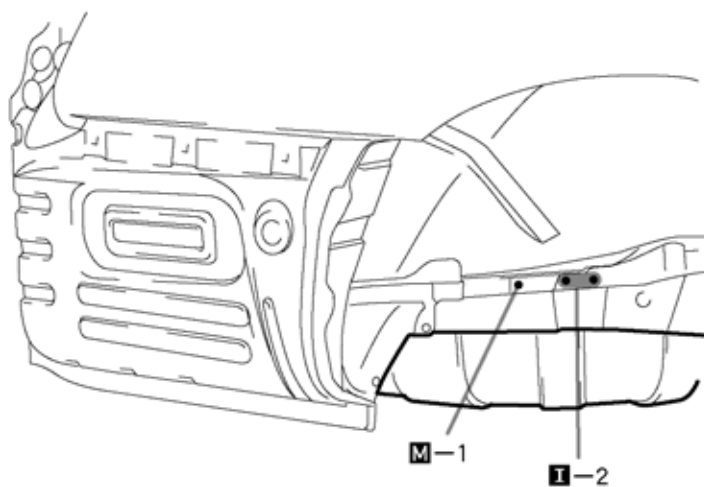

F25804

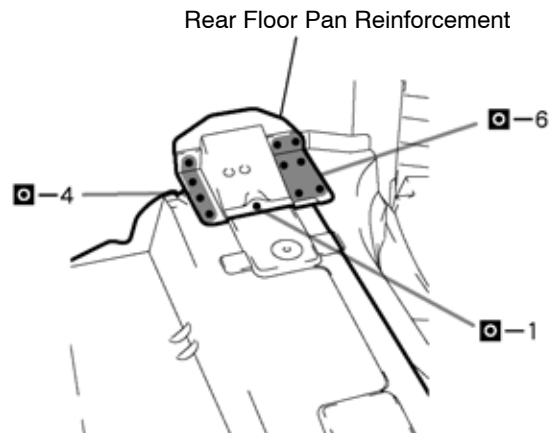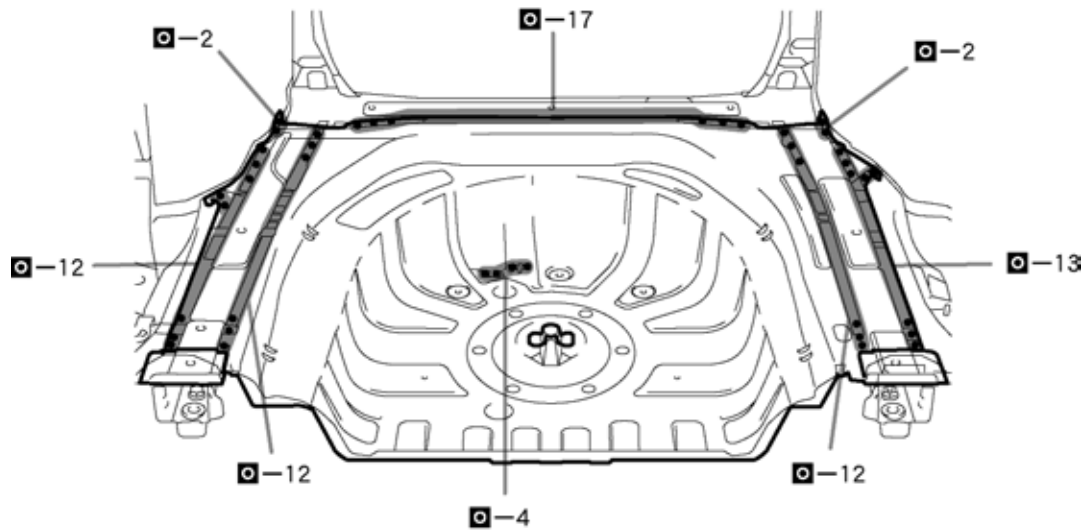

F25803

INSTALLATION POINT

- 1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.