


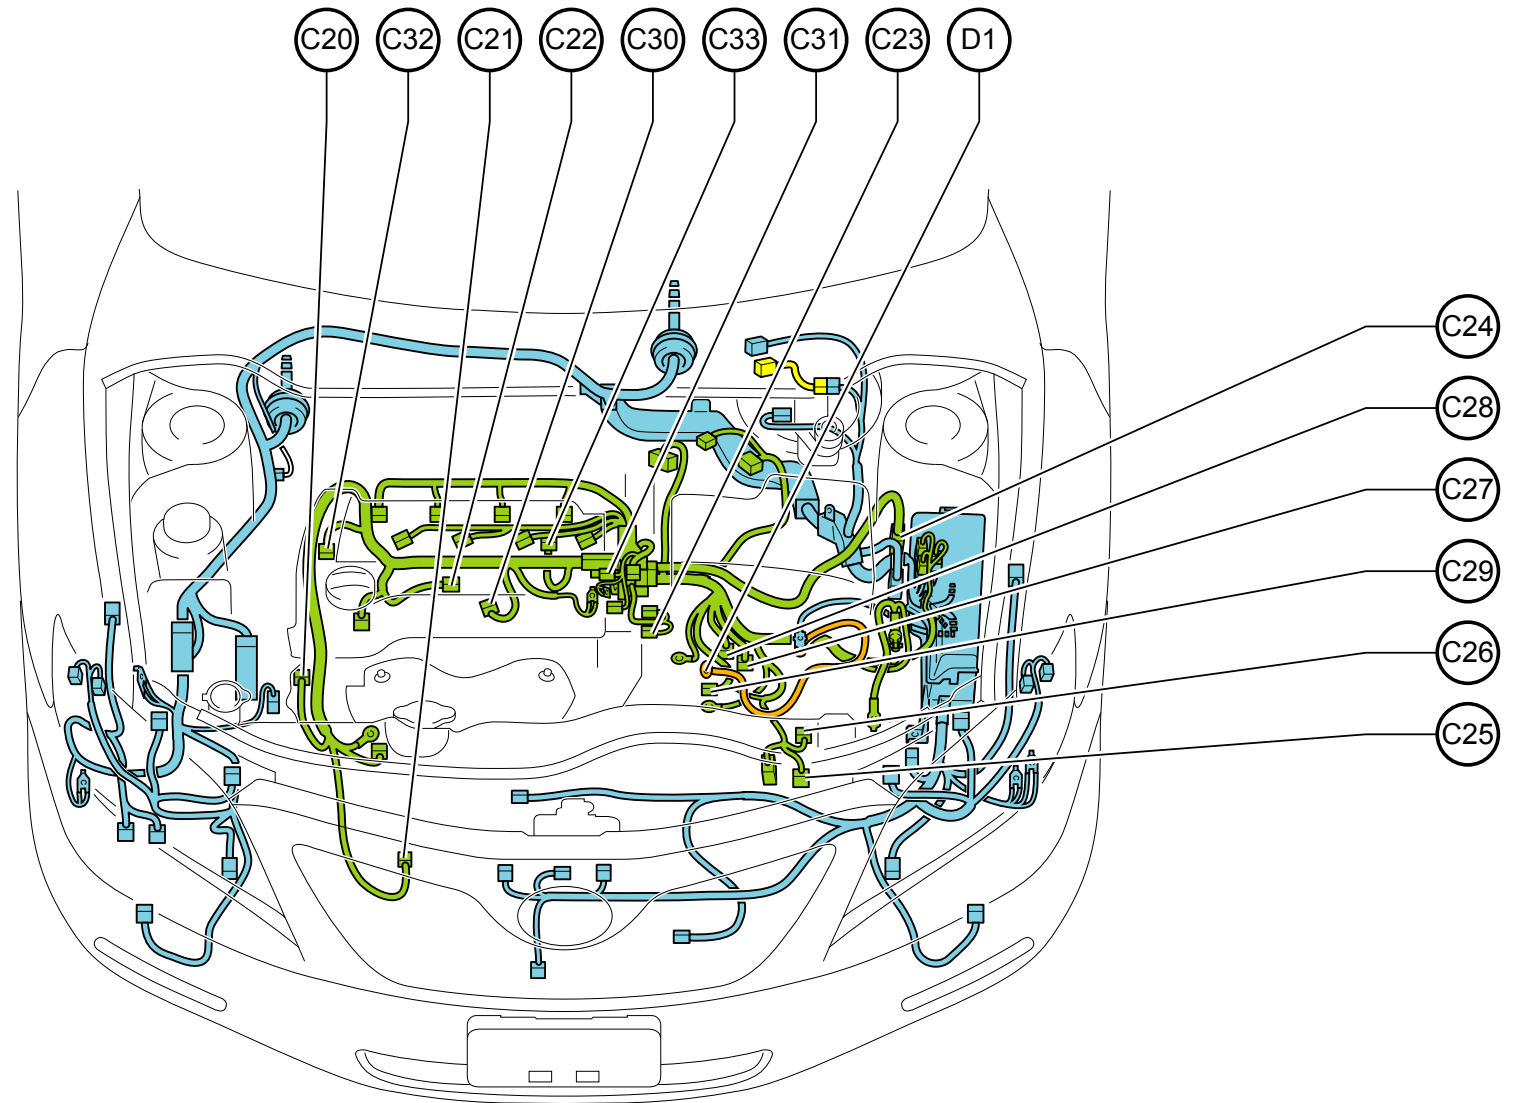

- C 20 Crankshaft Position Sensor
- C 21 A/C Compressor
- C 22 Heated Oxygen Sensor (Bank 1 Sensor 2)
- C 23 Engine Oil Pressure SW
- C 24 Engine Control Module
- C 25 Electronically Controlled Transmission Solenoid
- C 26 Transmission Revolution Sensor (Turbine)
- C 27 Transmission Revolution Sensor (Counter Gear)
- C 28 Back-Up Lamp SW
- C 29 Starter
- C 30 Knock Control Sensor (Bank 1)
- C 31 Camshaft Position Sensor
- C 32 Camshaft Timing Oil Control Valve
- C 33 Intake Air Control Valve

- D 1 Starter

Position of Parts in Engine Compartment <2AZ-FE>

